

## NOTICE

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 20 minutes.
- \* Tools Required for Assembly : Allen key (included) & Phillips head screwdriver (not included)

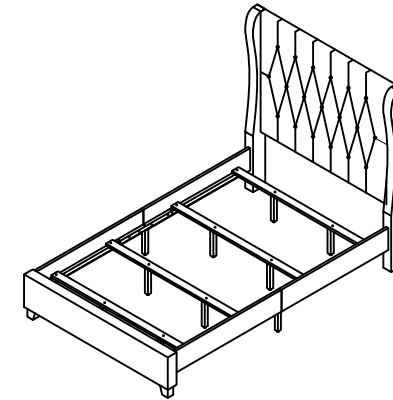
## CARE AND MAINTENANCE

**UPHOLSTERY CARE:** To prevent overall soiling, frequent vacuuming or light brushing is recommended. Cushions and pillows should be turned on a weekly basis. Down-filled cushions should be brushed rather than vacuumed. Spot clean, using a mild water-free solvent or dry cleaning product. Only a professional cleaner should undertake a complete overall cleaning. The use of steam or water-based cleaners may cause excessive shrinking or staining.

# SAFAVIEH FURNITURE

Model# FOX6213-F

Product Dimensions: 82.25"W\*59.5"D\*55.5"H



Weight capacity : 550lbs

**WARNING : DO NOT STAND ON THE BED**

**WARNING : DO NOT OVER TORQUE BOLTS**

## Part List and Hardware List

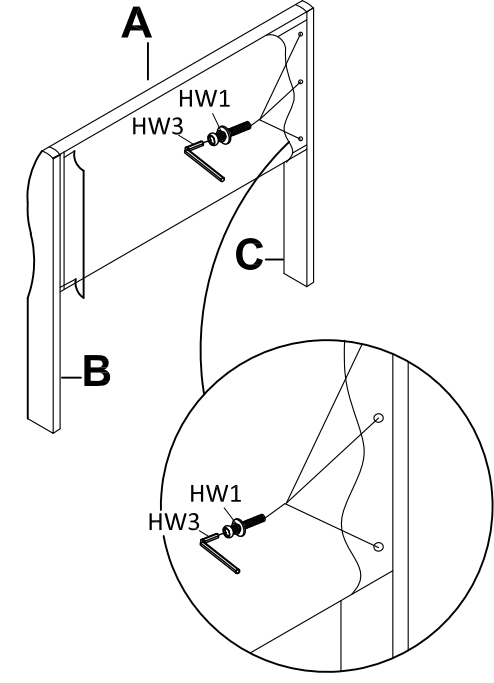
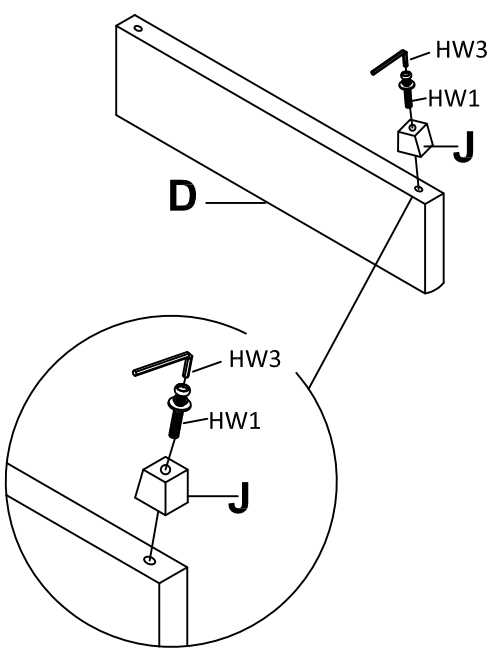
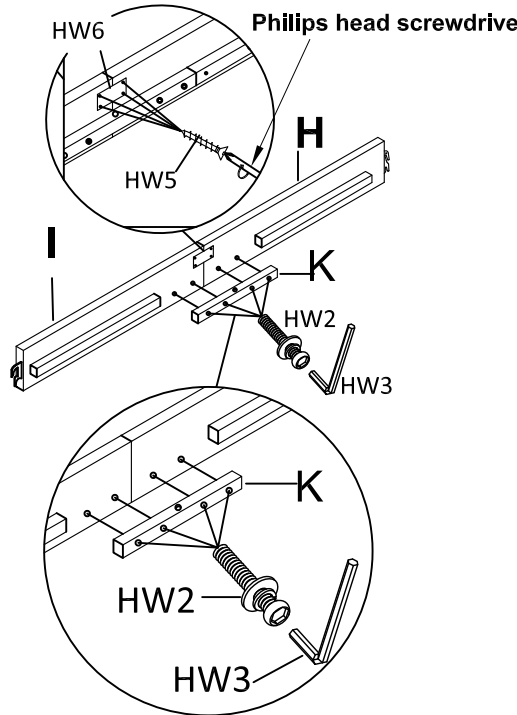
| PIECE | DESCRIPTION           | PICTURE                                                                             | QUANTITY |
|-------|-----------------------|-------------------------------------------------------------------------------------|----------|
| A     | HEADBOARD             |  | 1X       |
| B     | R-POST                |  | 1X       |
| C     | L-POST                |  | 1X       |
| D     | FOOTBOARD             |  | 1X       |
| E     | SUPPORT LEGS OF SLATS |  | 8X       |
| F     | SUPPORT LEGS OF RAILS |  | 2X       |

| PIECE | DESCRIPTION | PICTURE                                                                               | QUANTITY |
|-------|-------------|---------------------------------------------------------------------------------------|----------|
| G     | SLAT        |  | 4X       |
| H     | L-RAIL      |  | 2X       |
| I     | R-RAIL      |  | 2X       |
| J     | WOOD LEG    |  | 2X       |
| K     | WOOD BAR    |  | 2X       |

| PIECE | DESCRIPTION     | PICTURE                                                                                             | QUANTITY |
|-------|-----------------|-----------------------------------------------------------------------------------------------------|----------|
| HW1   | Hex Socket Bolt |  5/16"-18*2.5" | 8X       |
| HW2   | Hex Socket Bolt |  1/4"-20*2"    | 10X      |
| HW3   | Allen Key       |  4mm           | 1X       |
| HW4   | Screw           |  Ø8*30mm       | 8X       |
| HW5   | Screw           |  Ø8*15mm       | 8X       |
| HW6   | Metal Plate     |  50*33*1mm     | 2X       |




## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 20 minutes.
- \* Tools Required for Assembly : Allen key (included) & Phillips head screwdriver (not included)
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

|                                                                                                                                                                                 |                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                       |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div data-bbox="114 367 781 1145"><div data-bbox="114 367 181 430">1</div></div>              | <div data-bbox="781 367 1449 1145"><div data-bbox="781 367 848 430">2</div></div>   | <div data-bbox="1449 367 2116 1145"><div data-bbox="1449 367 1516 430">3</div></div>                                                                                                                                              |
| <div data-bbox="114 1145 781 1520"><p><b>Step 1</b><br/>Attach L/R posts "B" &amp; "C" to headboard "A" by using Allen key (HW3) to lock with Hex socket bolts (HW1).</p></div> | <div data-bbox="781 1145 1449 1520"><p><b>Step 2</b><br/>Attach wood legs "J" with footboard "D". Using Allen key (HW3) to lock with Hex socket bolts (HW1).</p></div> | <div data-bbox="1449 1145 2116 1520"><p><b>Step 3</b><br/>Attach wood bar "K" to the 2 rails "H" &amp; "I". Using Allen key (HW3) to lock with Hex socket bolts (HW2). Lock the both side rails ( H &amp; I) (front &amp; rear of rail) tight and alignment with metal plate (HW6) by using 8x screws (HW5)</p></div> |

## PREPARATION

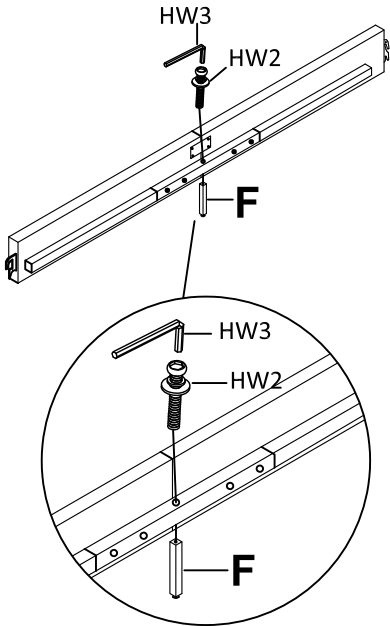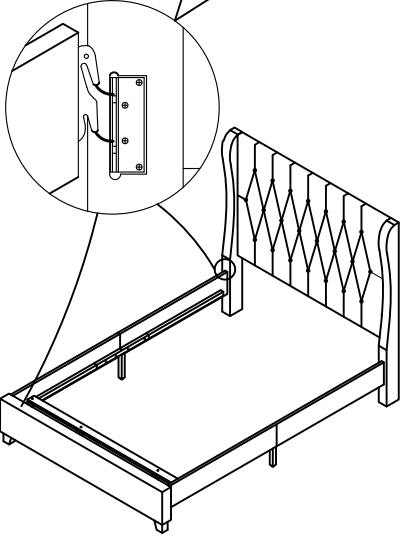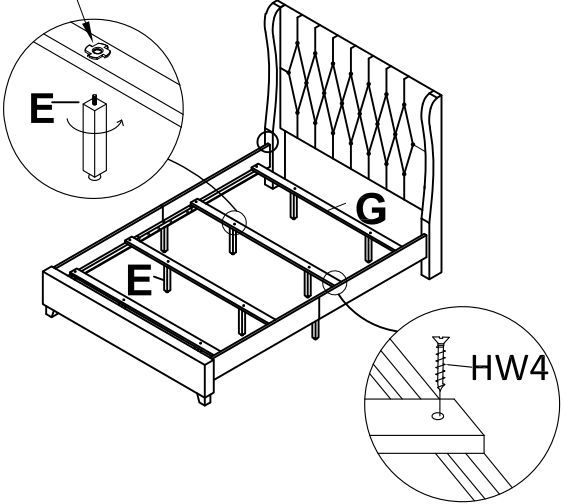- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 20 minutes.
- \* Tools Required for Assembly : Allen key (included) & Phillips head screwdriver (not included)
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

|                                                                                                                              |                                                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                |
|------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div data-bbox="114 368 181 429">4</div>   | <div data-bbox="781 368 848 429">5</div> <div data-bbox="943 416 1335 512">Important:<br/>For correct assembly please ensure<br/>the double hooks are latched properly.</div>  | <div data-bbox="1449 368 1516 429">6</div> <div data-bbox="1563 405 1991 528">Important:<br/>Make sure the SCREW NUT on wood<br/>slat (G) is FACING UP when doing<br/>assembly with support leg (E)</div>  |
| <p><b>Step 4</b><br/>Attach support legs "F" to wood bar "K". Using Allen key (HW3) to lock with Hex socket bolts (HW2).</p> | <p><b>Step 5</b><br/>Attach 2 rails to the L/R posts &amp; the footboard assembled with legs.</p>                                                                                                                                                                 | <p><b>Step 6</b><br/>Attach 2 support legs (E) to each slat (G). Lock the slats tight with wood bar (both inside of rails) by using 8x screws (HW4). Assembly is now complete.</p>                                                                                                             |

## NOTICE

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 20 minutes.
- \* Tools Required for Assembly : Allen key (included) & Phillips head screwdriver (not included)

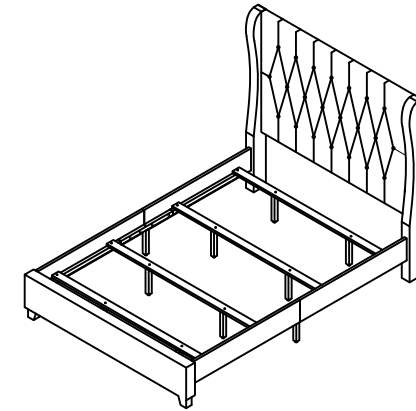
## CARE AND MAINTENANCE

**UPHOLSTERY CARE:** To prevent overall soiling, frequent vacuuming or light brushing is recommended. Cushions and pillows should be turned on a weekly basis. Down-filled cushions should be brushed rather than vacuumed. Spot clean, using a mild water-free solvent or dry cleaning product. Only a professional cleaner should undertake a complete overall cleaning. The use of steam or water-based cleaners may cause excessive shrinking or staining.

# SAFAVIEH FURNITURE

Model# FOX6213-Q

Product Dimensions: 88.25"W\*65.5"D\*55.5"H



Weight capacity : 550lbs

**WARNING : DO NOT STAND ON THE BED**

**WARNING : DO NOT OVER TORQUE BOLTS**

## Part List and Hardware List

| PIECE | DESCRIPTION           | PICTURE                                                                             | QUANTITY |
|-------|-----------------------|-------------------------------------------------------------------------------------|----------|
| A     | HEADBOARD             |  | 1X       |
| B     | R-POST                |  | 1X       |
| C     | L-POST                |  | 1X       |
| D     | FOOTBOARD             |  | 1X       |
| E     | SUPPORT LEGS OF SLATS |  | 8X       |
| F     | SUPPORT LEGS OF RAILS |  | 2X       |

| PIECE | DESCRIPTION | PICTURE                                                                               | QUANTITY |
|-------|-------------|---------------------------------------------------------------------------------------|----------|
| G     | SLAT        |  | 4X       |
| H     | L-RAIL      |  | 2X       |
| I     | R-RAIL      |  | 2X       |
| J     | WOOD LEG    |  | 2X       |
| K     | WOOD BAR    |  | 2X       |

| PIECE | DESCRIPTION     | PICTURE                                                                                             | QUANTITY |
|-------|-----------------|-----------------------------------------------------------------------------------------------------|----------|
| HW1   | Hex Socket Bolt |  5/16"-18*2.5" | 8X       |
| HW2   | Hex Socket Bolt |  1/4"-20*2"    | 10X      |
| HW3   | Allen Key       |  4mm           | 1X       |
| HW4   | Screw           |  Ø8*30mm       | 8X       |
| HW5   | Screw           |  Ø8*15mm       | 8X       |
| HW6   | Metal Plate     |  50*33*1mm     | 2X       |

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 20 minutes.
- \* Tools Required for Assembly : Allen key (included) & Phillips head screwdriver (not included)
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)



## Step 2

### Step 3

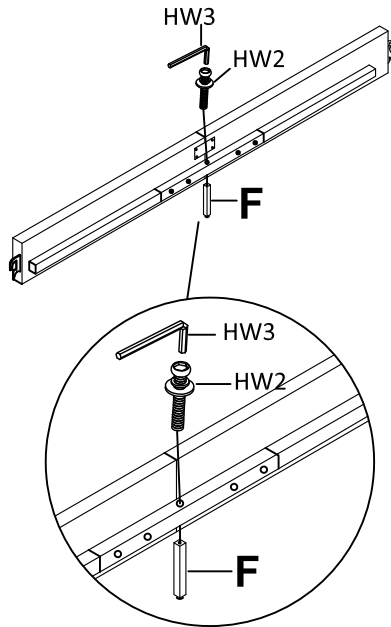
Attach wood bar "K" to the 2 rails "H" & "I". Using Allen key (HW3) to lock with Hex socket bolts (HW2).

Lock the both side rails ( H & I ) (front & rear of rail) tight and alignment with metal plate (HW6) by using 8x screws (HW5)

## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 20 minutes.
- \* Tools Required for Assembly : Allen key (included) & Phillips head screwdriver (not included)
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

4




### Step 4

Attach support legs "F" to wood bar "K". Using Allen key (HW3) to lock with Hex socket bolts (HW2).

5

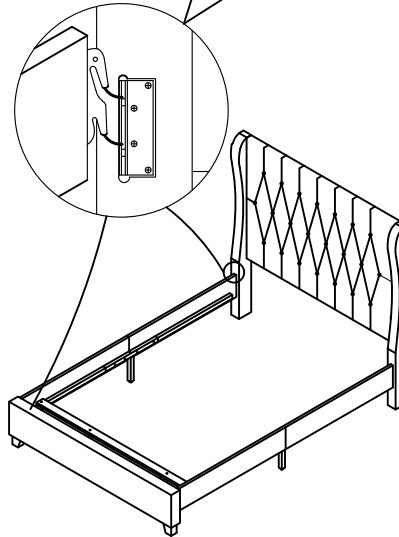Important:  
For correct assembly please ensure  
the double hooks are latched properly.




### Step 5

Attach 2 rails to the L/R posts & the footboard assembled with legs.

6

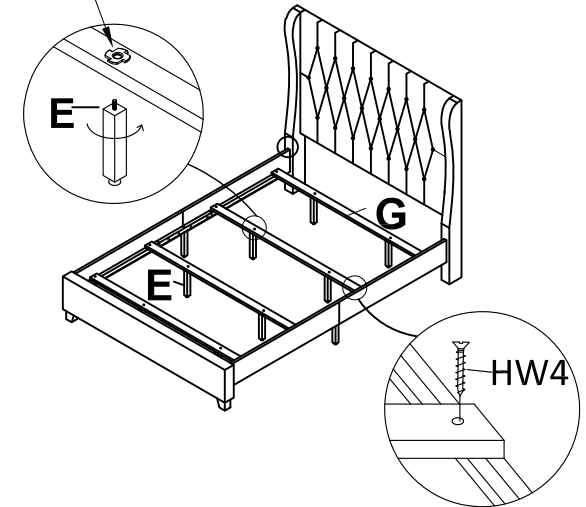Important:  
Make sure the SCREW NUT on wood  
slat (G) is FACING UP when doing  
assembly with support leg (E)



### Step 6

Attach 2 support legs (E) to each slat (G). Lock the slats tight with wood bar (both inside of rails) by using 8x screws (HW4). Assembly is now complete.