

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
 - * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
 - * This item may require periodic tightening.
 - * If you are having difficulty, our friendly Customer Care team is always here to help.
- Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE


Rattan Care : Do not expose your furniture to any liquids. All liquids should be wiped up immediately with a soft, slightly damp cloth In the direction of the rattan. Do not expose your furniture to strong or direct sunlight, heat outlets, open windows and dampness. Excessive exposure to sunlight can cause fading of your furniture finish. Extreme temperatures and humidity changes can cause cracking and splitting.

Wood Care : Always use felt pads under all articles to prevent discoloration or softening or the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvent and abrasives. Cleaning Should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommended applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spill. how often you apply the wax depend on how much wear the furniture receives.



HBD6502A-T

39.37" x 1.18" x 43.7"



WARNING









Weight Capacity - 220 LBS

Warning : Do not stand on Headboard

Warning : Do not over torque bolts.

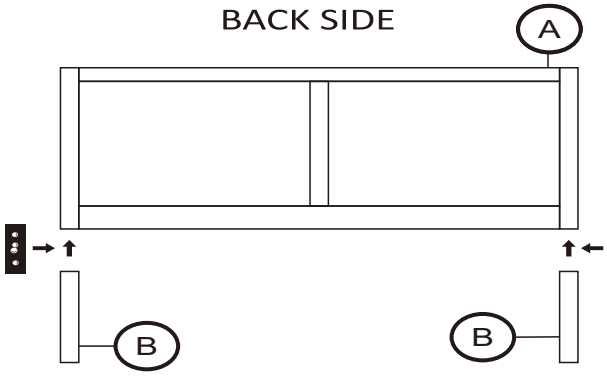
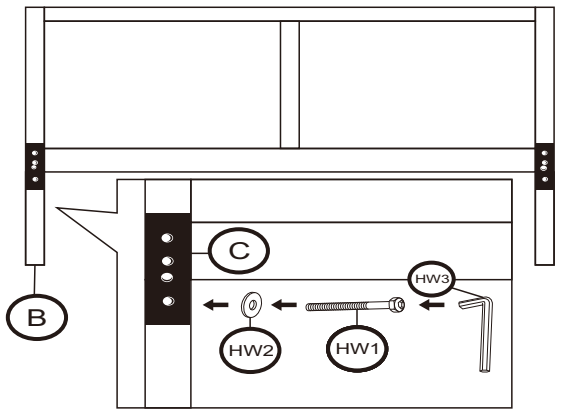
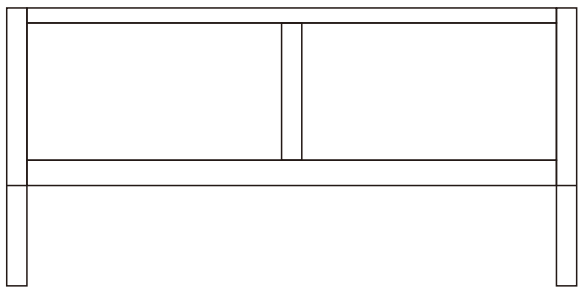
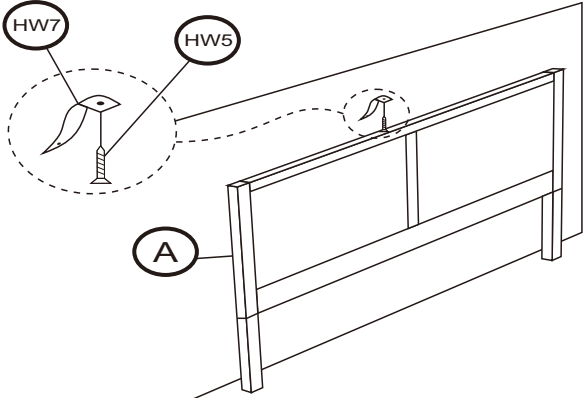
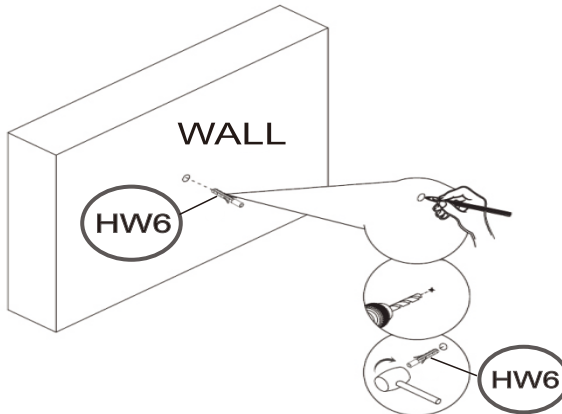
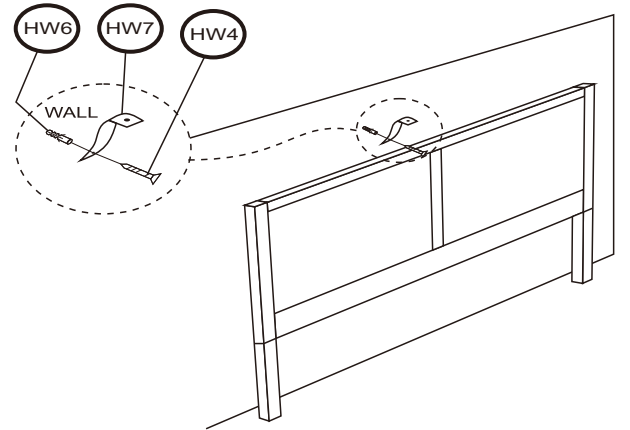
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QTY
A	Top		1
B	Legs		2
C	Metal Connector		2
HW1	Bolt		8
HW2	Ring		8

PIECE	DESCRIPTION	PICTURE	QTY
HW3	Allen Key		1
HW4	Screw		1
HW5	Screw		1
HW6	Anchor Plug		1
HW7	Strap		1

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

 BACK SIDE		 FRONT SIDE
STEP 1 : CONNECT THE LEGS AND THE TOP OF THE HEADBOARD USING THE METAL CONNECTOR ACCORDING TO THE ARROW INSTRUCTIONS IN THE PICTURE	STEP 2 : PUT RING & BOLT INTO THE METAL CONNECTOR THEN TIGHTEN IT USING ALLEN KEY.	STEP 3 : YOUR HEADBOARD IS READY.
	 WALL	
STEP 4 : REMOVE TOP DRAWER FROM ASSEMBLED UNIT. THEN STRAP (HW7) WITH SHORT SCREW (HW5) TO THE UNDERSIDE OF TOP PANEL (A) USING PHILLIPS HEAD SCREW DRIVER, NOT INCLUDED. TIGHTEN COMPLETELY.	STEP 5 : DETERMINE WHERE THE STORAGE UNIT IS TO BE PLACED, THEN MARK THE POSITION ON THE WALL SO THE WALL ANCHOR (HW6) WILL ALIGN WITH THE STRAP (HW7) ON THE BACK OF THE STORAGE UNIT. THE DRILL HOLE IN THE WALL. PRESS WALL ANCHOR (HW6) INTO THE HOLE.	STEP 6 : CONNECT STRAP (HW7) WITH LONG SCREW (HW4) TO WALL ANCHOR (HW6) USING PHILLIPS HEAD SCREW DRIVER, NOT INCLUDED. TIGHTEN COMPLETELY. THEN REPLACE TOP DRAWER INTO ASSEMBLED UNIT.