

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 50 minutes.
- * Tools Required for Assembly: Allen Key, Screwdriver, Wooden hammer.


CARE AND MAINTENANCE

Dust regularly with a soft, dry cloth. Never use oiled or treated cloths on lacquered finishes. Some finishes can be wiped with a damp (not wet) cloth, followed at once by rubbing with a dry cloth to remove fingerprints and smudges. For persistent spots, gently clean with a soft cloth and a solution of water and mild soap, make sure to wipe dry. Use adhesive felt pads, coasters and placemats to protect your furniture.



Model# MED2201

Product Dimensions: 55.1"W×15.7"D×29.5"H

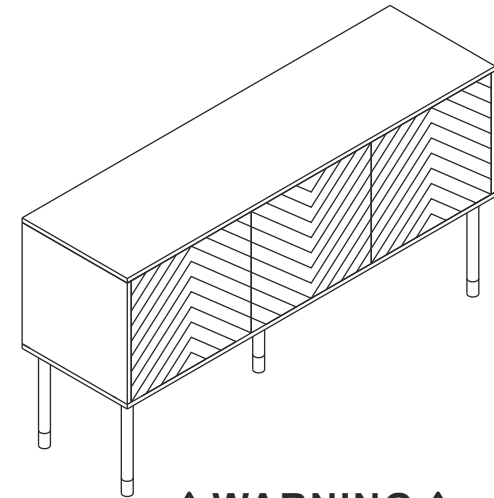


⚠ WARNING ⚠







Weight Capacity: 50 lbs.

Warning: Do not stand on TV stand.

Warning: Do not over torque bolts.

Part List and Hardware List

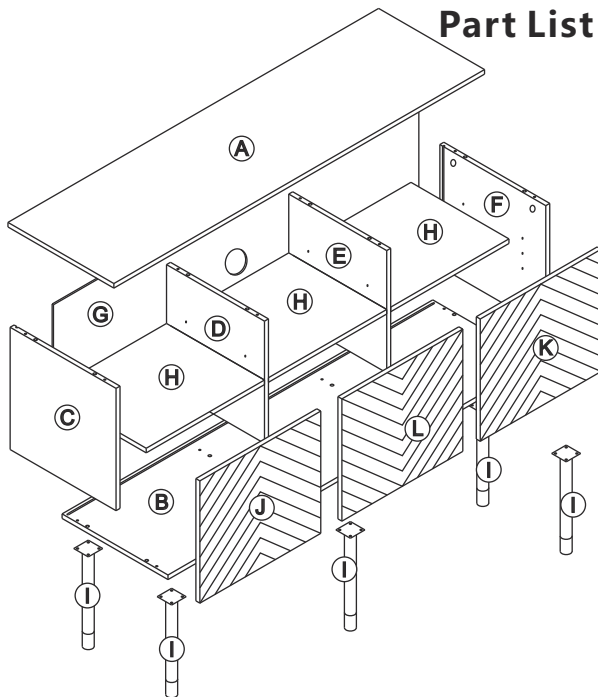

HW1x8  6x45mm	HW2x8  5x14mm	HW3x16  3.5x18mm	HW4x3  5x14mm	HW5x6  3.5x12mm	HW6x8  5x45mm
HW7x20  5x14mm	HW8x4  4x12mm	HW9x4  3.5x18mm	HW10x12  4x50mm	HW11x2  HW17x4	HW12x4  HW18x2
HW13x36  5x14mm	HW14x2  4x12mm	HW15x2  4x50mm	HW16x2  HW17x4	HW17x4  HW18x2	HW18x2  HW18x2

Part List & HW List


Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board Left	1
D	Middle Board Left	1
E	Middle Board Right	1
F	Side Board Right	1
G	Back Board	1
H	Shelf Board	3
I	Leg	5
J	Left Door	1
K	Right Door	1
L	Middle Door	1

Piece	Description	Qty
HW1	Cambolt M6 x 45 mm	8
HW2	Camlock	8
HW3	Dowel	16
HW4	Spring Set	3
HW5	Screw M3.5 x 12 mm	6
HW6	Screw M5 x 45 mm	8
HW7	Screw M5 x 14 mm	20
HW8	Wedge	4
HW9	Screw M3.5 x 18 mm	4
HW10	Shelf Holder	12
HW11	Hinge For Middle Door	2
HW12	Hinge	4
HW13	Screw M5 x 14 mm	36
HW14	Screw M4 x 12 mm	2
HW15	Screw M4 x 50 mm	2
HW16	Cloth Strap	2
HW17	Washer	4
HW18	Plastic Screw Anchor	2


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 50 minutes.
- * Tools Required for Assembly: Allen Key, Screwdriver, Wooden hammer.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

- 1** Install HW⑧ on part ①, Use HW⑤ to install HW④ on part ①.

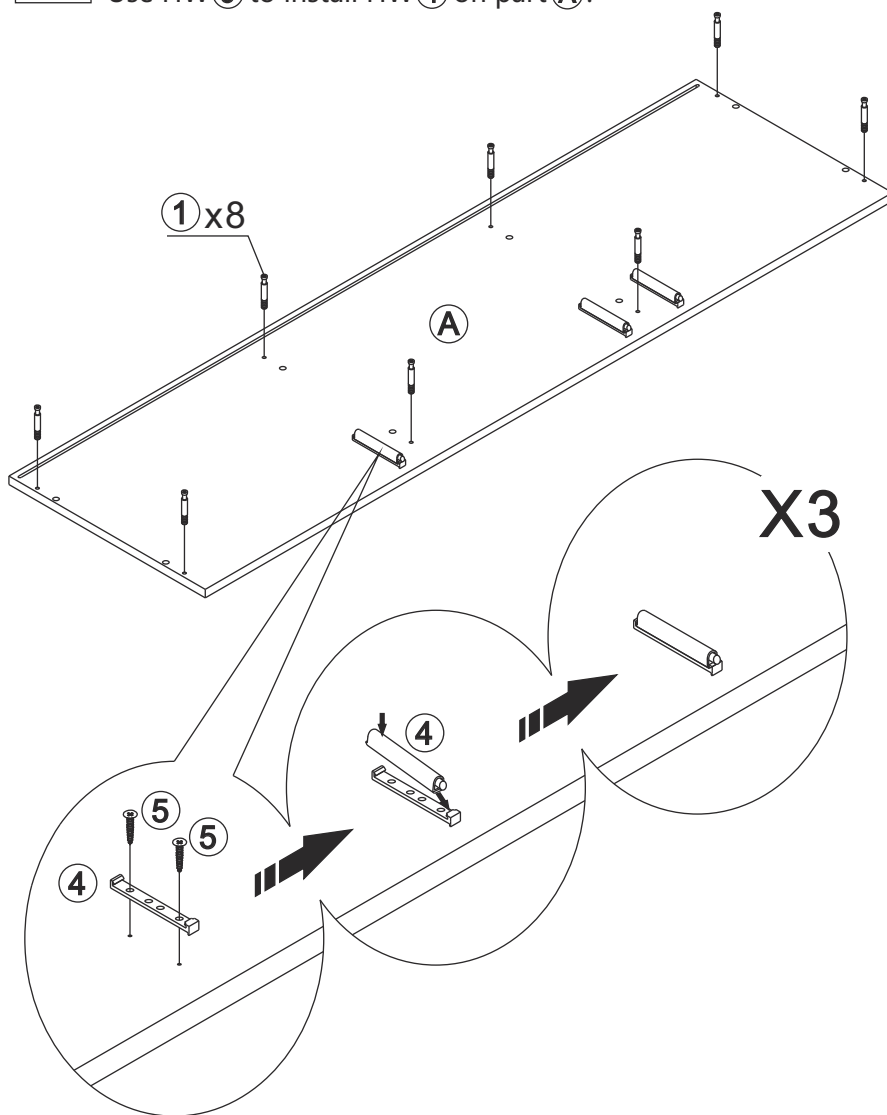


- 2** Insert HW ③ in part ①, insert HW ② in part ③, ④, ⑤, ⑥, Attach part ③, ④, ⑤, ⑥ to ①, fasten HW ② to install them together.

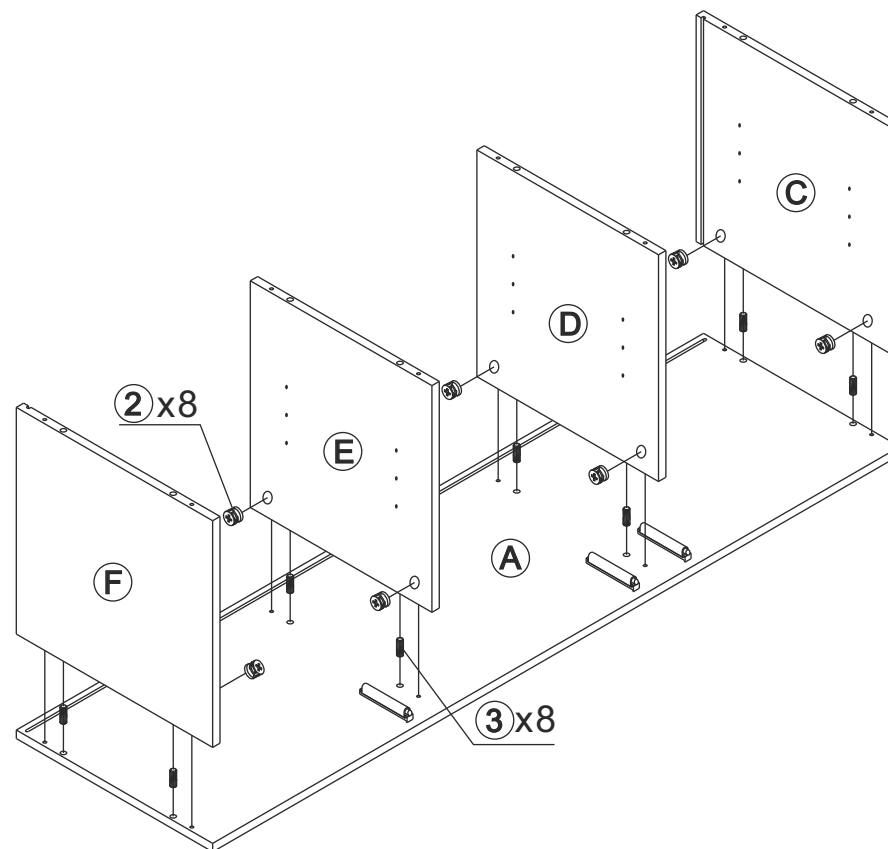


3


Insert part **G** in **A**, **C**, **F** frame.

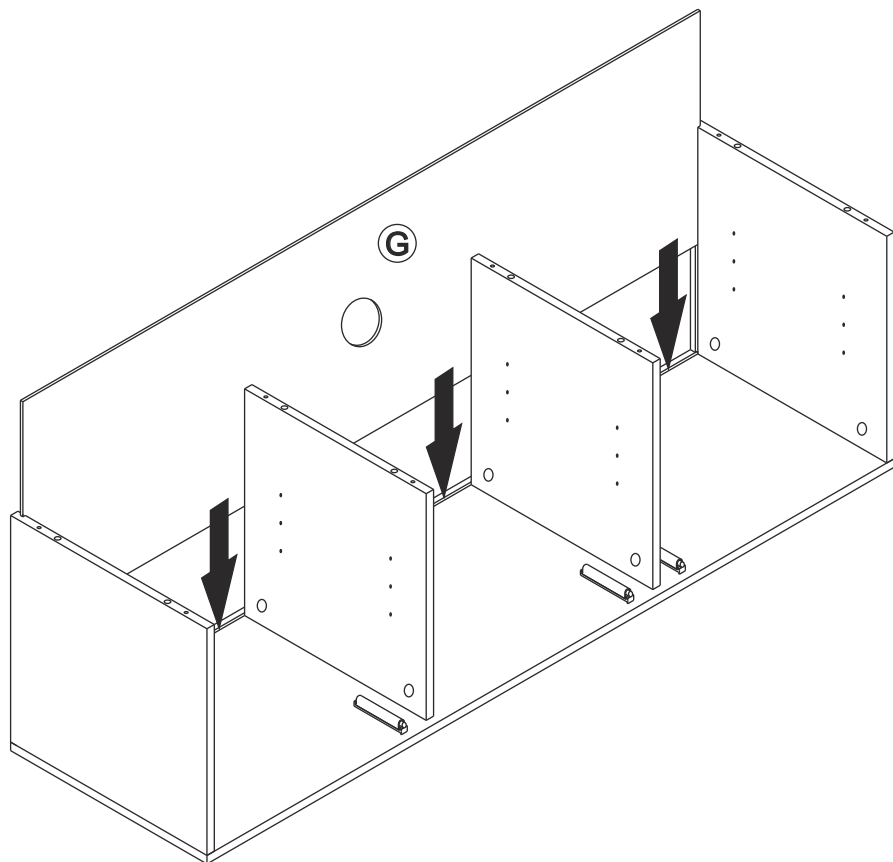**4**


Insert HW **3** in part **C**, **D**, **E**, **F**,
Use HW **6** to install part **B**, **C**, **D**, **E** and **F** together.

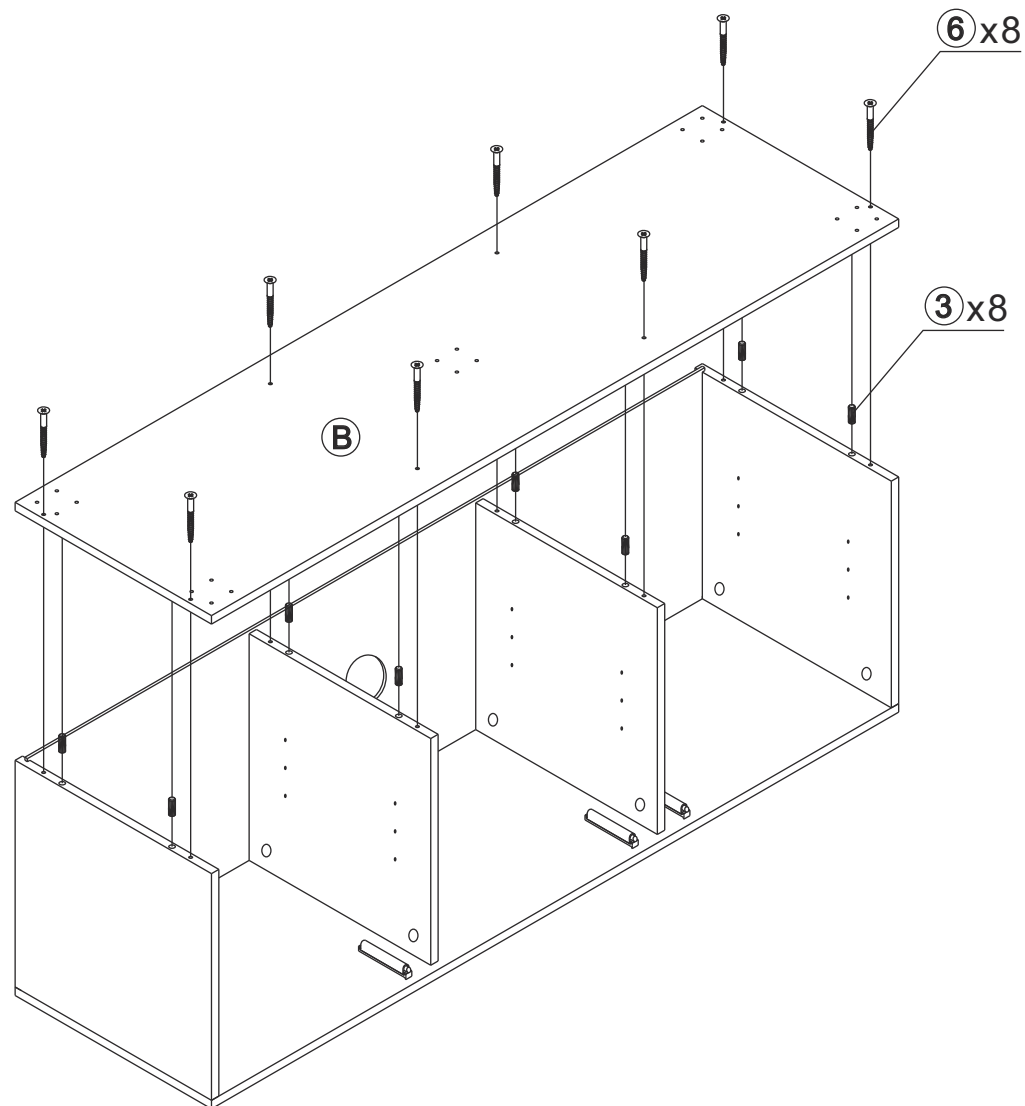


5 Use HW ⑦ to install part ① on ②.

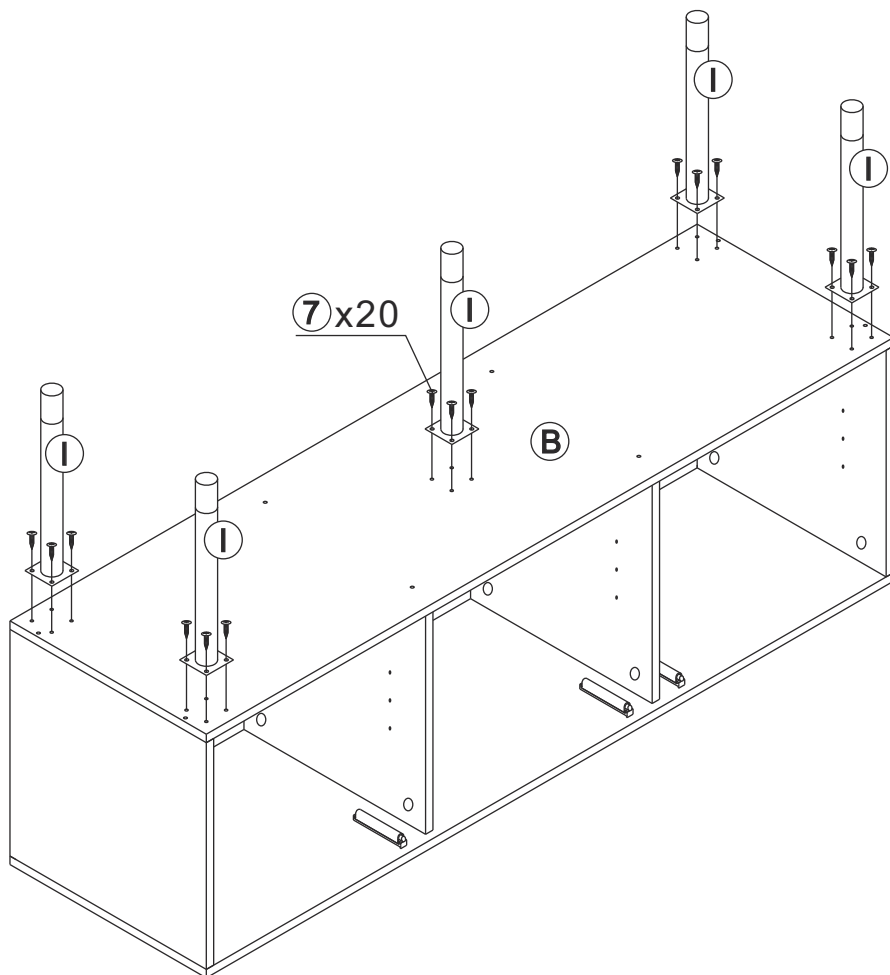


6 Insert HW ⑧ in the gap behind part ③, use HW ⑨ to install HW ⑧, Use HW ⑭, ⑰ to install one end of HW ⑯ on part ④.

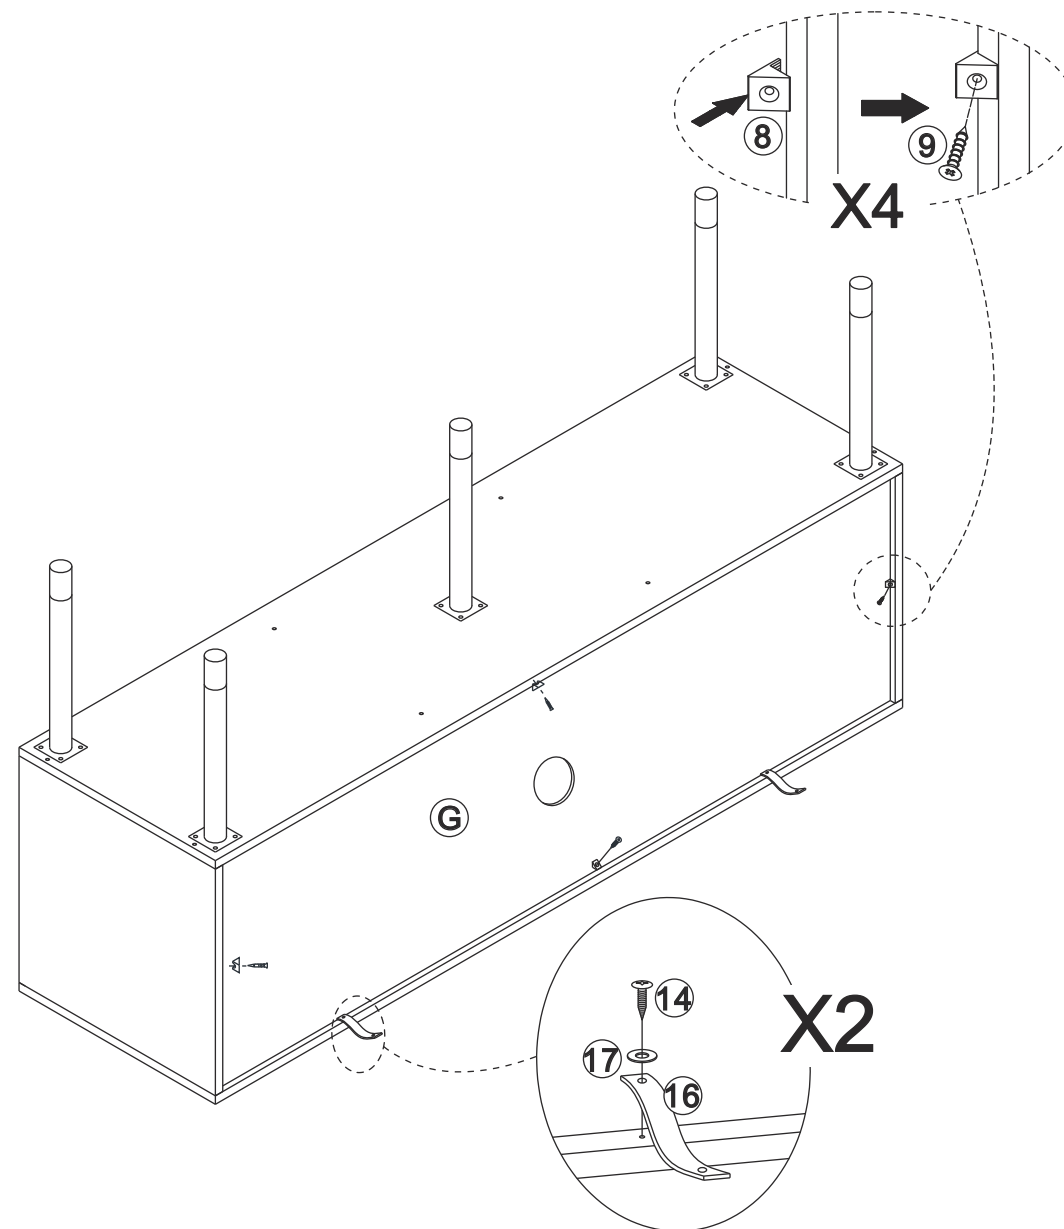

- 7** Insert HW⑩ on part ③,④,⑤,⑥,
Insert part ⑧ in cabinet.


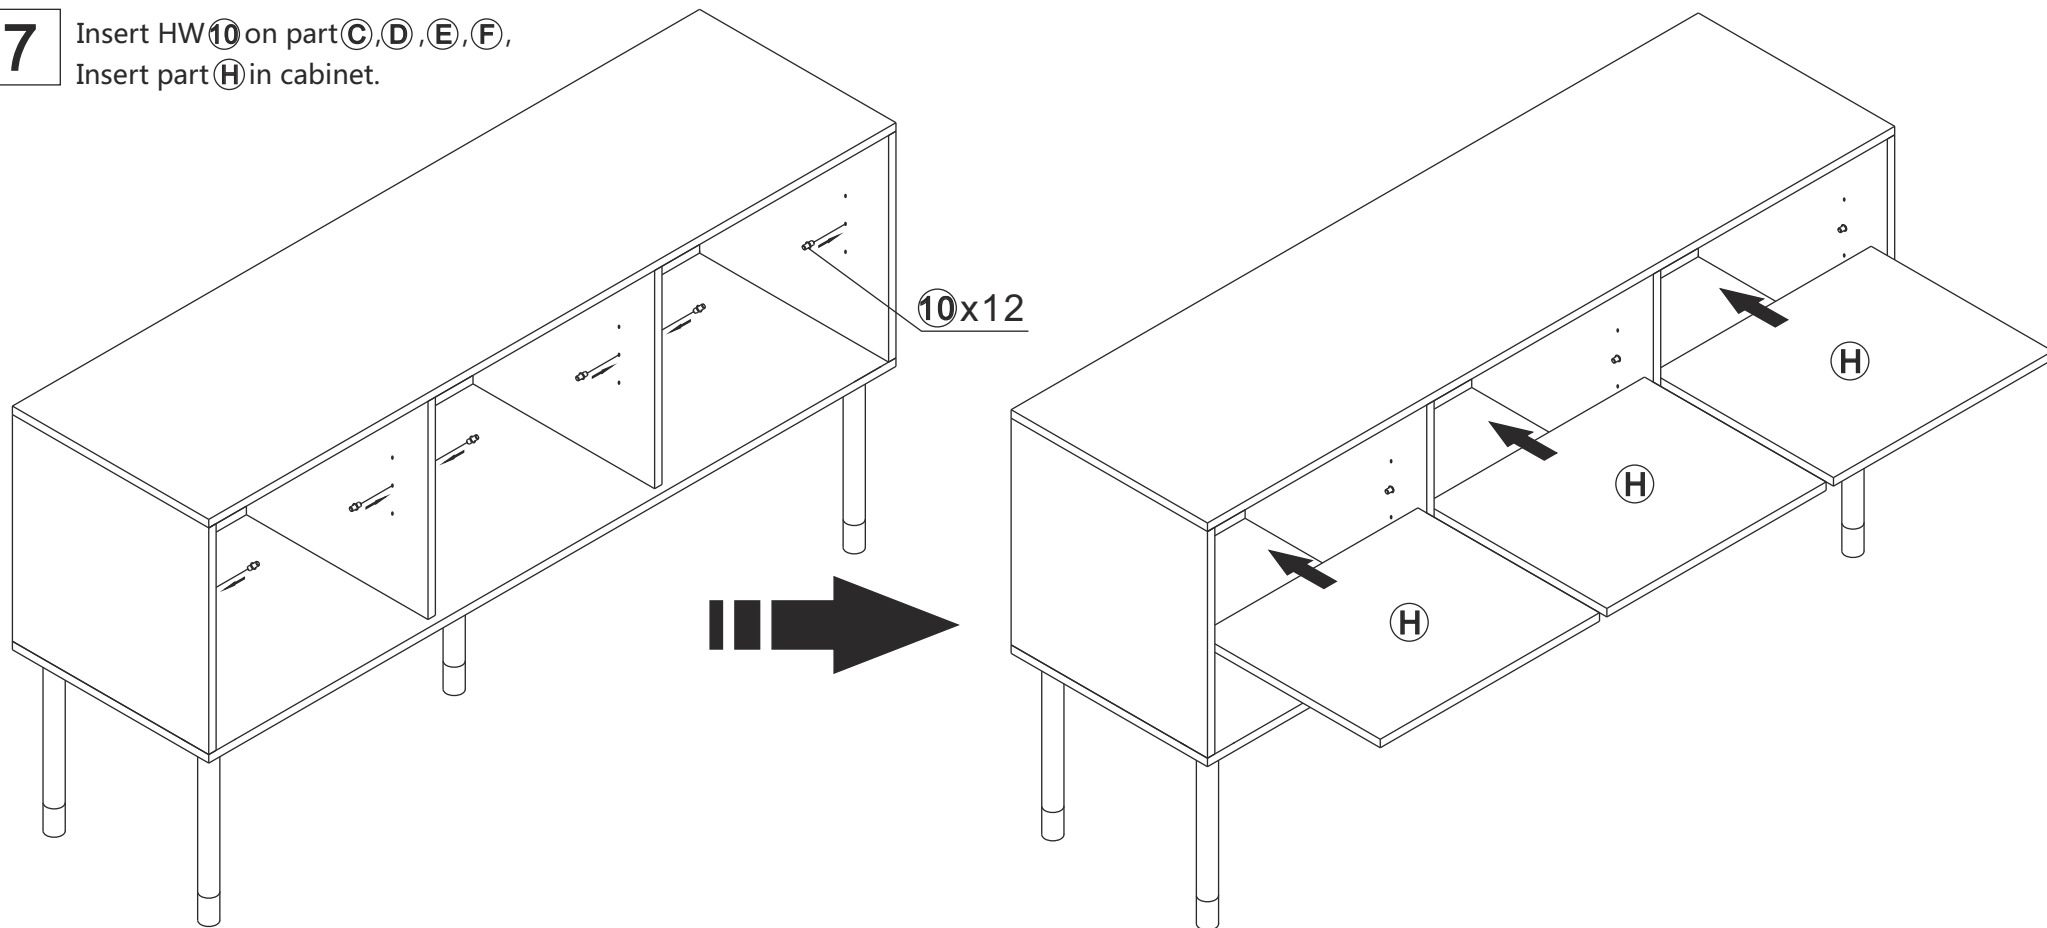


- 8** Use HW⑬ to install HW⑪ on part ①,
Use HW⑬ to install HW⑫ on part ②,③.


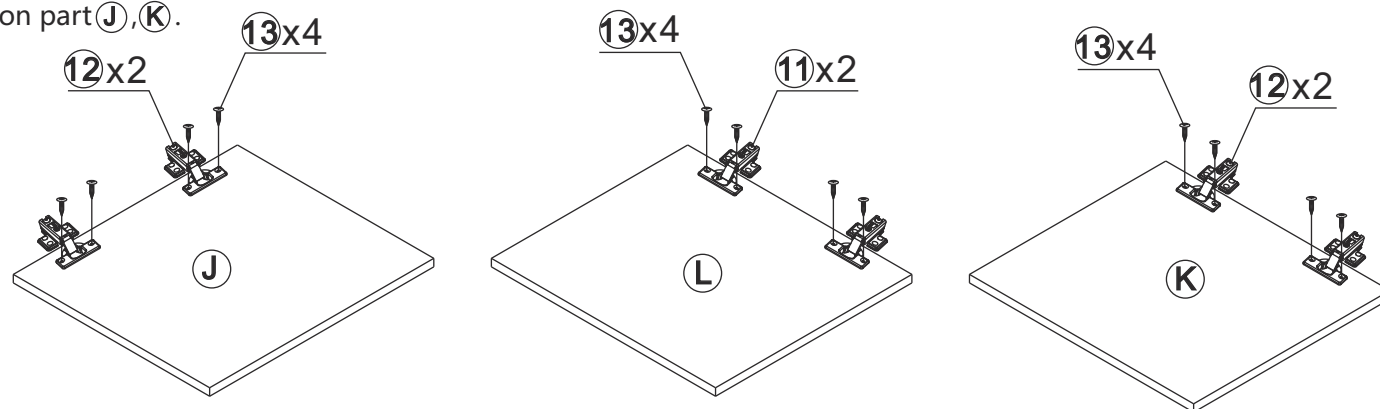


9

Use HW13 to install HW12 on part C, F,
Use HW13 to install HW11 on part E.

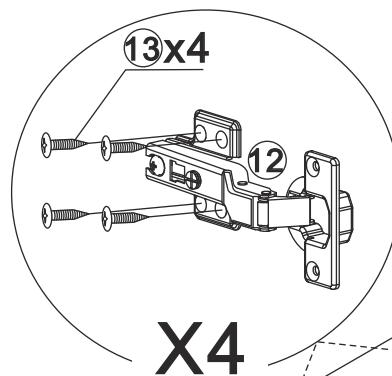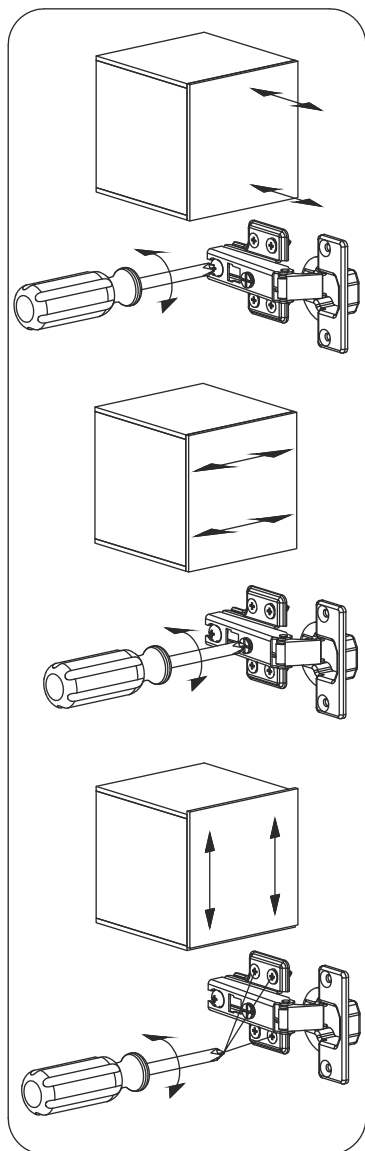

Please adjust the tube of "part 4" by loosening in a clockwise or counter clockwise manner so that it turns "smoothly".

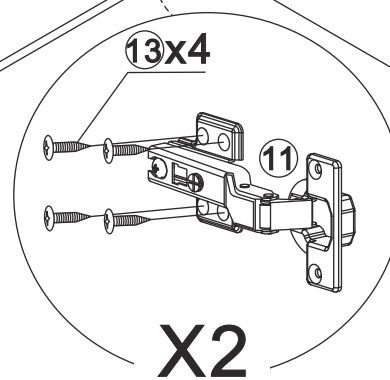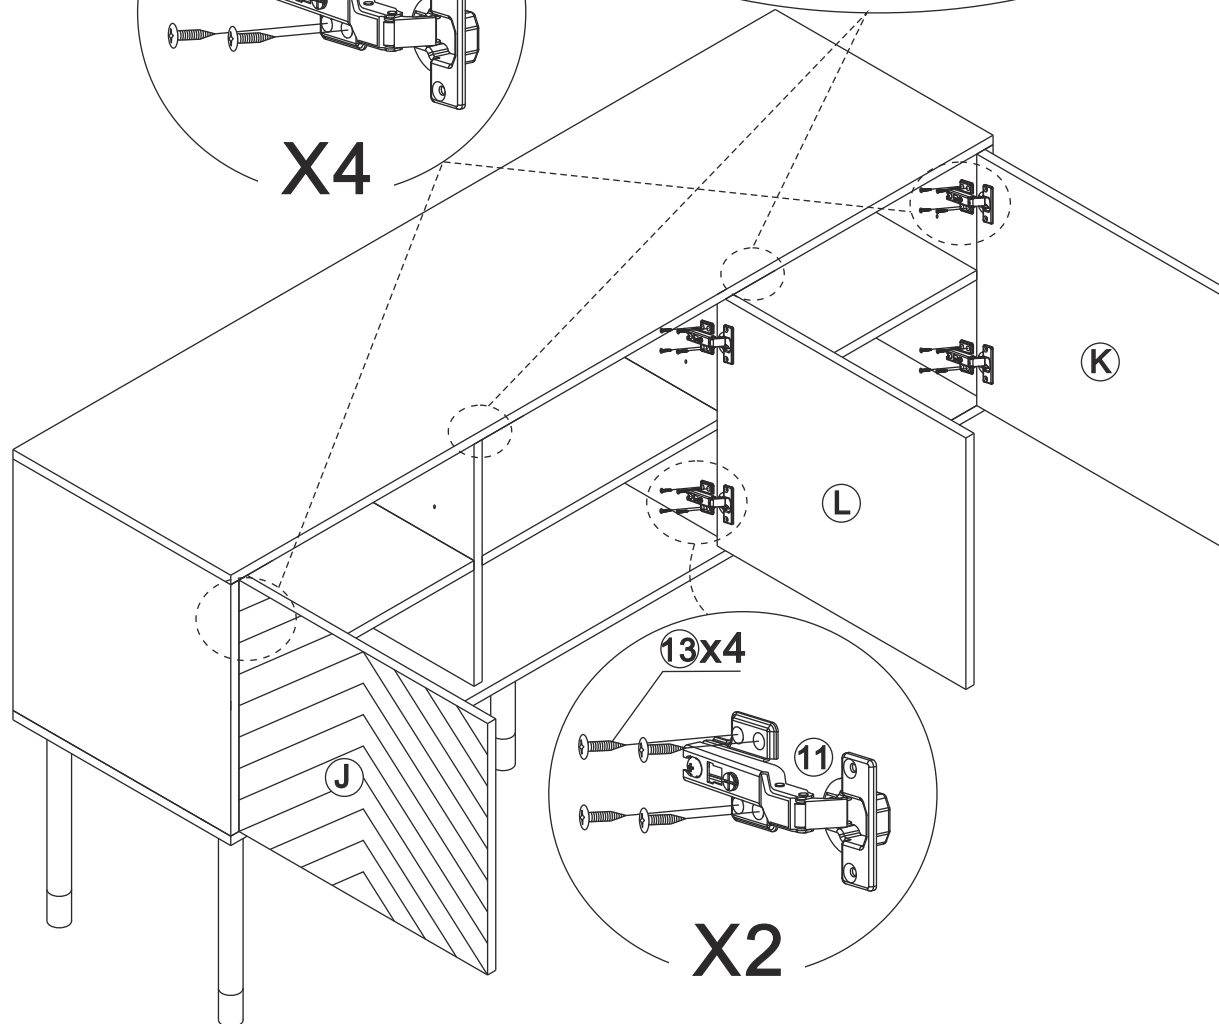

10

Drill a hole on the wall, insert HW⑮ in the hole,
Use HW⑮,⑰ to install another end of HW⑯ on wall.

