

CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
The use of steam or water-based cleaners may cause excessive shrinking or staining.

NOTICE


- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	TOP PANEL		1X
B	LEFT PANEL		1X
C	RIGHT PANEL		1X
D	LEFT DIVIDER		1X
E	RIGHT DIVIDER		1X
F	LARGE ADJUSTABLE SHELF		1X
G	SMALL ADJUSTABLE SHELF		1X
H	RAIL		1X
I	BOTTOM PANEL		1X
J	BACK PANEL ASSEMBLY		1X
K	LEG FRAME		4X
L	DOOR		1X
M	DRAWER FRONT		2X
N	DRAWER LEFT		2X
O	DRAWER RIGHT		2X
P	DRAWER BACK		2X
Q	DRAWER BASE		2X



Model# MED5008
Product Dimensions: 54"W x 15"D x 24"H

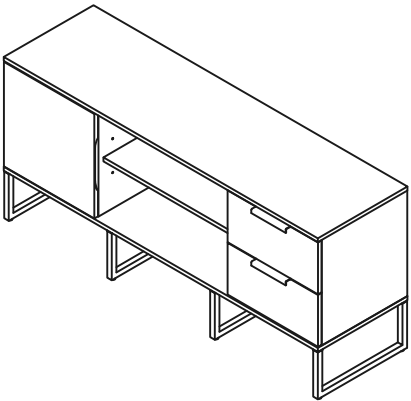



WEIGHT CAPACITY :
TOP : 50 LBS
SHELF : 30 LBS


WARNING: DO NOT OVER TORQUE
BOLTS/SCREWS

PIECE	DESCRIPTION	PICTURE	QUANTITY
1	15 MM BOLT	M6x15mm 	16X
2	SPRING WASHER		16X
3	1 1/4" FLAT HEAD SCREW	M3x32mm 	16X
4	3/4" FLAT HEAD SCREW	M3x19mm 	10X
5	5/8" FLAT HEAD SCREW	M3x16mm 	10X
6	1/2" ROUND HEAD SCREW	M3x13mm 	10X
7	CAMBOLT		28X
8	CAMLOCK		28X
9	HINGE		2X
10	MAGNET		1X
11	SHELF SUPPORT PIN		8X
12	HANDLE		2X
13	WEDGE		10X
14	DOWEL		16X
15	ALLEN KEY		1X


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

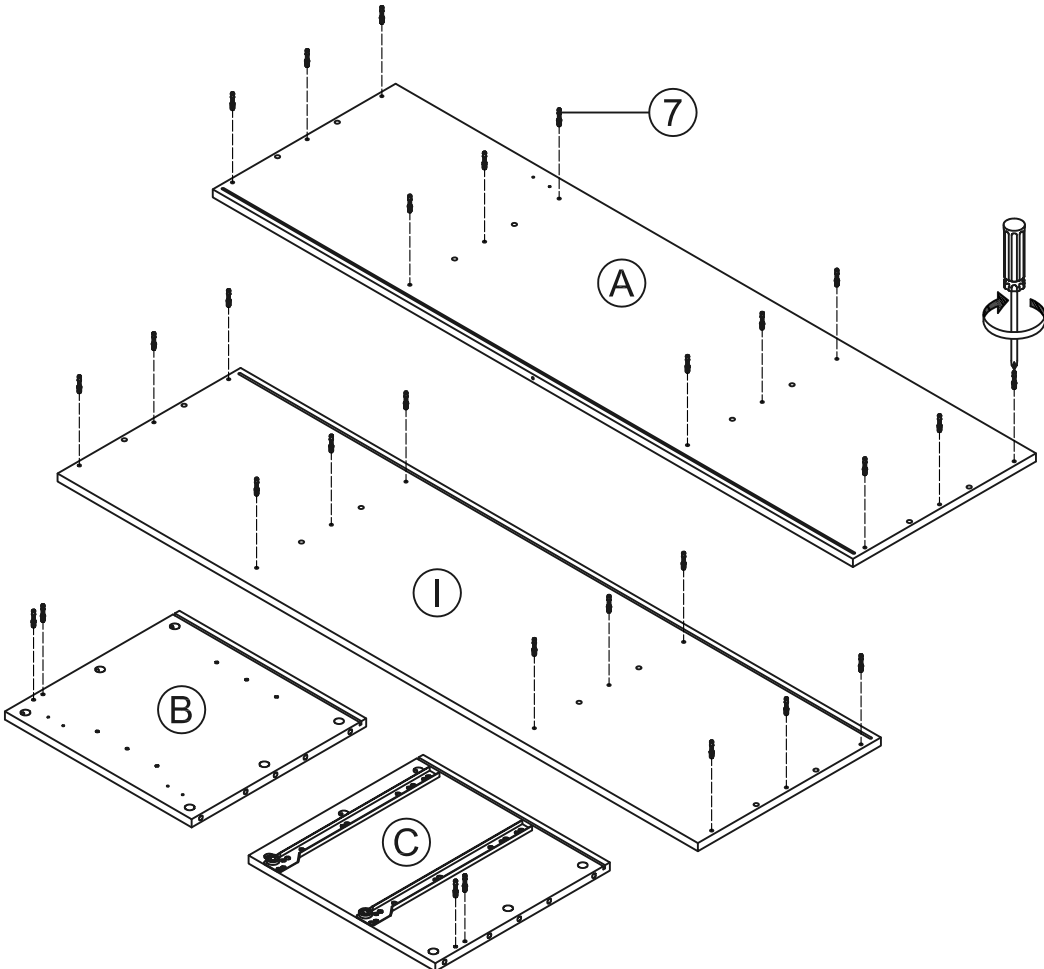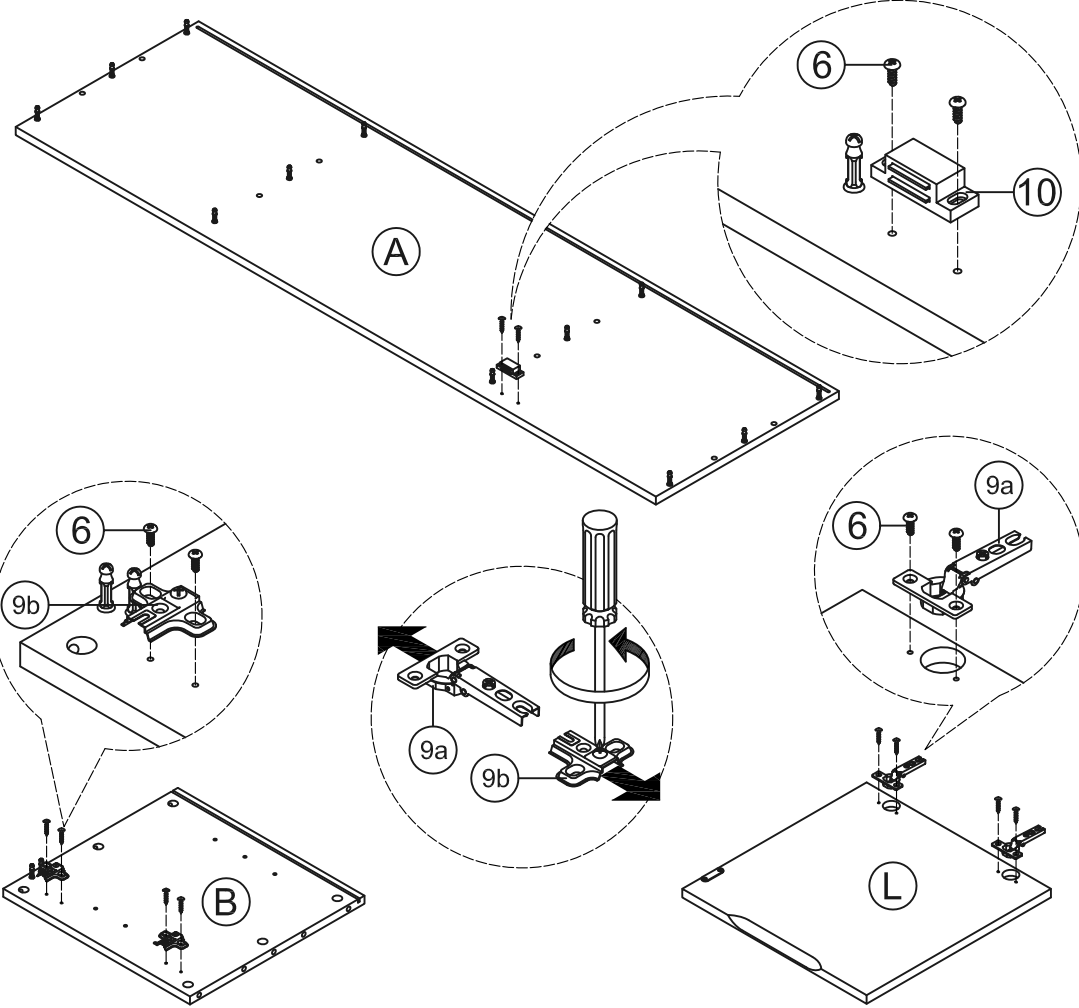
	
STEP 1 ATTACH CAMBOLTS TO TOP PANEL, LEFT AND RIGHT PANELS AND BOTTOM PANEL.	STEP 2 ATTACH MAGNET TO TOP PANEL USING 1/2" ROUND HEAD SCREWS. DETACH THE HINGE FROM THE BASE. ATTACH HINGE BASES TO SIDE PANELS USING 1/2" ROUND HEAD SCREWS. ATTACH HINGES TO DOORS USING 1/2" ROUND HEAD SCREWS.

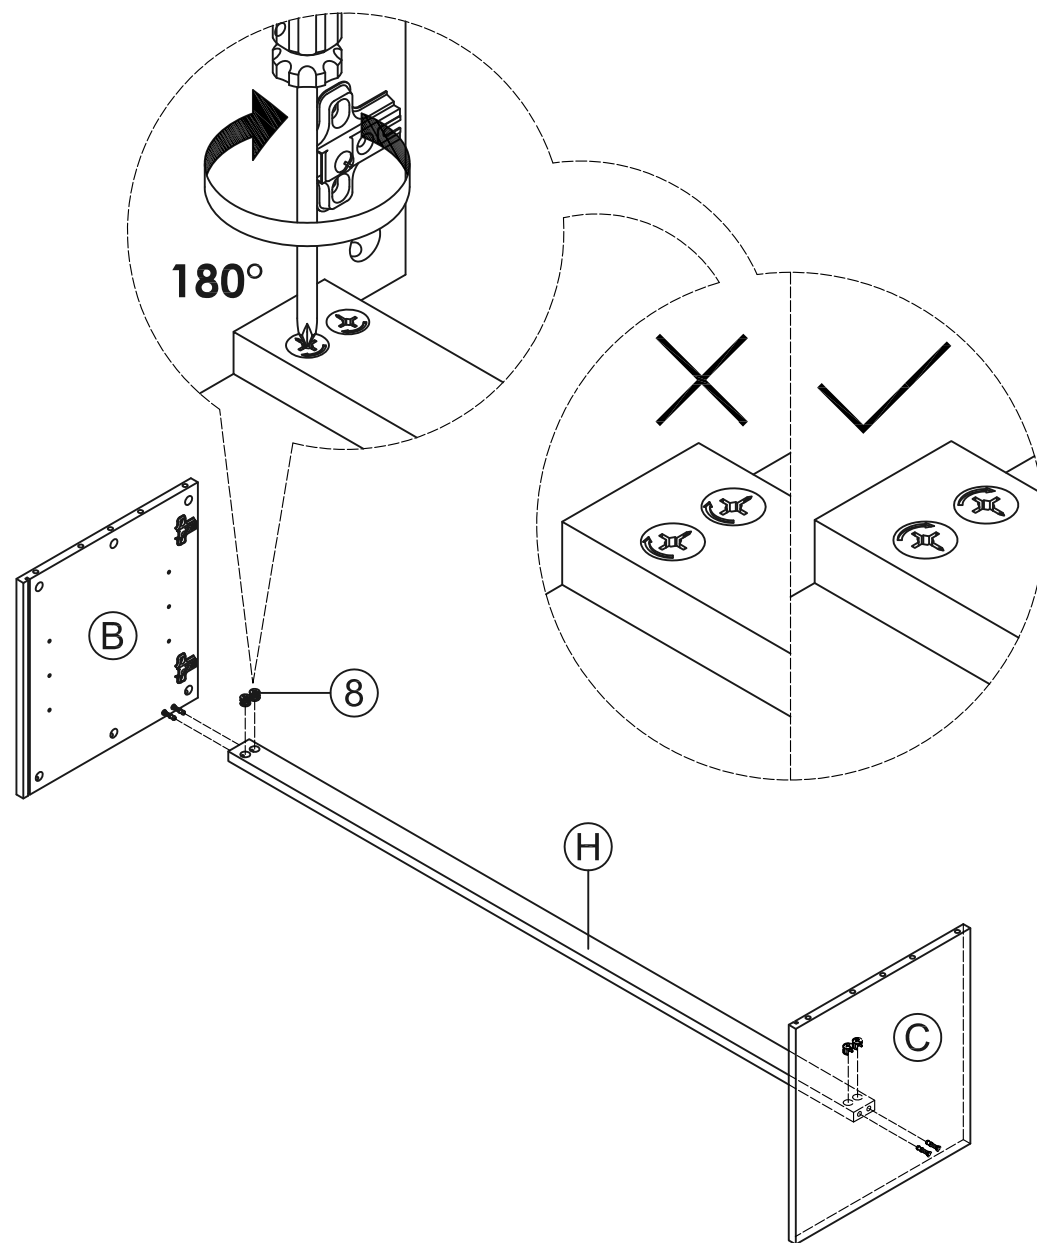


STEP 3 ATTACH RAILS TO LEFT AND RIGHT PANELS USING CAMLOCKS.

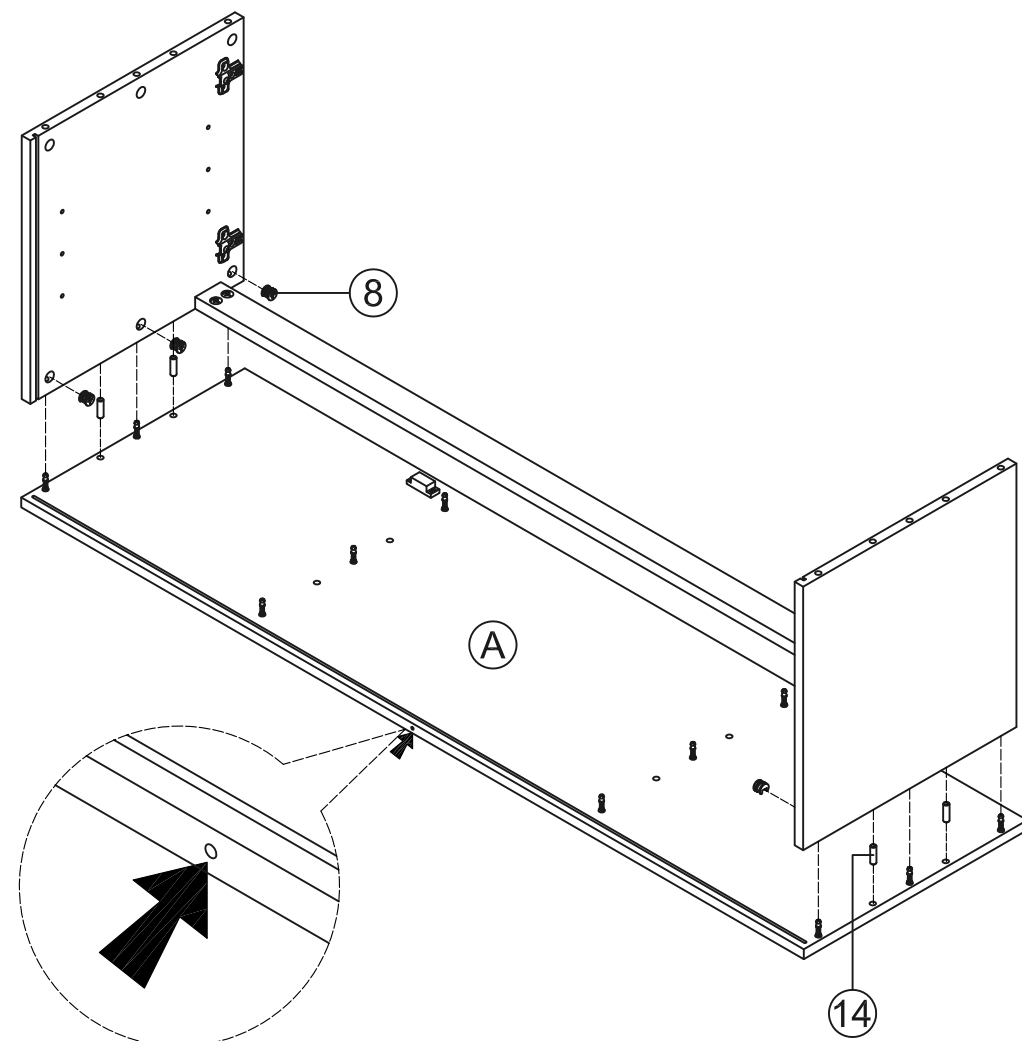


STEP 4 ATTACH UNIT TO TOP PANEL USING CAMLOCKS AND DOWELS.

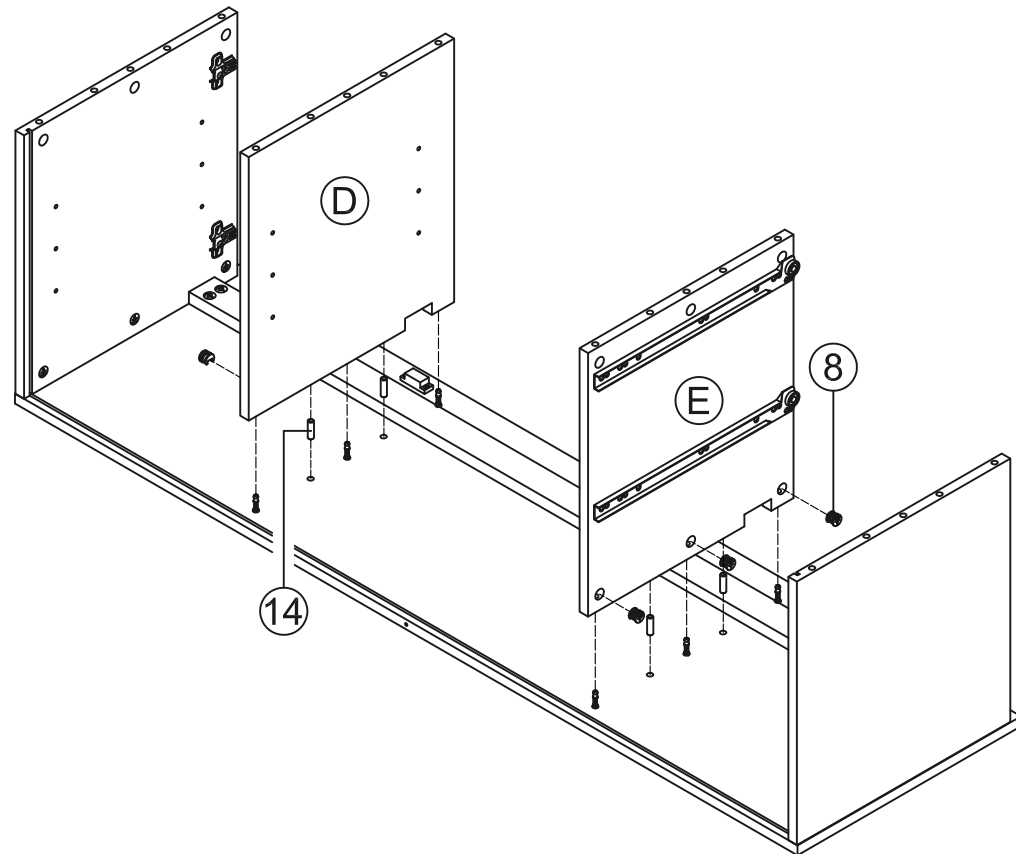


STEP 5 ATTACH LEFT AND RIGHT DIVIDERS TO UNIT USING CAMLOCKS AND DOWELS.

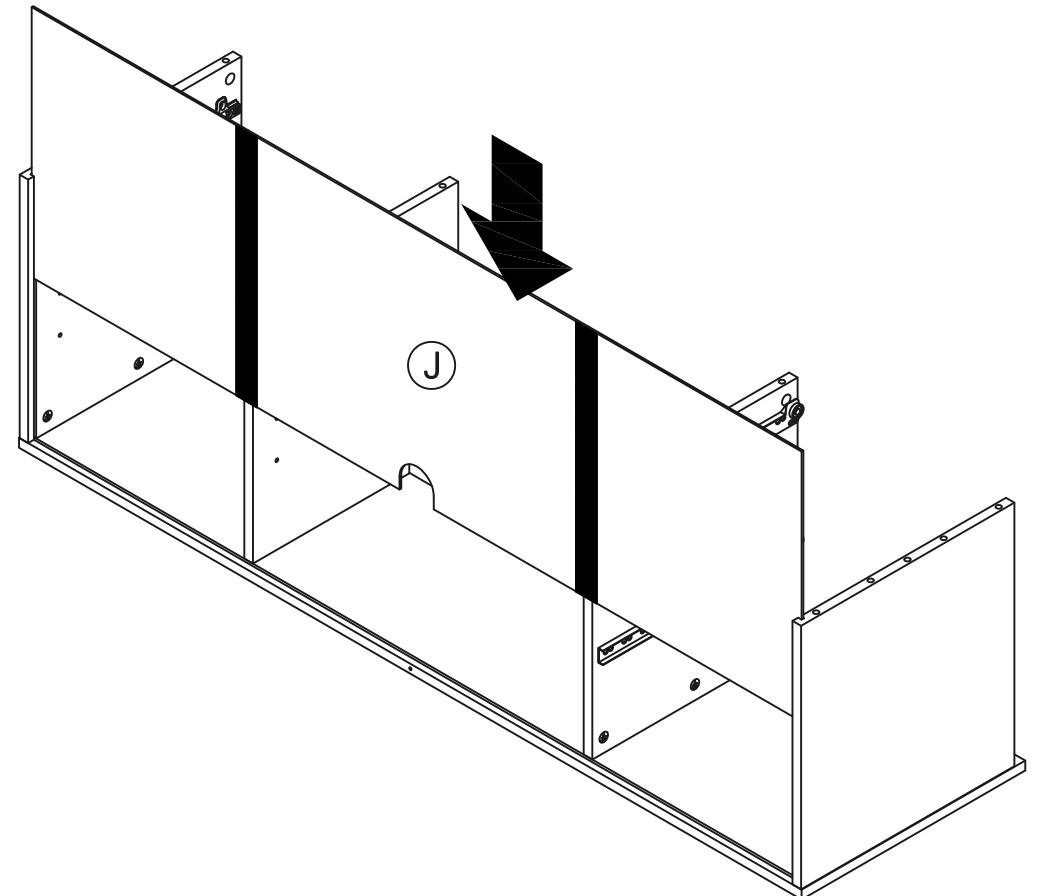


STEP 6 SLIDE BACK PANEL ASSEMBLY INTO UNIT OF GROOVE.

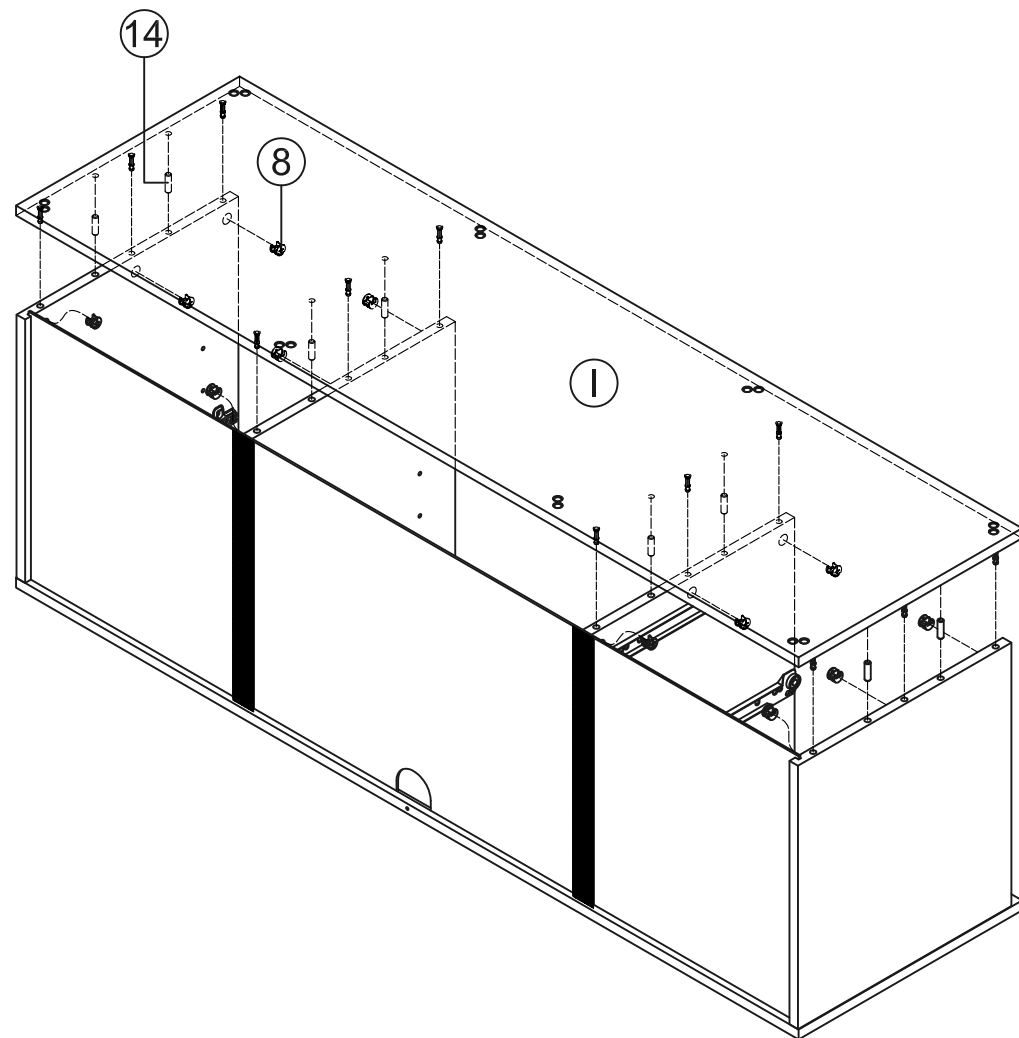


STEP 7 ATTACH BOTTOM PANEL TO UNIT USING CAM LOCKS AND DOWELS.

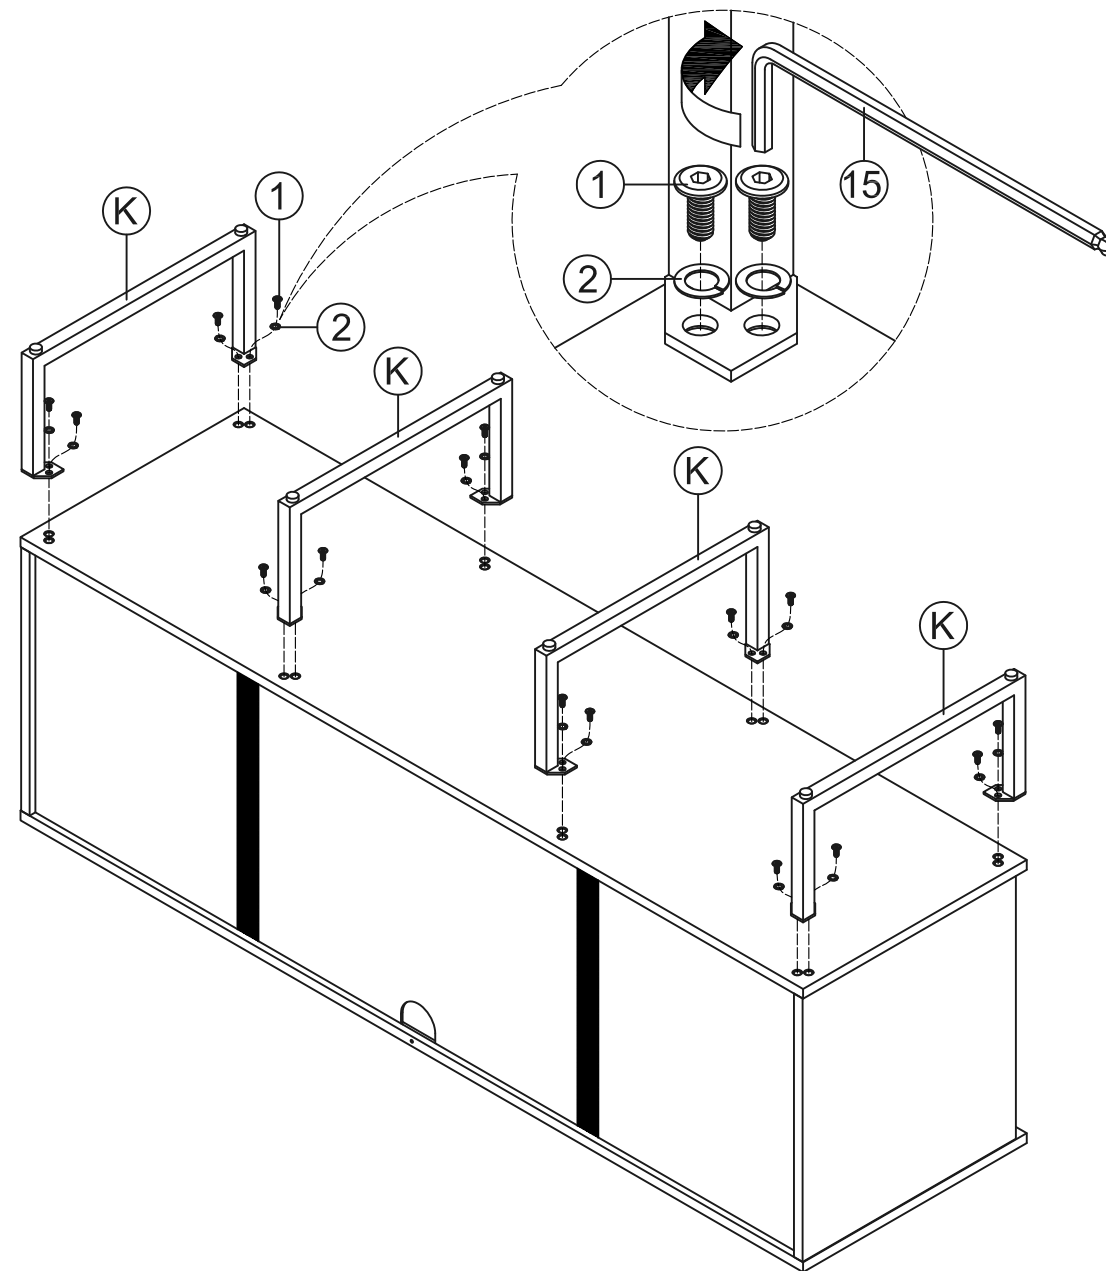



STEP 8 ATTACH LEG FRAMES TO UNIT USING 15 MM BOLTS AND SPRING WASHERS. TIGHTEN BOLTS USING L KEY.

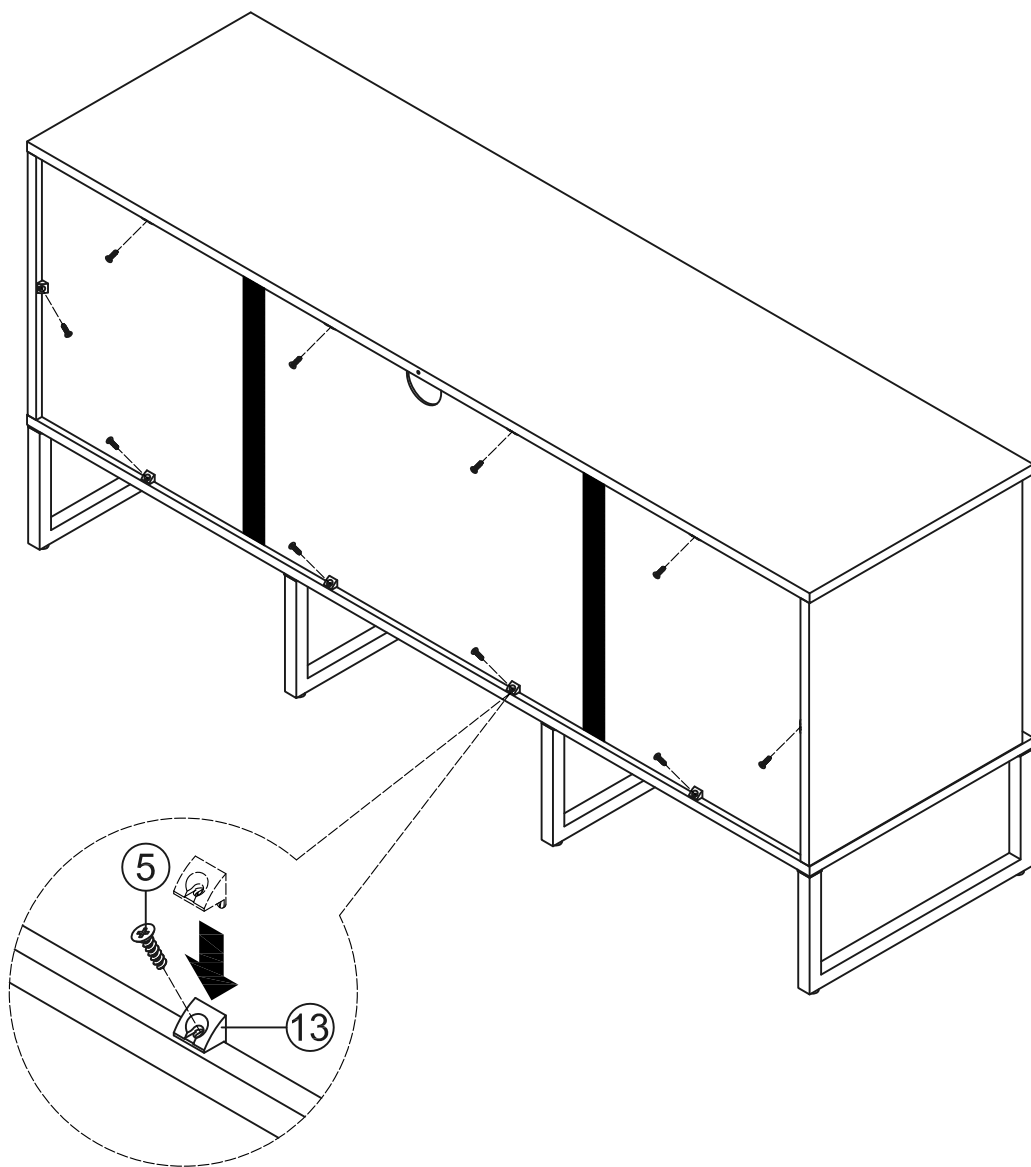



STEP 9 ATTACH WEDGES TO UNIT USING 5/8" FLAT HEAD SCREWS.

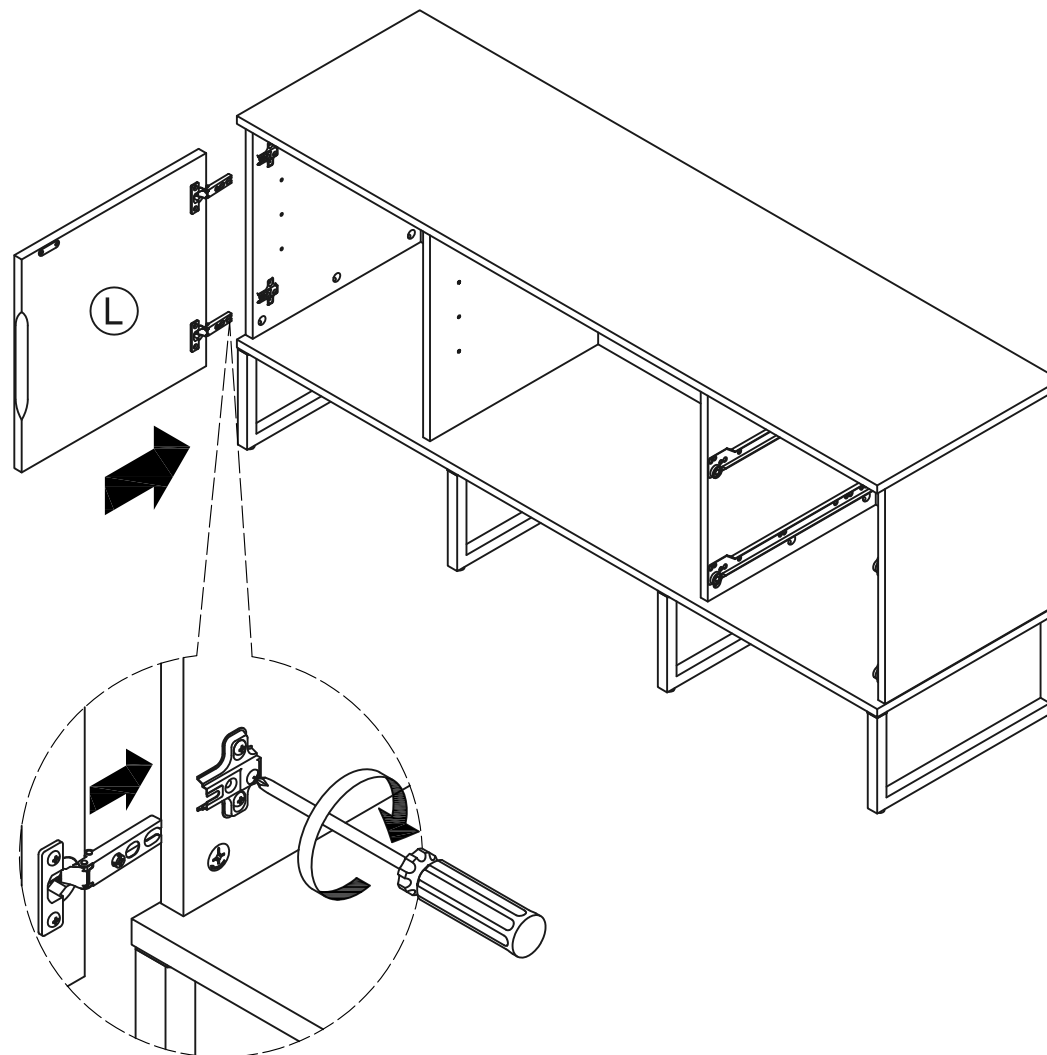


STEP 10 ATTACH DOOR TO UNIT.

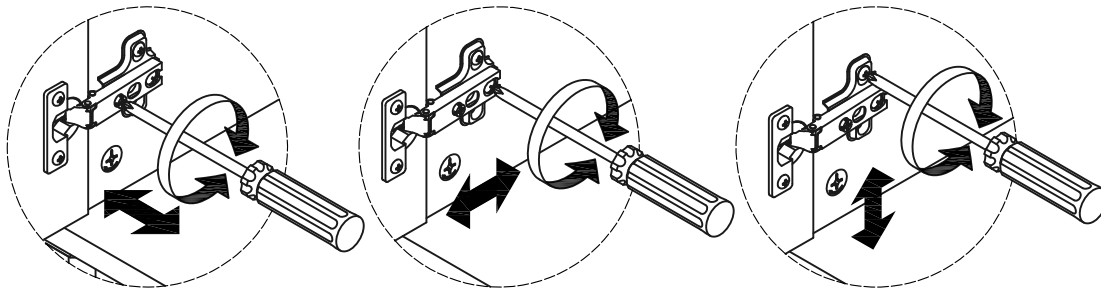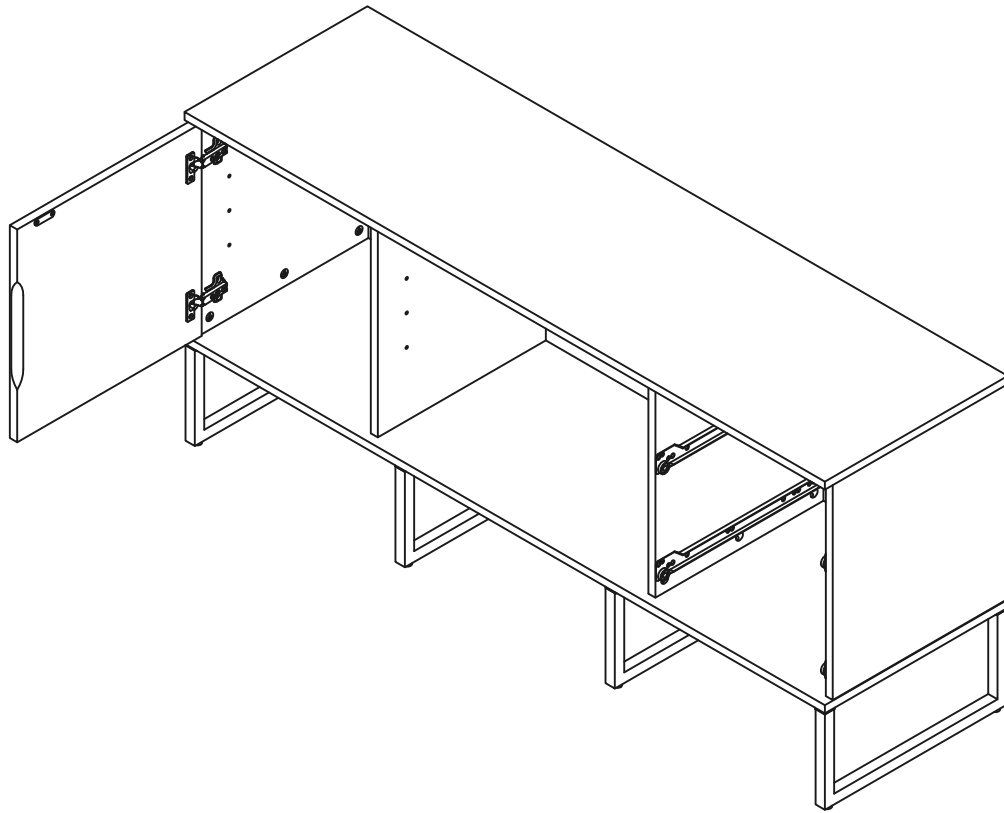


STEP 11 FRONT MIDDLE SCREW ON HINGE WILL ADJUST YOUR DOOR TO THE LEFT AND RIGHT. BACK MIDDLE SCREW ON HINGE WILL ADJUST YOUR DOOR FORWARD AND BACKWARD. SCREW ON HINGE BASE WILL ADJUST YOUR DOOR UP AND DOWN.

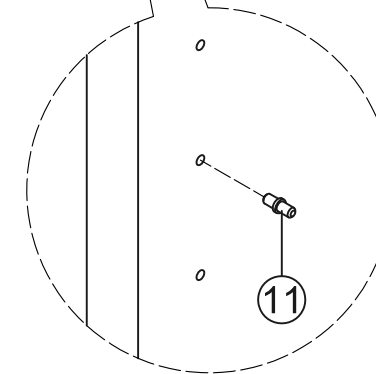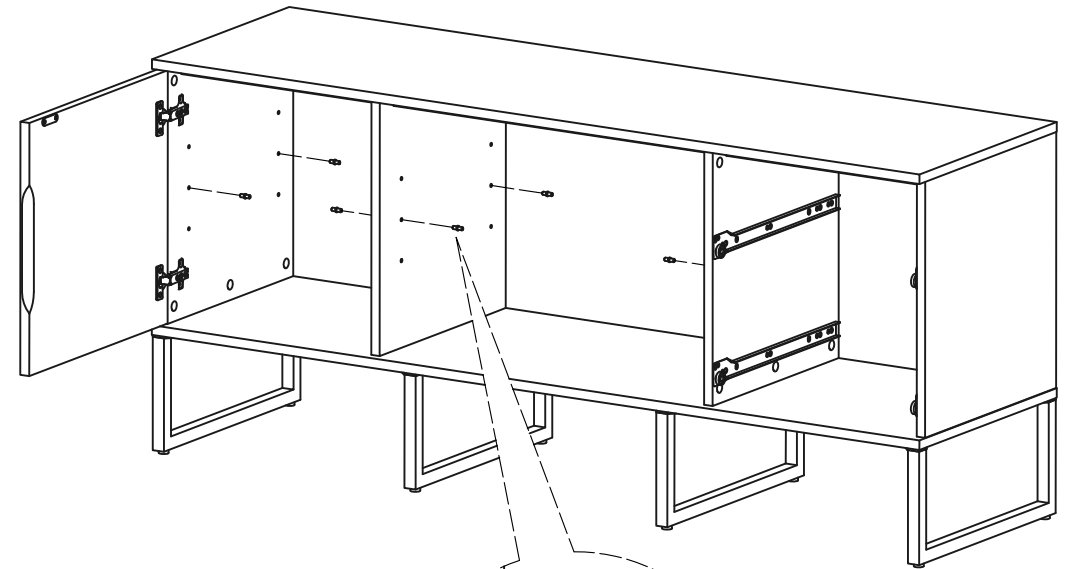


STEP 12 INSERT SHELF SUPPORT PINS INTO PANELS AT DESIRED LEVEL.

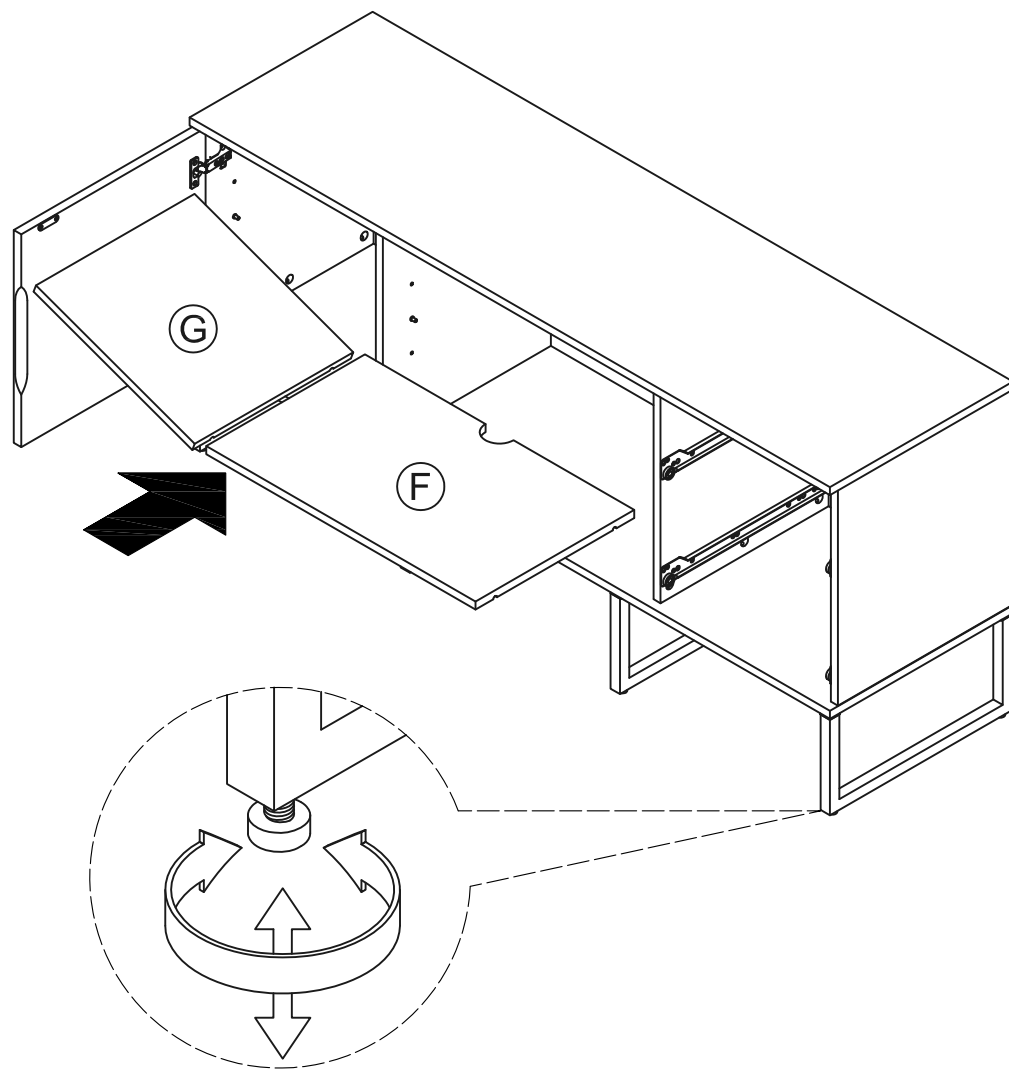


STEP 13 PLACE LARGE AND SMALL ADJUSTABLE SHELVES TO UNIT.
ADJUST THE ADJUSTER THAT HAS ALREADY BEEN ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT.

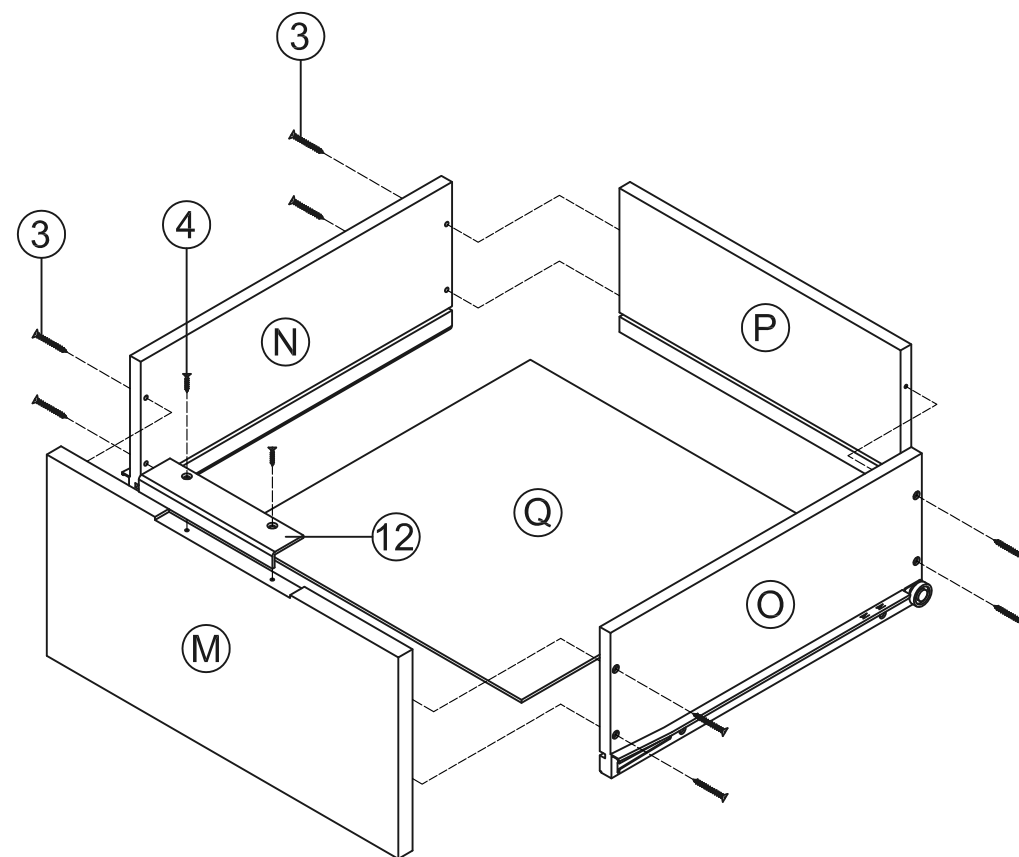


STEP 14 ATTACH DRAWER LEFT AND RIGHT TO DRAWER BACK USING 1 1/4" FLAT HEAD SCREWS. SLIDE DRAWER BASE INTO THE GROOVE. ATTACH DRAWER FRONT TO DRAWER LEFT AND RIGHT USING 1 1/4" FLAT HEAD SCREWS. ATTACH HANDLE TO DRAWER FRONT USING 3/4" FLAT HEAD SCREWS.

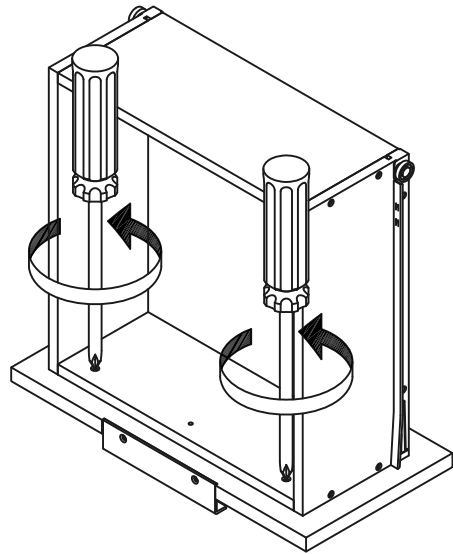


STEP 15 LOOSEN SLIGHTLY THE SCREWS PRE-INSTALLED ON THE BACK OF THE DRAWER FRONTS.

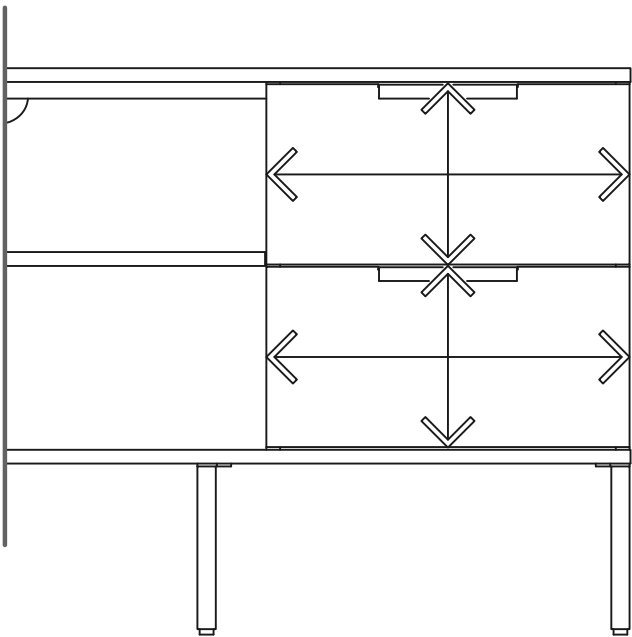

STEP 16 INSERT THE DRAWER INTO THE UNIT, THEN ADJUST THE DRAWER FRONT PANEL LEFT OR RIGHT AND UP OR DOWN UNTIL THE DRAWER GAPS LOOK PROPORTIONAL.

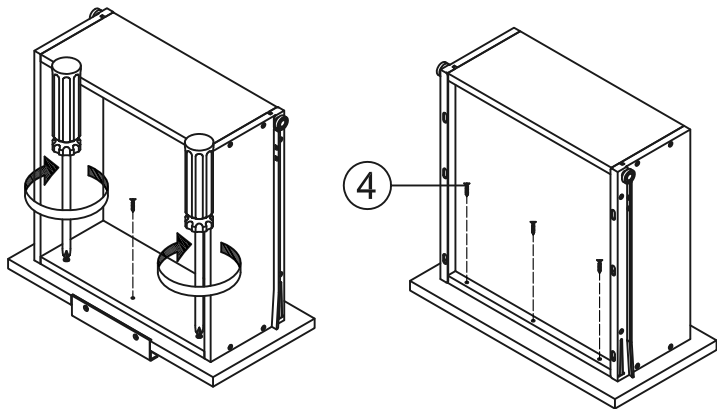

STEP 17 PULL THE DRAWER OPEN SLOWLY AND RE-TIGHTEN THE SCREWS FROM STEP 11. MAKE SURE THE FRONT PANEL DOES NOT MOVE AND LOCK THE DRAWER FRONT PANEL INTO POSITION WITH 3/4" FLAT HEAD SCREWS.

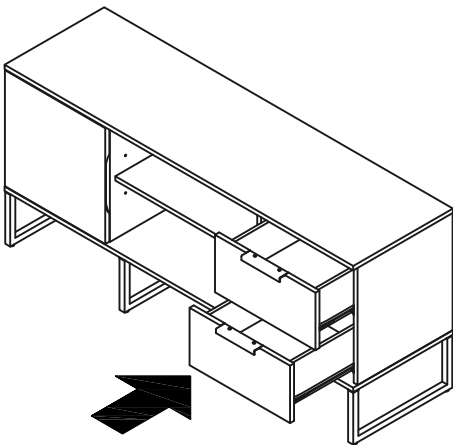

STEP 18 SLIDE THE DRAWERS INTO UNIT.