

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com





PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly : Phillips Screwdriver (not included).

CARE AND MAINTENANCE


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	TOP PANEL		1X
B	LEFT PANEL		1X
C	RIGHT PANEL		1X
D	SHELF		1X
E	TOP RAIL		2X
F	SUPPORT RAIL		1X
G	DIVIDER		1X
H	BOTTOM RAIL		2X
I	CENTER LEG		1X
J	BACK PANEL		1X
K	DRAWER FRONT		2X
L	DRAWER LEFT		2X
M	DRAWER RIGHT		2X
N	DRAWER BACK		2X
O	DRAWER BASE		2X
P	DRAWER SUPPORT		2X



Model# MED5015
Product Dimensions: 47 1/2"W x 15 1/2"D x 17"H


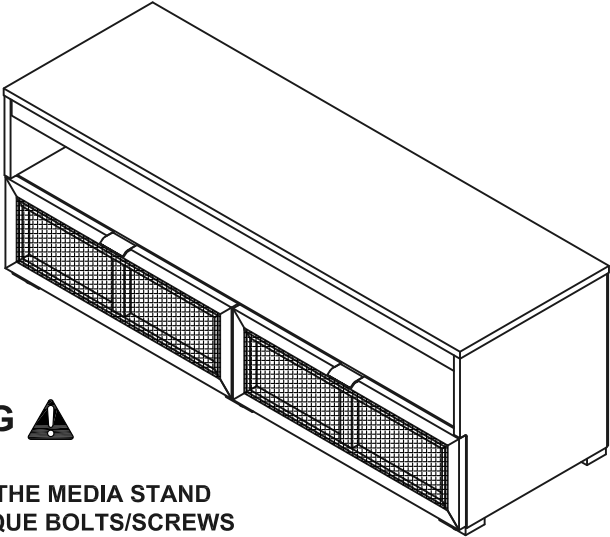



WARNING: DO NOT STAND ON THE MEDIA STAND
WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

PIECE	DESCRIPTION	PICTURE	QUANTITY
HW1	HEAD CAP SCREW 6 x 2.5 x 44 MM		2X
HW2	FLAT HEAD SCREW 3 x 1 x 32 MM		22X
HW3	FLAT HEAD SCREW 3 x 1 x 19 MM		8X
HW4	FLAT HEAD SCREW 3 x 1 x 13 MM		4X
HW5	ROUND HEAD SCREW 4 x 1 x 25 MM		2X
HW6	ROUND HEAD SCREW 3 x 1 x 13 MM		14X
HW7	CAMBOLT		32X
HW8	CAMLOCK		32X
HW9	HANDLE		2X
HW10	DOWEL		18X


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly : Phillips Screwdriver (not included).
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

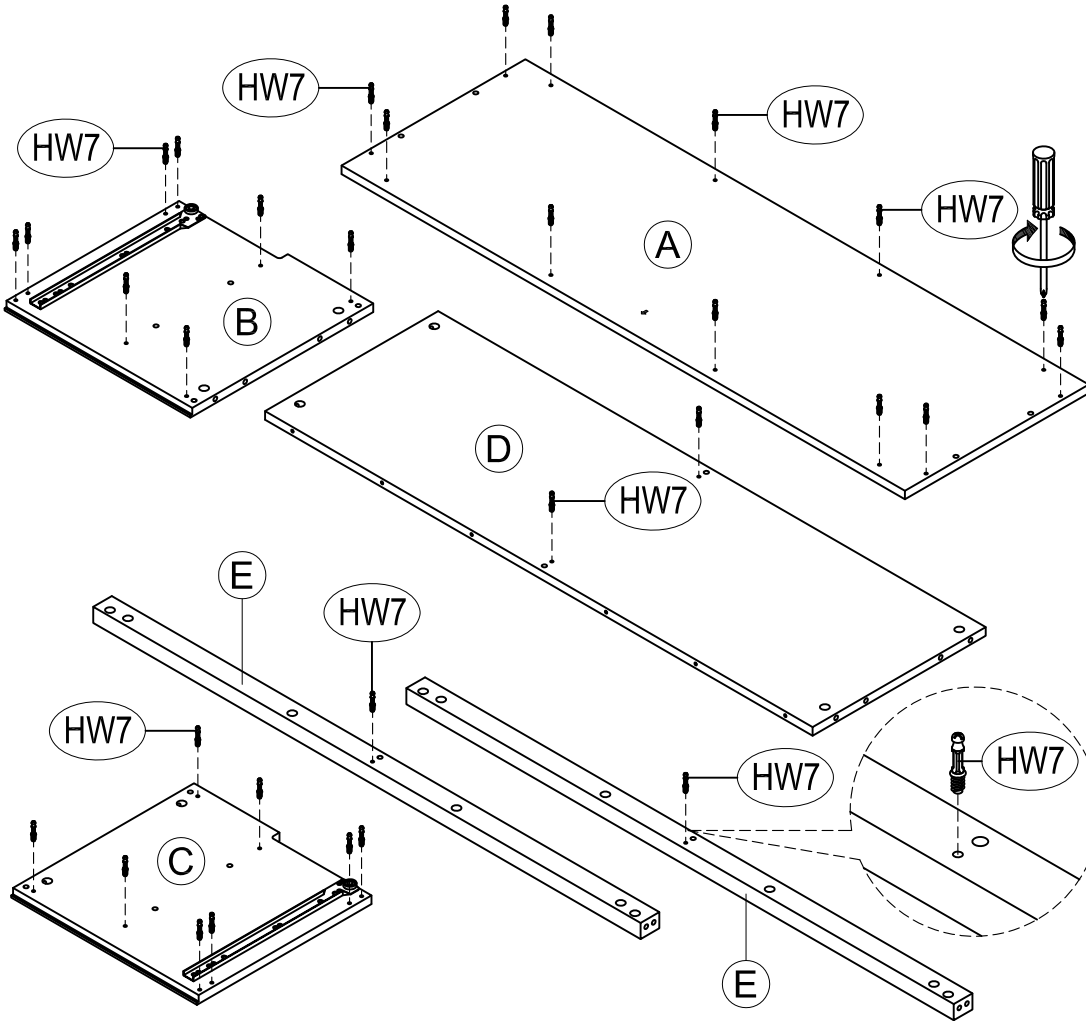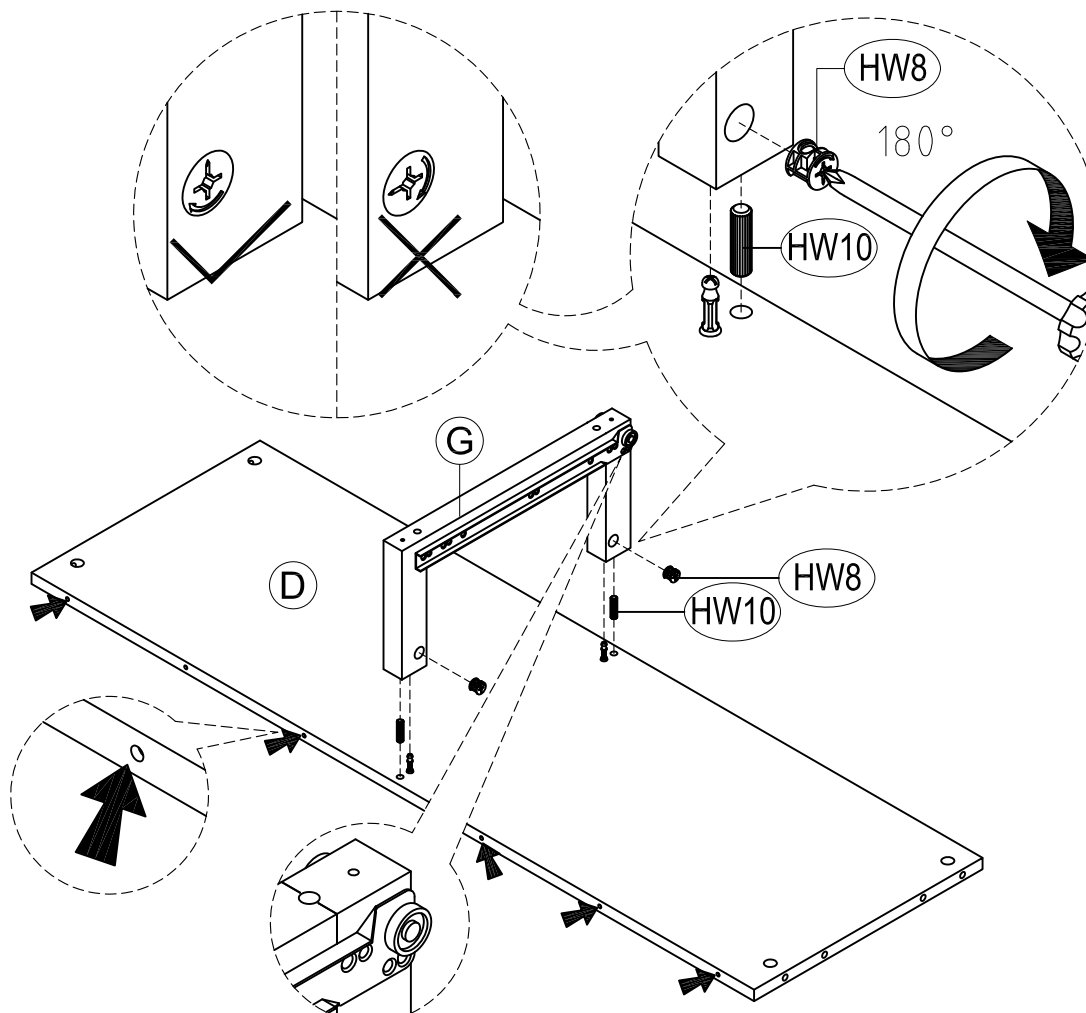
 The diagram shows five components: Top Panel (A), Left Panel (B), Right Panel (C), Shelf (D), and Top Rails (E). Each component has multiple holes for screws. Hardware HW7 (cambolts) are shown being inserted into these holes. A circular inset provides a close-up view of a cambolt being inserted into a hole in a panel.	 The diagram shows Shelf (D) and Divider (G). Hardware HW8 (camlocks) and HW10 (dowels) are used to attach the divider to the shelf. A circular inset shows a camlock being inserted into a hole in the shelf. Another circular inset shows a camlock being rotated 180 degrees. Arrows indicate the direction of assembly.
STEP 1 ATTACH CAMBOLTS (HW7) TO TOP PANEL (A), LEFT PANEL (B), RIGHT PANEL (C), SHELF (D) AND TOP RAILS (E).	STEP 2 ATTACH DIVIDER (G) TO SHELF (D) USING CAMLOCKS (HW8) AND DOWELS (HW10).

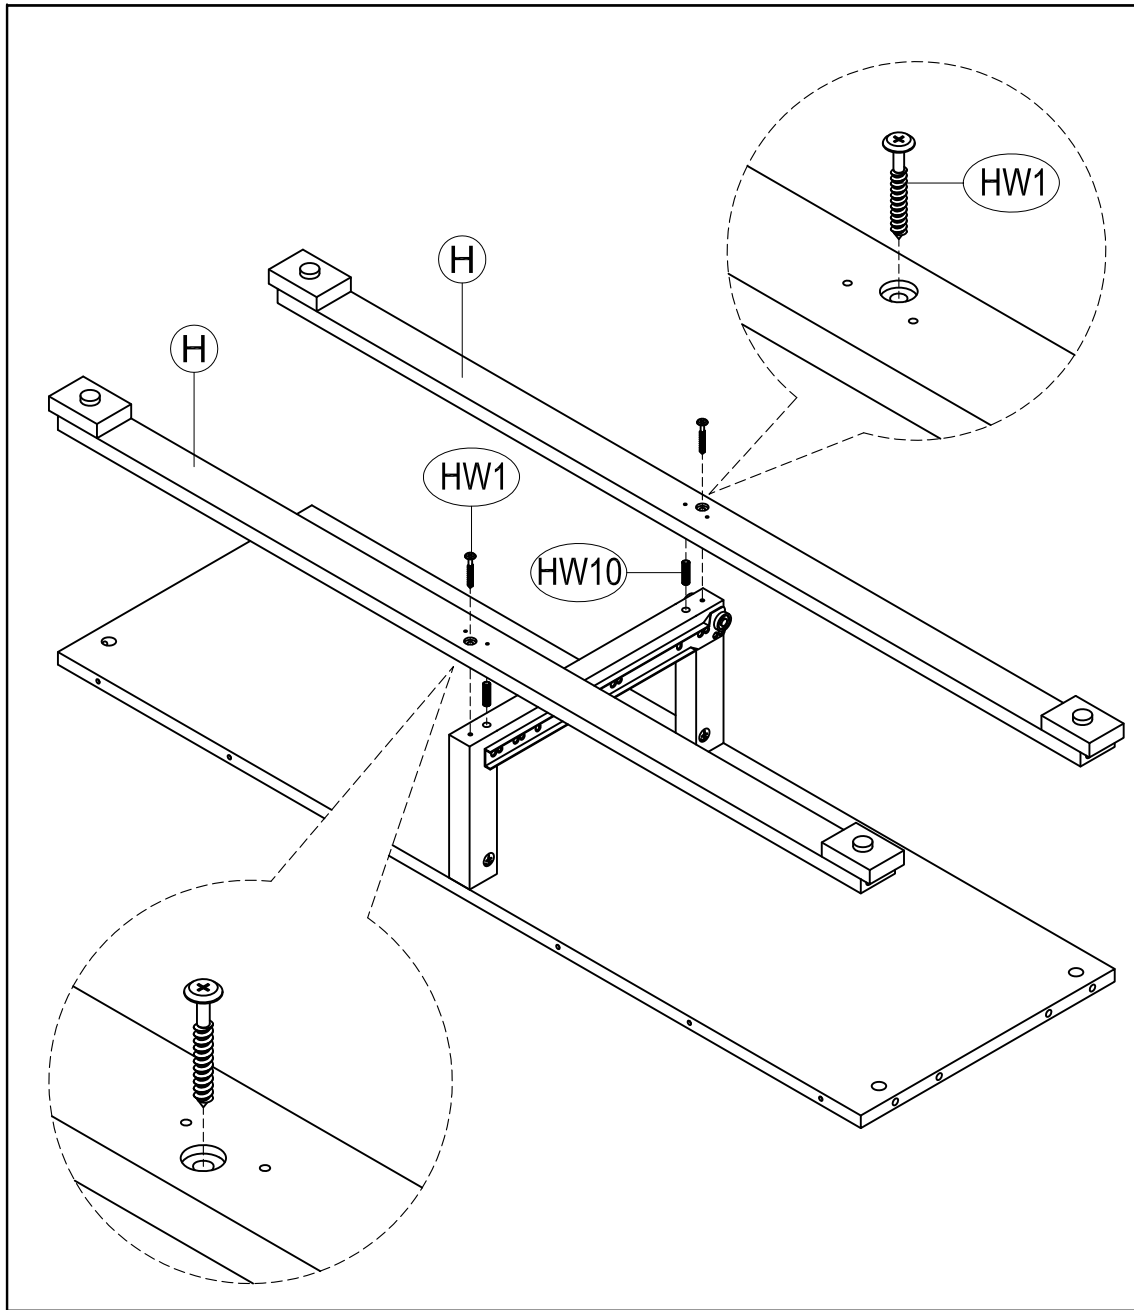


STEP 3 ATTACH BOTTOM RAILS (H) TO UNIT USING 1 3/4" HEAD CAP SREWS (HW1) AND DOWELS (HW10).

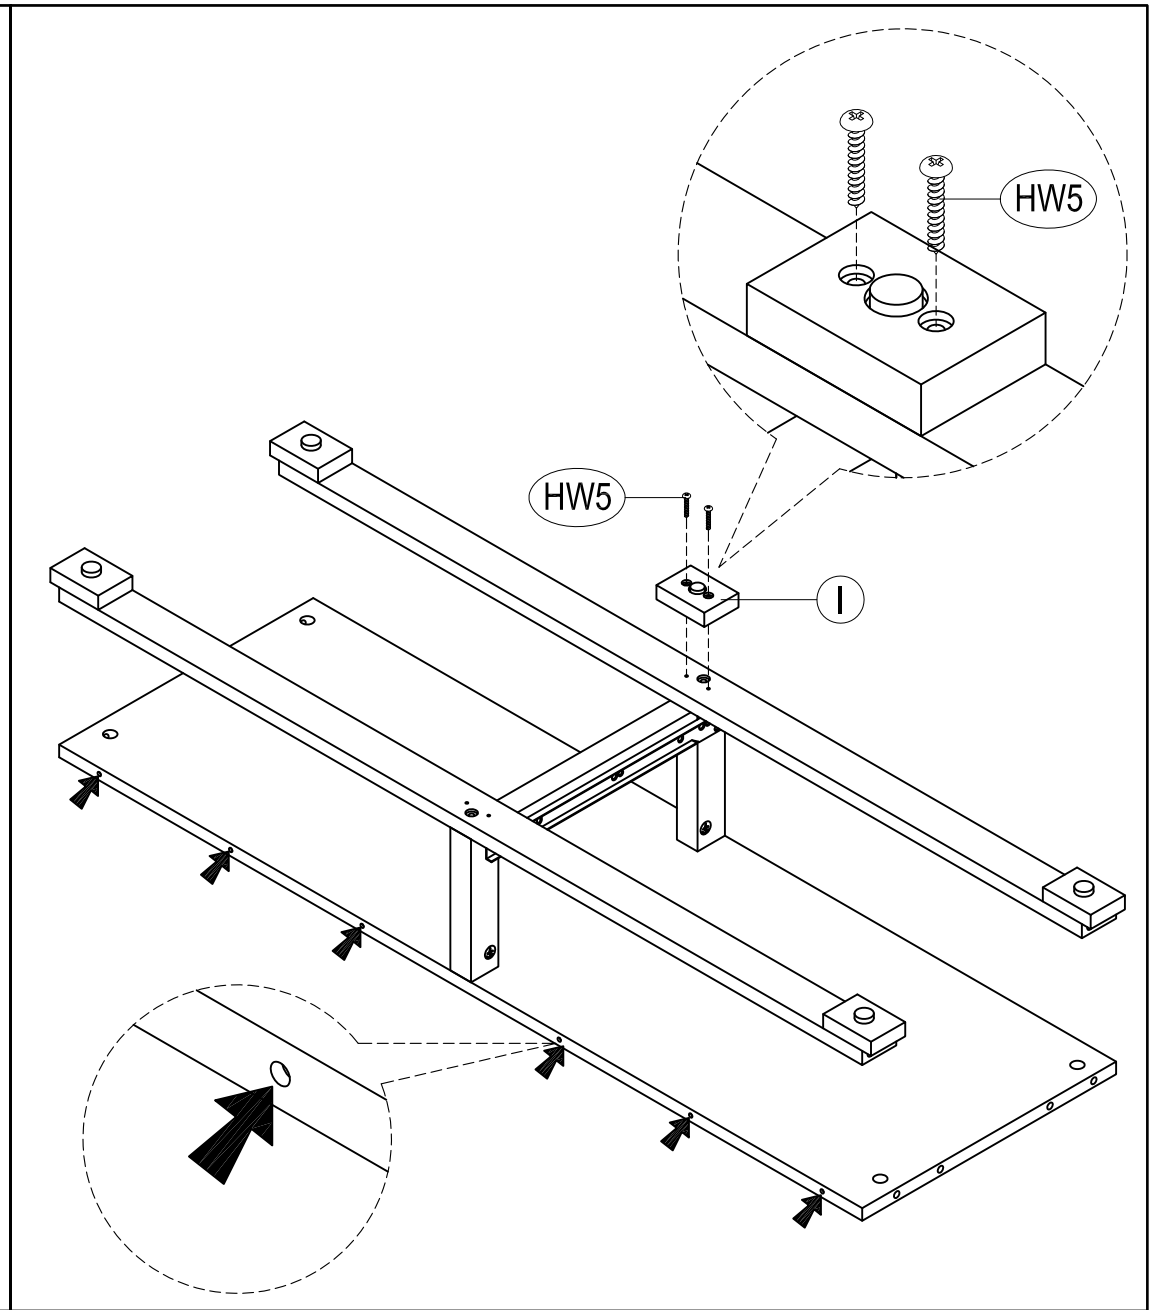


STEP 4 ATTACH CENTER LEG (I) TO UNIT USING 1" ROUND HEAD SCREWS (HW5).

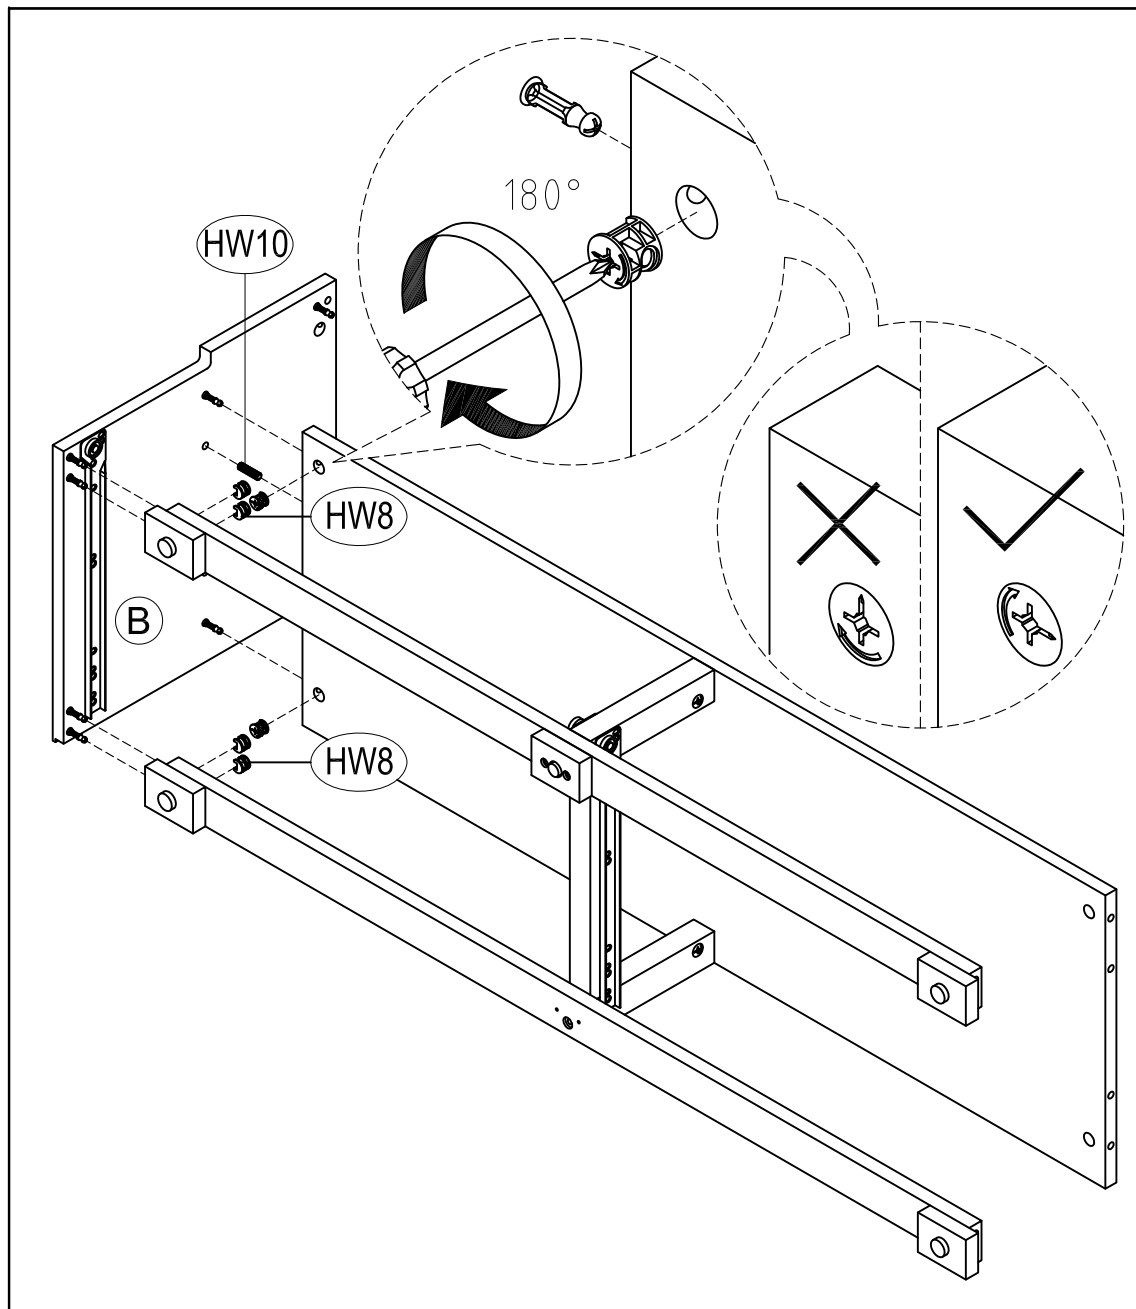


STEP 5 ATTACH LEFT PANEL (B) TO UNIT USING CAMLOCKS (HW8) AND DOWELS (HW10).

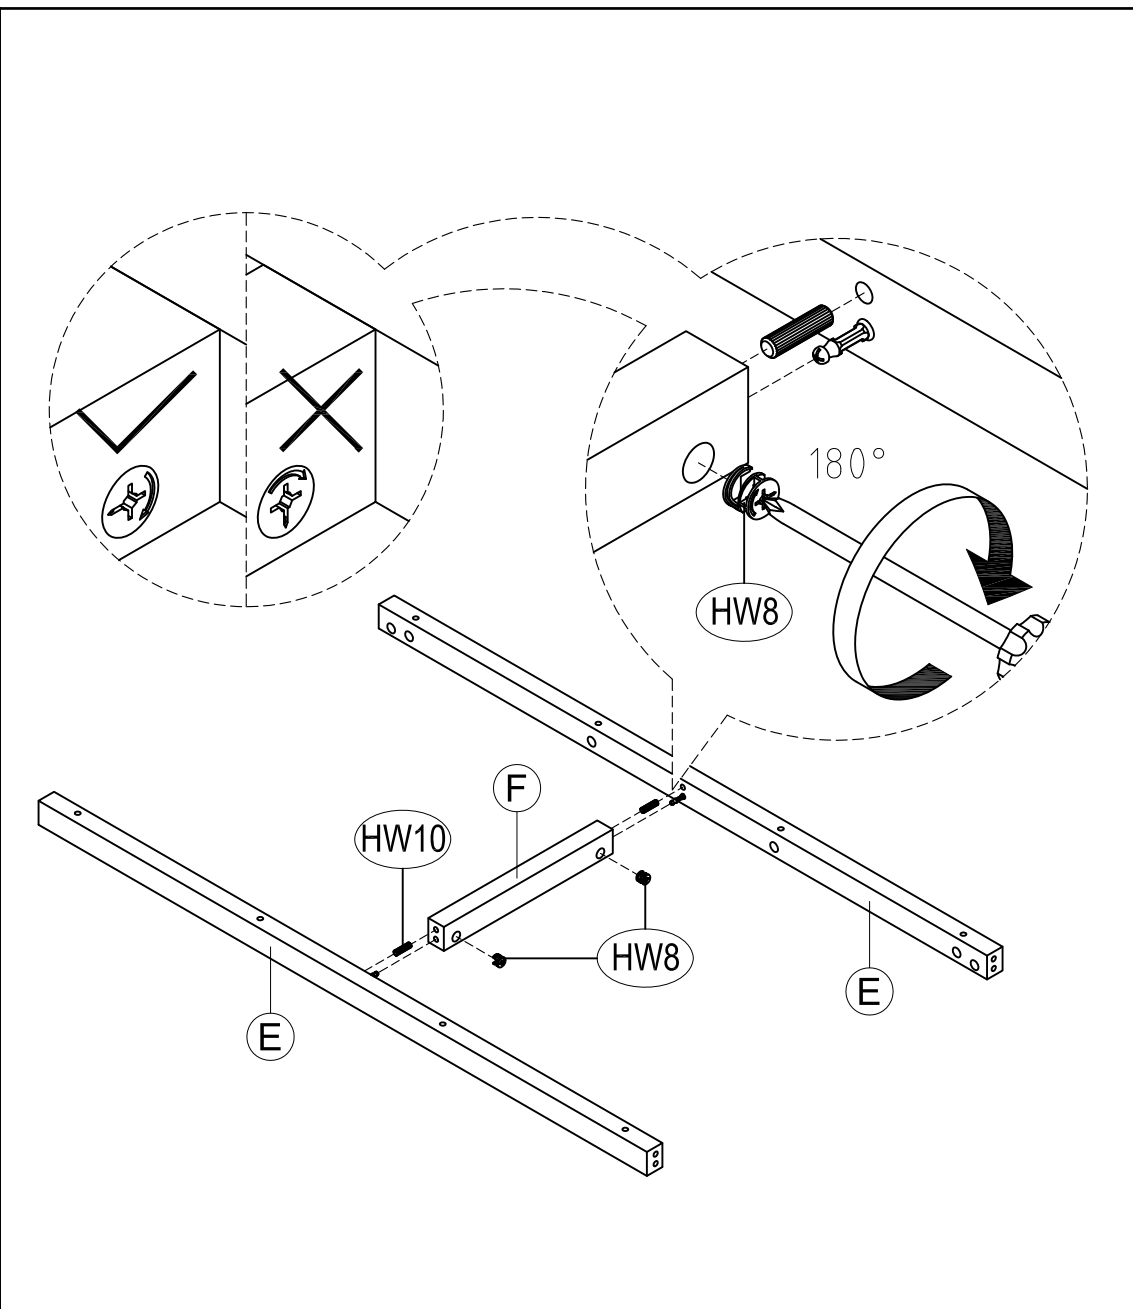


STEP 6 ATTACH SUPPORT RAIL (F) TO TOP RAILS (E) USING CAMLOCKS (HW8) AND DOWELS (HW10).

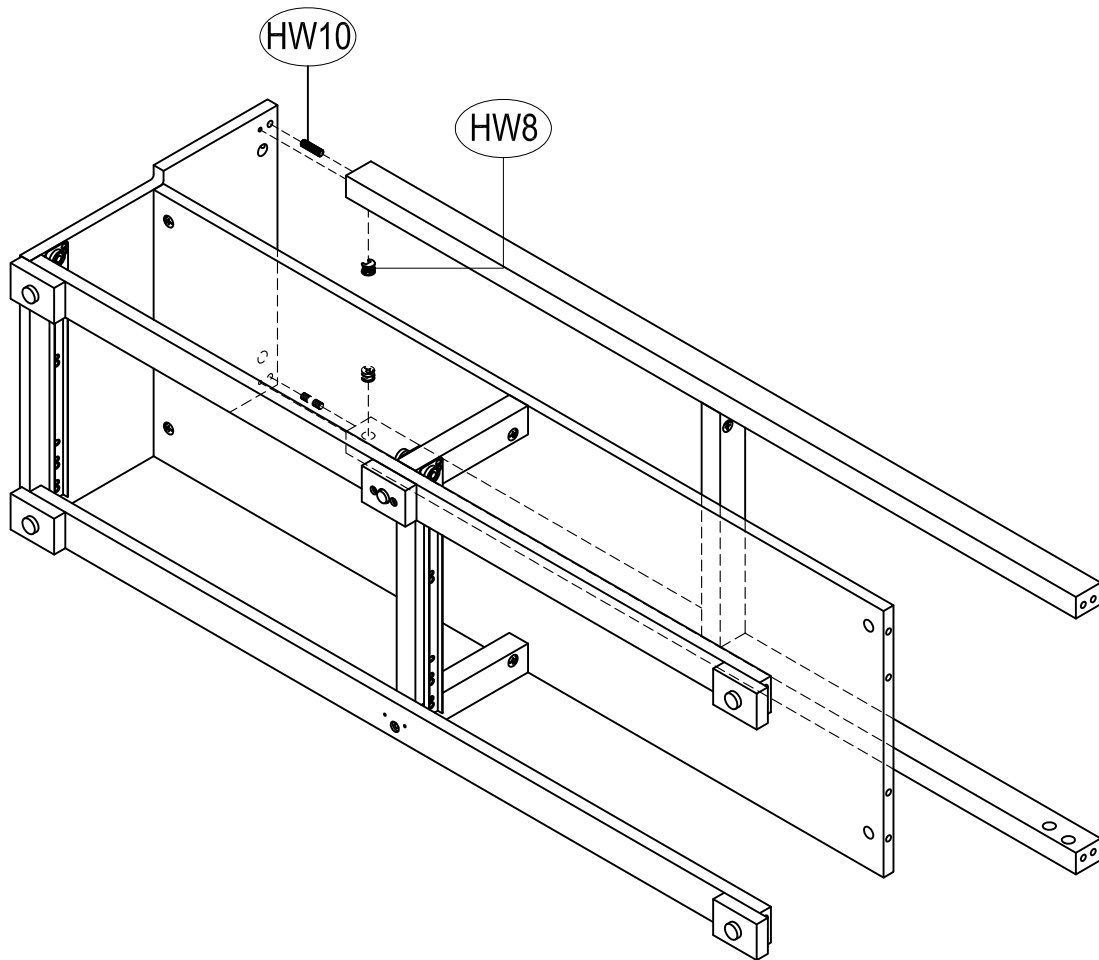


STEP 7 ATTACH RAIL ASSEMBLY TO UNIT USING CAMLOCKS (HW8) AND DOWELS (HW10).

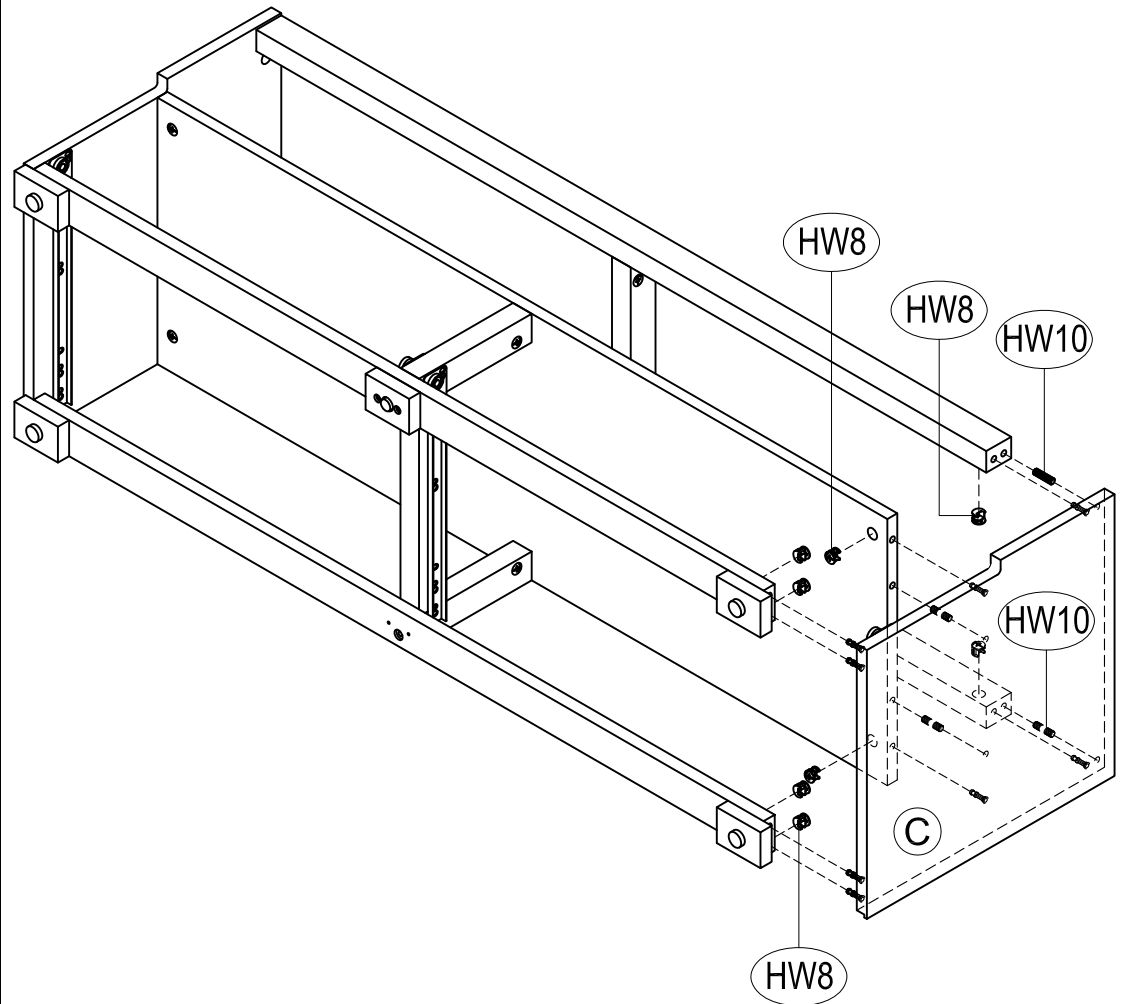


STEP 8 ATTACH RIGHT PANEL (C) TO UNIT USING CAMLOCKS (HW8) AND DOWELS (HW10).

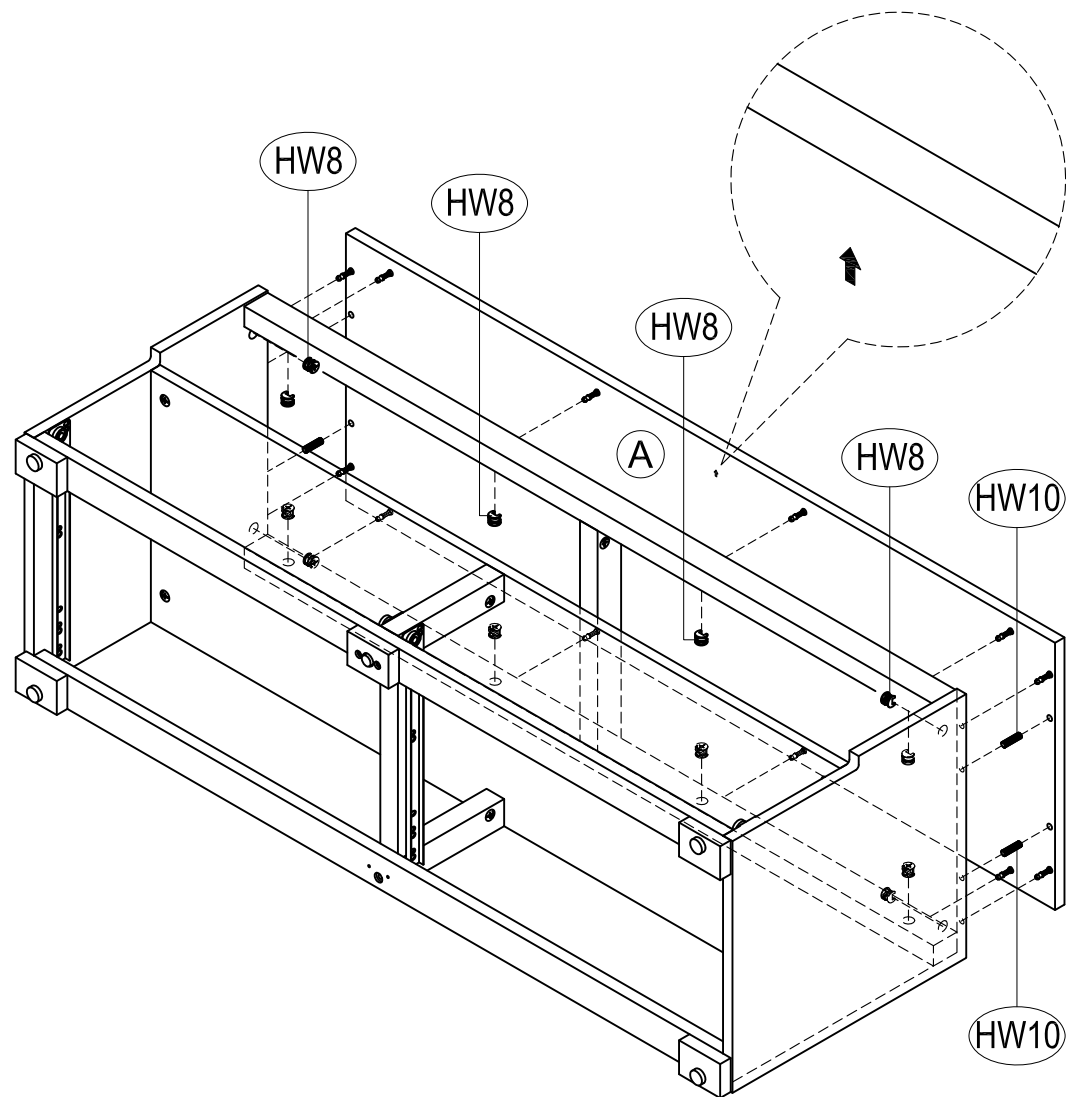


STEP 9 ATTACH TOP PANEL (A) TO UNIT USING CAMLOCKS (HW8) AND DOWELS (HW10).

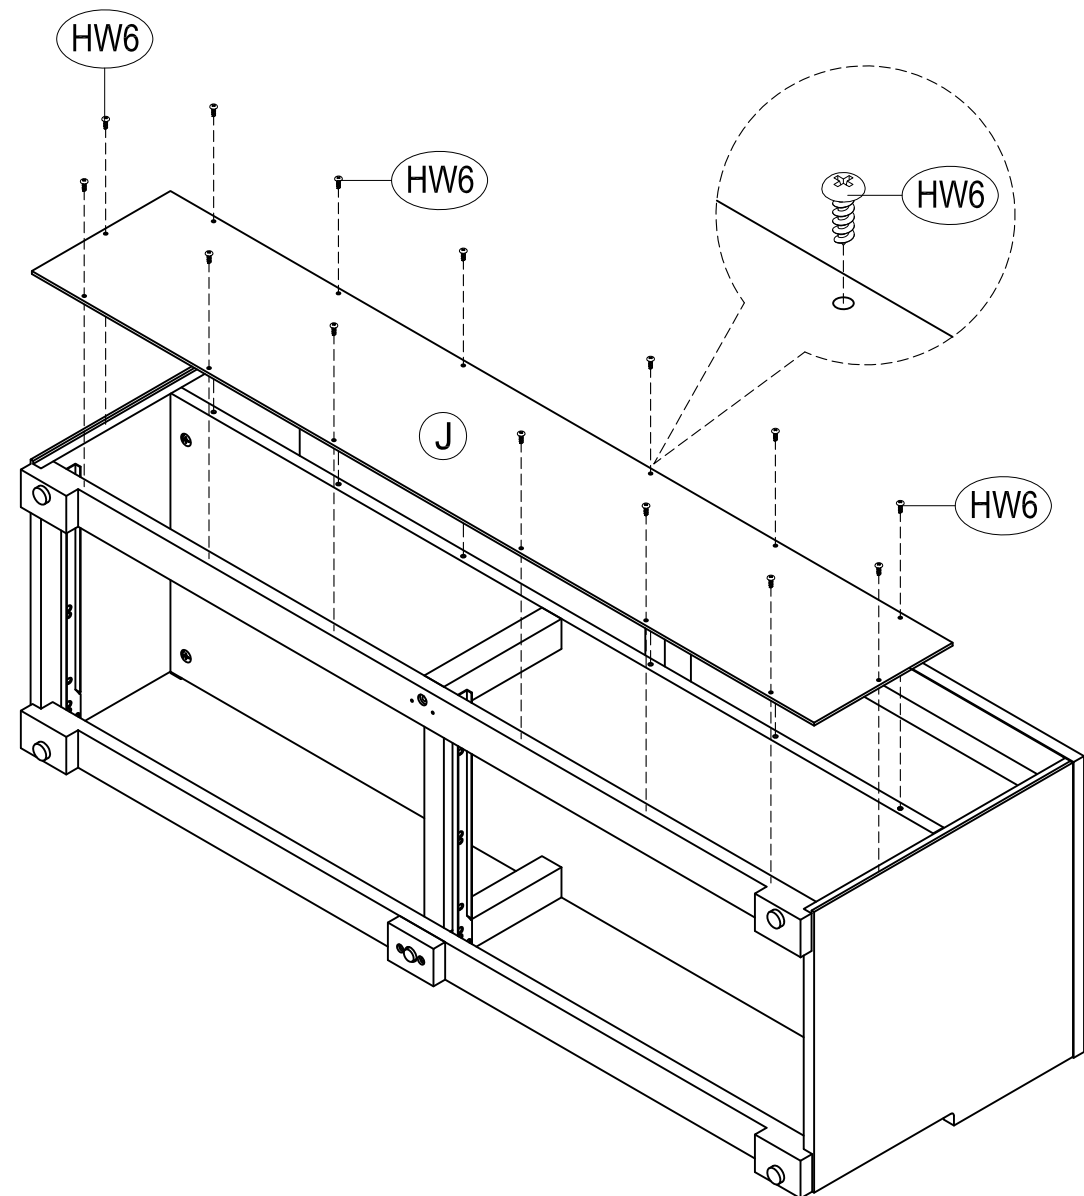


STEP 10 ATTACH BACK PANEL (J) TO UNIT USING 1/2" ROUND HEAD SCREWS (HW6).

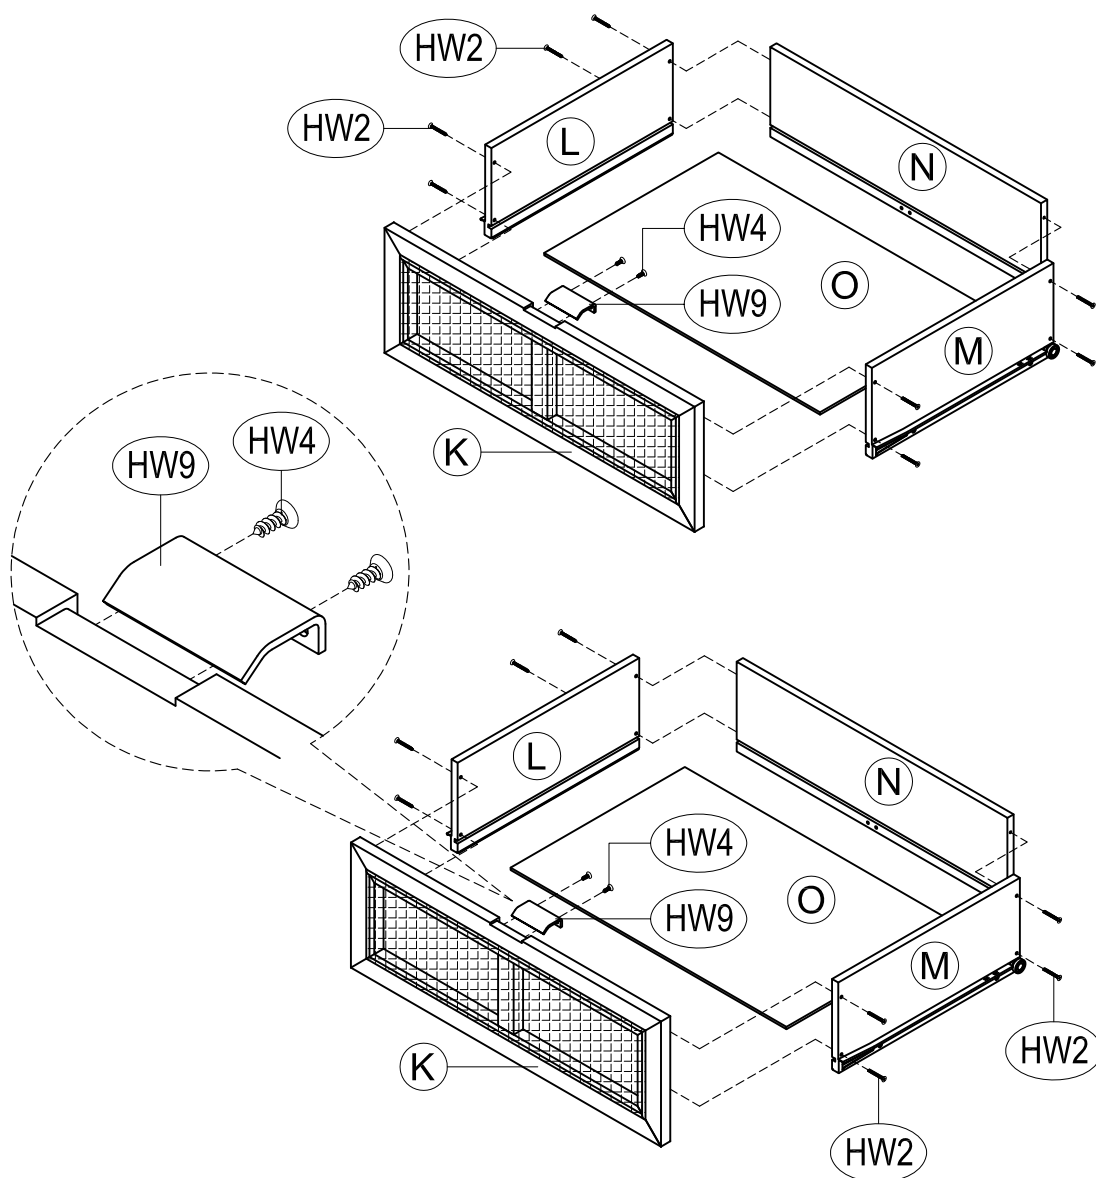


STEP 11 ATTACH HANDLE (HW9) TO DRAWER FRONT (K) USING 1/2" FLAT HEAD SCREWS (HW4). ATTACH DRAWER LEFT (L) AND DRAWER RIGHT (M) TO DRAWER BACK (N) USING 1 1/4" FLAT HEAD SCREWS (HW2). SLIDE DRAWER BASE (O) INTO THE GROOVE. ATTACH DRAWER FRONT (K) TO DRAWER LEFT (L) AND DRAWER RIGHT (M) USING 1 1/4" FLAT HEAD SCREWS (HW2).

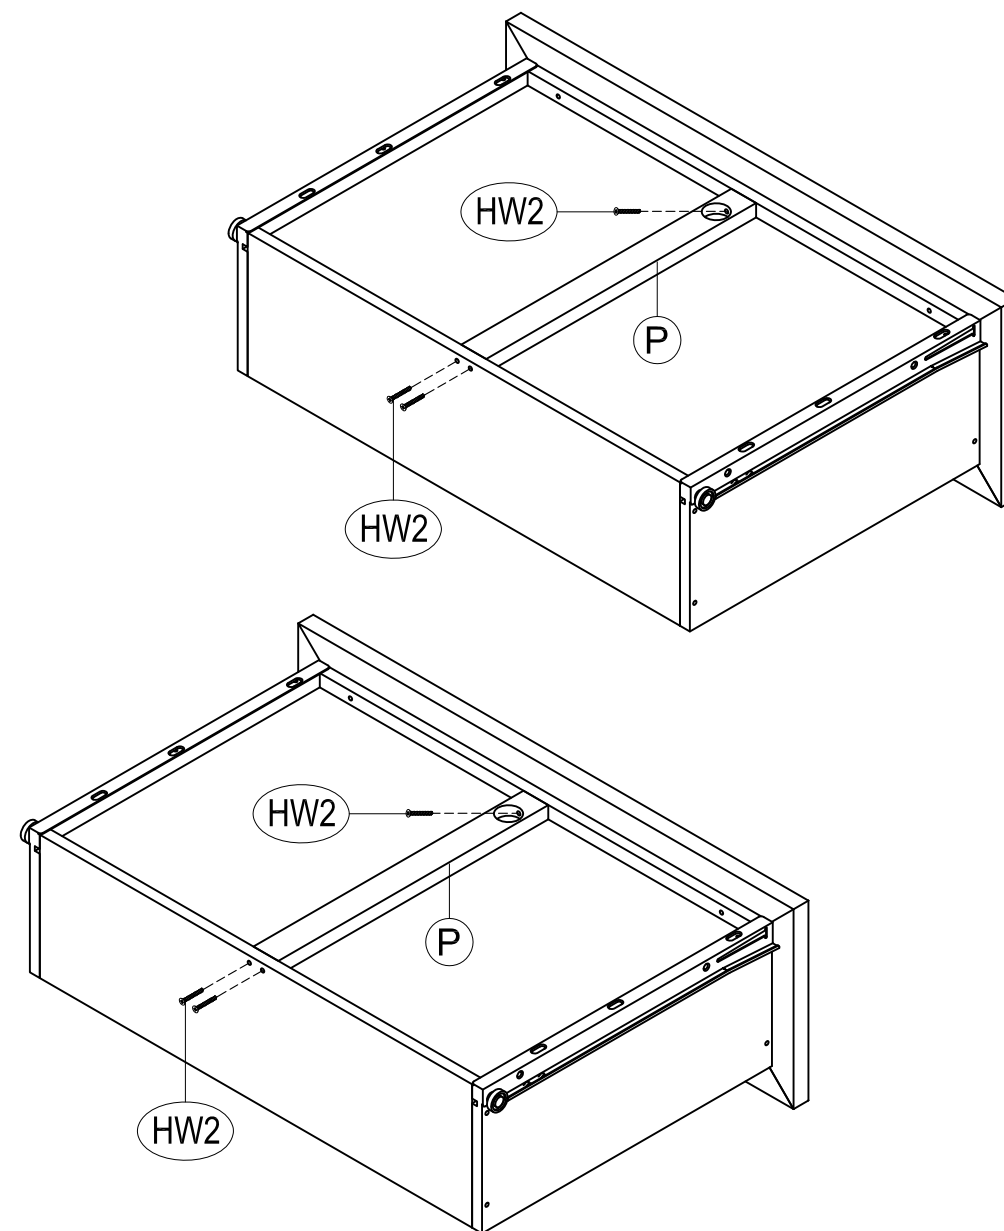


STEP 12 ATTACH DRAWER SUPPORT (P) TO THE BOTTOM SIDE OF DRAWERS USING 1 1/4" FLAT HEAD SCREWS (HW2).

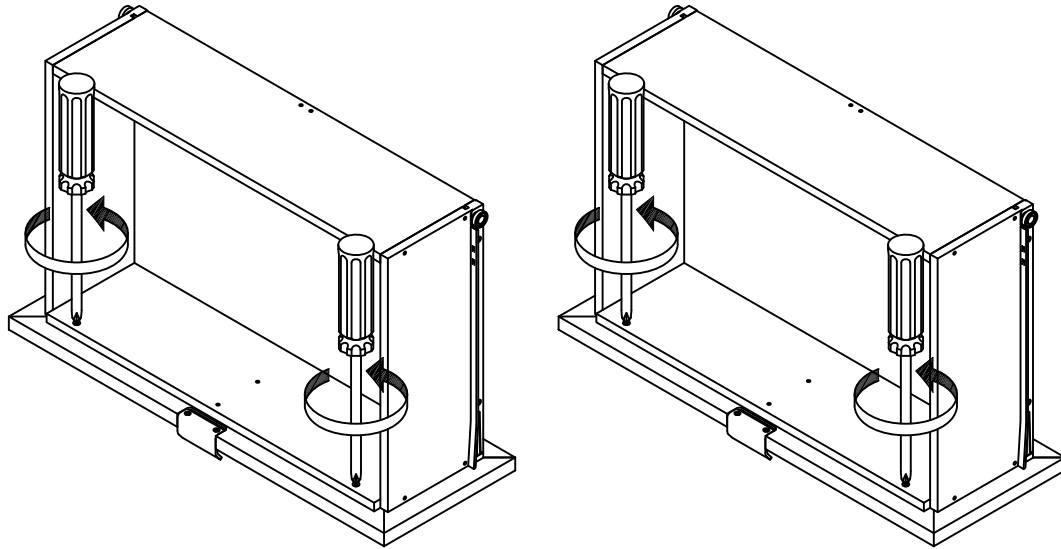


STEP 13 LOOSEN SLIGHTLY THE SCREWS PRE-INSTALLED ON THE BACK OF THE DRAWER FRONTS.

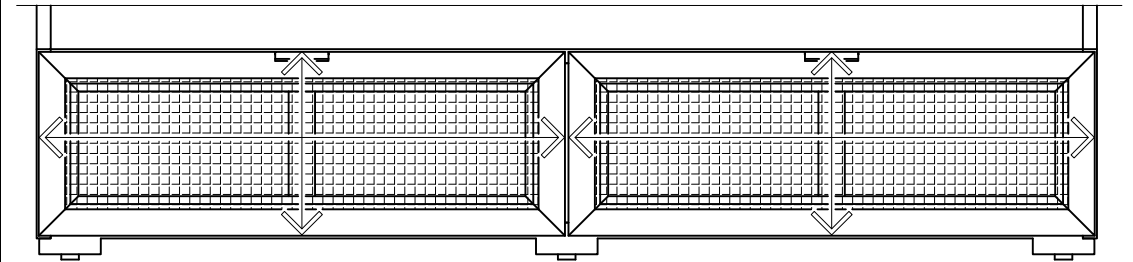

STEP 14 INSERT THE DRAWERS INTO THE UNIT, THEN ADJUST THE DRAWER FRONT PANEL LEFT OR RIGHT AND UP OR DOWN UNTIL THE DRAWER GAPS LOOK PROPORTIONAL.

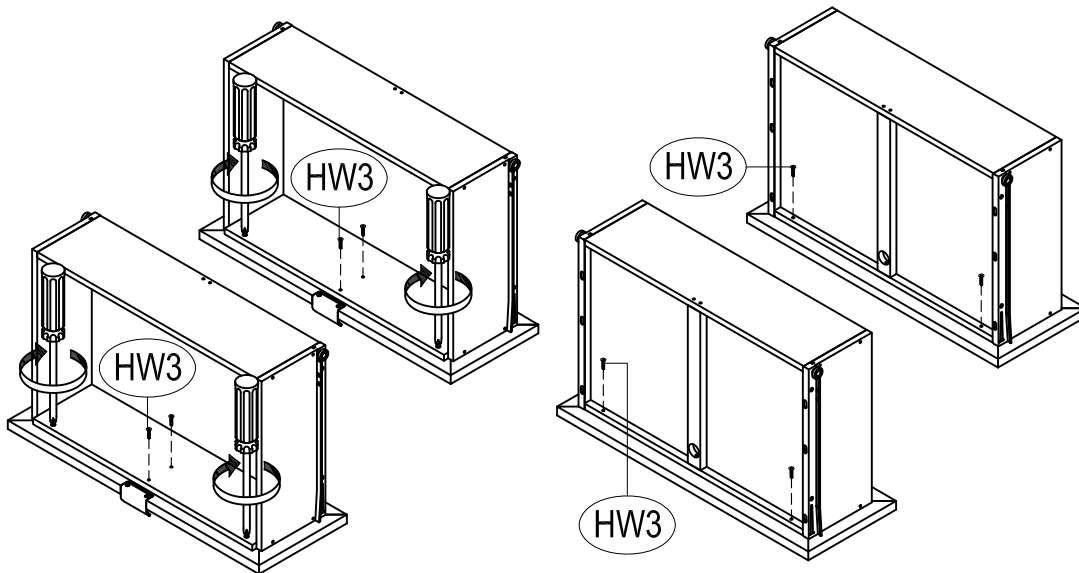

STEP 15 PULL THE DRAWER OPEN SLOWLY AND RE-TIGHTEN THE SCREWS FROM STEP 13. MAKE SURE THE FRONT PANEL DOES NOT MOVE AND LOCK THE DRAWER FRONT PANEL INTO POSITION WITH 3/4" FLAT HEAD SCREWS (HW3).

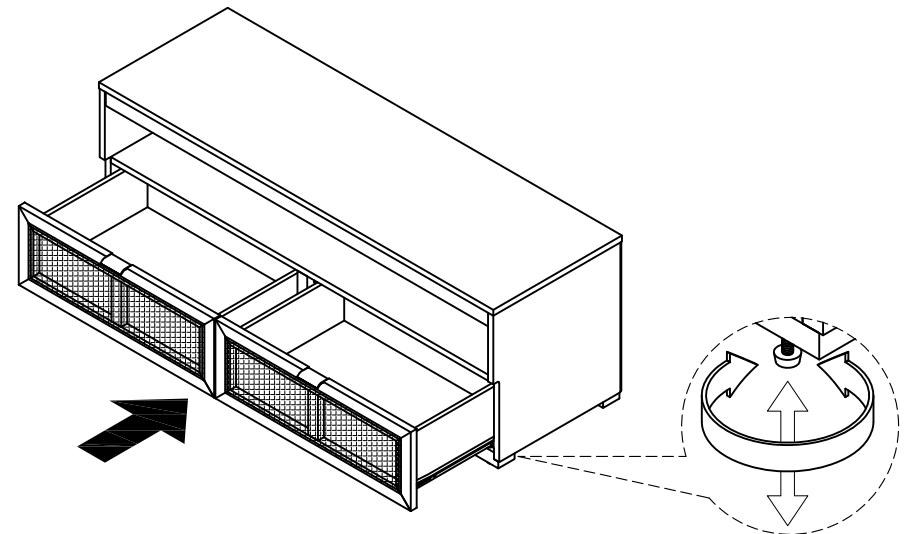

STEP 16 SLIDE THE DRAWERS INTO UNIT. ADJUST THE ADJUSTER THAT HAS ALREADY BEEN ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT.