

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

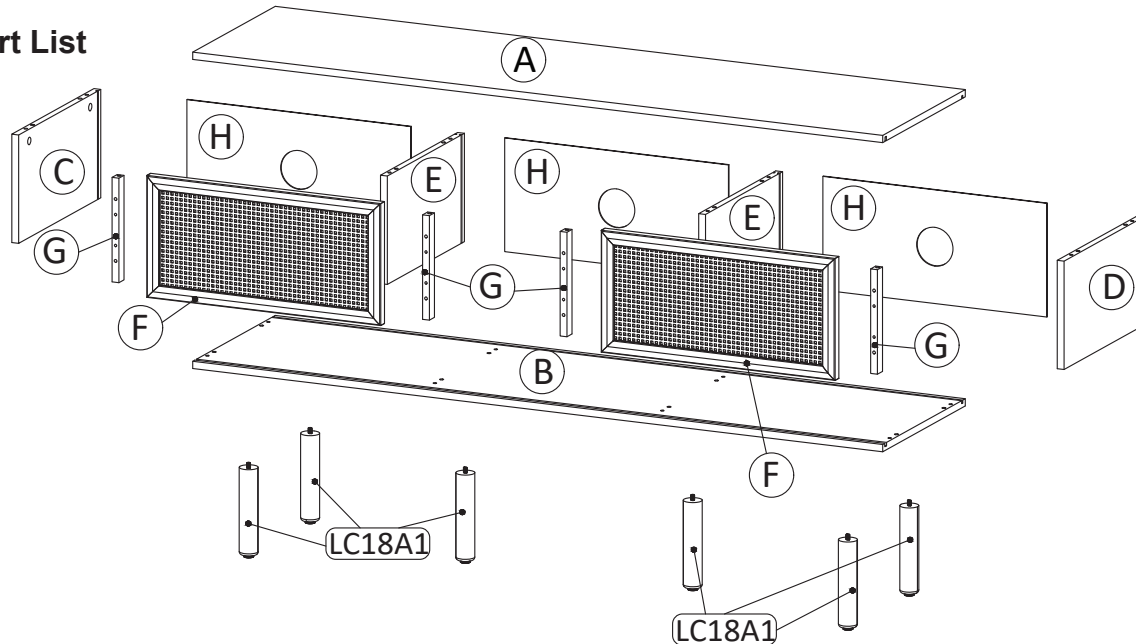

 **SAFAVIEH**
FURNITURE

Model# MED9604

Product Dimensions: 60"Wx16"Dx17"H

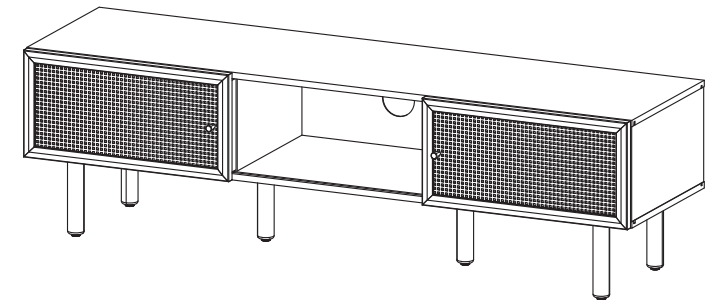







WARNING

This product is intended for use with a
FLAT SCREEN TV ONLY
Maximum Screen Size: 65 inches
Weight Limit: 83.7 lbs
Shelf Load Limit: - lbs
Drawer Load Limit: - lbs
Use with heavier televisions may result
in instability causing tip over resulting in
death or Serious injury.

WARNING

Death or serious injury may occur
when children climb on audio
and/or video equipment furniture.
A remote control or toys placed on
the furnishing may encourage a
child to climb on the furnishing and
as a result the furnishing may tip
over on the child.

Hardware List

HW1x8  $\varnothing 6 \times 35 \text{ mm}$	HW2x8  $\varnothing 15 \text{ mm}$	HW3x8  $\varnothing 15 \text{ mm}$	HW4x16  $\varnothing 8 \times 30 \text{ mm}$	HW5x8  $\varnothing 5 \times 20 \text{ mm}$	HW6x8  $M 7 \times 50 \text{ mm}$
HW7x2  $L 4$	HW8x2 	HW9x2  $M 4 \times 22 \text{ mm}$	HW10x18  $M 3.5 \times 15.5 \text{ mm}$	HW11x8  $M 8 \times 39 \text{ mm}$	HW12x18 
HW13x3 	HW14x24  $M 4.5 \times 12.5 \text{ mm}$	HW15x4  $\updownarrow$	HW16x4 	HW PM2x6 	

Part List & HW For Multi-Box Items

Piece	Description	Qty	Carton Call
A	Top Board	1	1 of 1
B	Bottom Board	1	1 of 1
C	Side Board Left	1	1 of 1
D	Side Board Right	1	1 of 1
E	Center Board	2	1 of 1
F	Frame Door	2	1 of 1
G	Support Frame	4	1 of 1
H	Back Board	3	1 of 1
LC18A1	Leg	6	1 of 1


Piece	Description	Qty	Carton Call
HW1	Cambolt	8	1 of 1
HW2	CamLock	8	1 of 1
HW3	Screw Cap	8	1 of 1
HW4	Dowel Big	16	1 of 1
HW5	Dowel Small	8	1 of 1
HW6	Screw M 7 x 50 mm	8	1 of 1
HW7	Allen Key	2	1 of 1
HW8	Handle	2	1 of 1
HW9	Screw M 4 x 22 mm	2	1 of 1
HW10	Screw M 3.5 x 15.5 mm	18	1 of 1
HW11	Screw M 8 x 39 mm	8	1 of 1
HW12	Wedge	18	1 of 1
HW13	Bumper	3	1 of 1
HW14	Screw M 4.5 x 12.5 mm	24	1 of 1
HW15	Pin Per Top	4	1 of 1
HW16	Pin Sliding Bottom	4	1 of 1
HW PM2	Mounting Plate	6	1 of 1

PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 60 minutes.

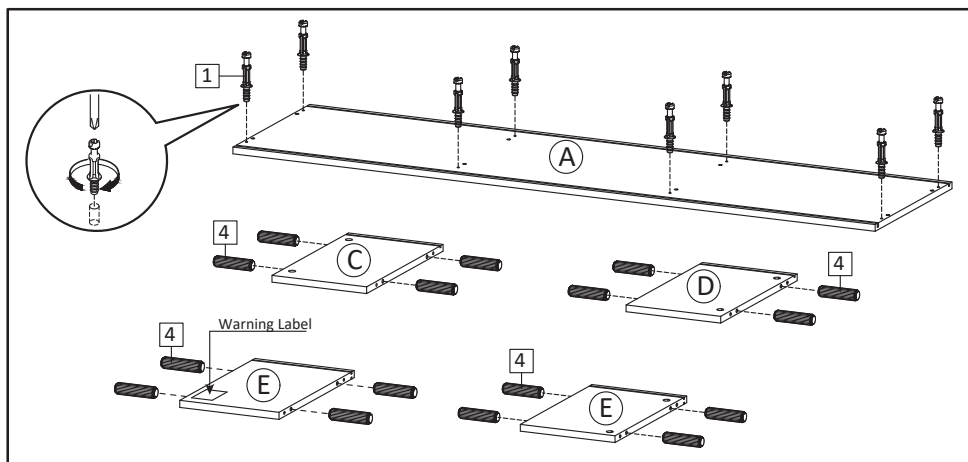


STEP1: Insert Cambolt (HW1) into Top Board (A).
Insert Dowel Big (HW4) into Side Board Left (C), Side Board Right (D) and Center Board (E).

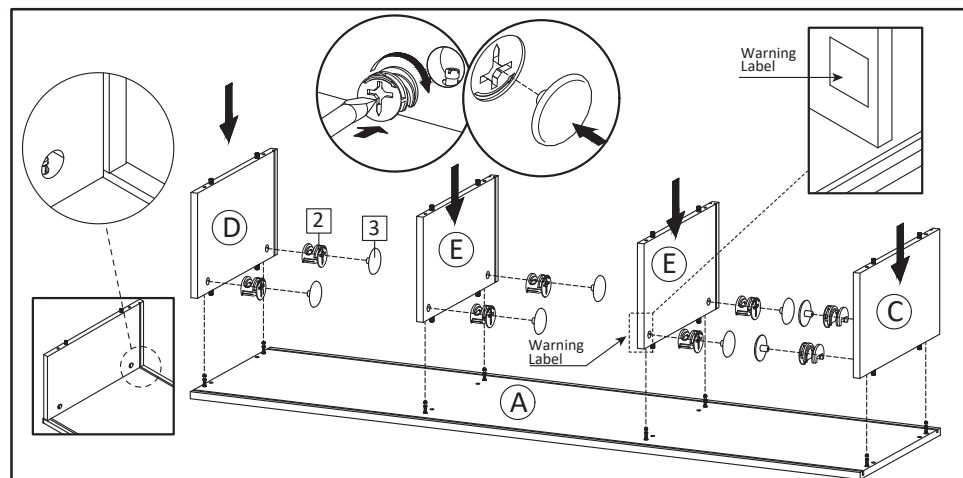


STEP2: Attach Side Board Left (C), Side Board Right (D) and Center Board (E) into Top Board (A).
Insert Camlock (HW2) then tighten using screwdriver.
Put Screw Cap (HW3) over the camlock.

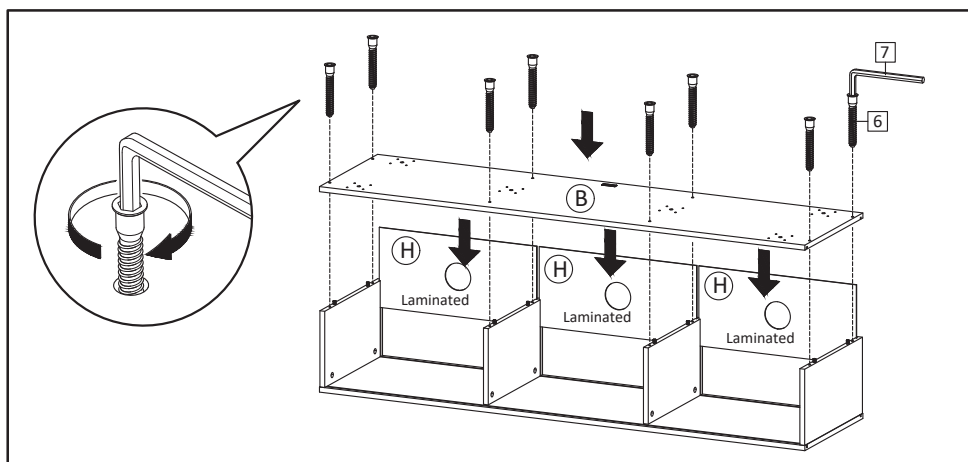


Step3: Insert Back Boards (H) as figure with laminated facing front side.
Put Bottom Board (B) and secure with Screw M7x50 (HW6),
tighten screws using Allen Key (HW7).

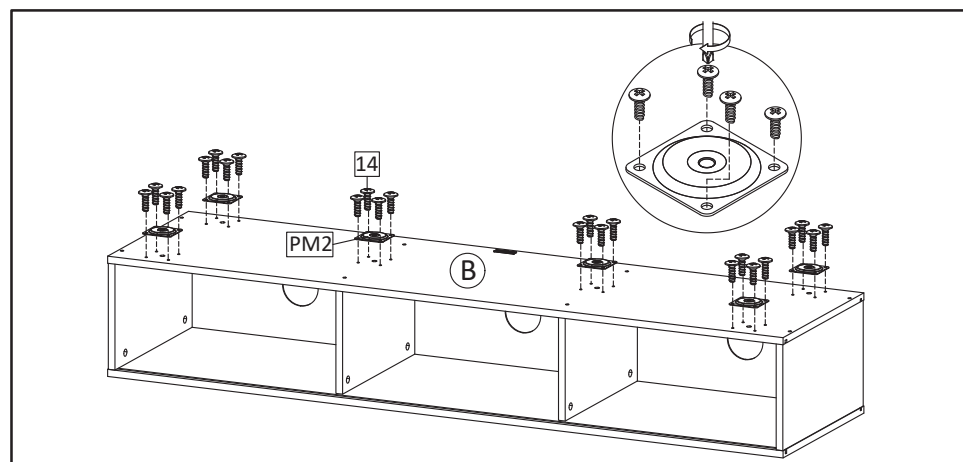


STEP4: Install Mounting Plate (PM2) and secure with
screw M4.5x12.5mm (HW14) on Bottom Board.

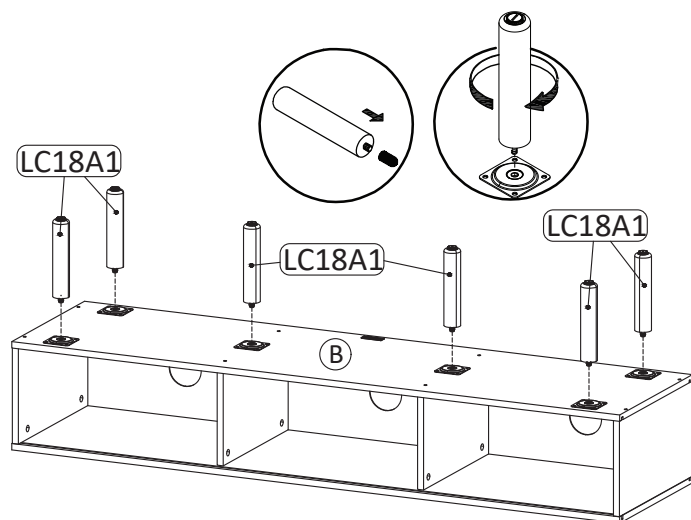


STEP5: Insert Leg (LC18A1) into Mounting Plate, tighten by rotating . the leg clockwise.

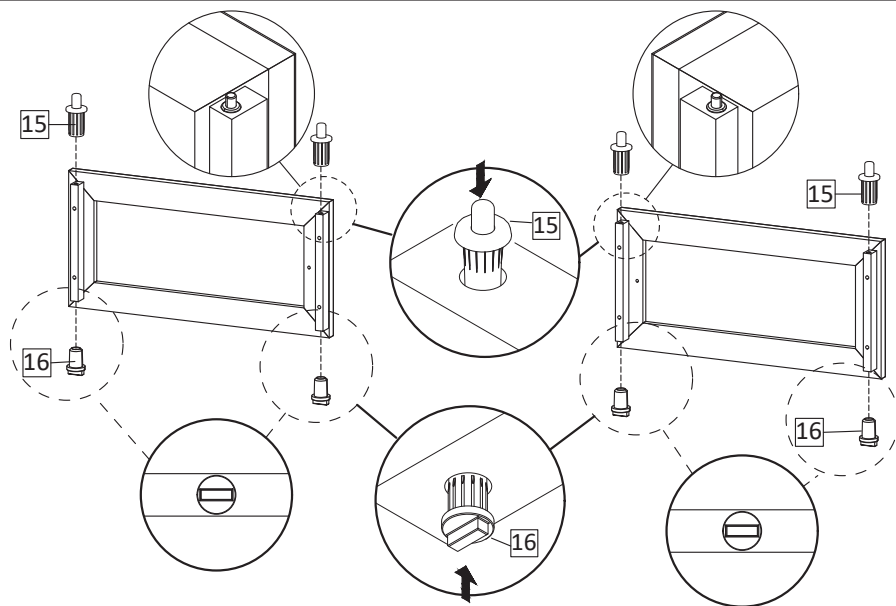


STEP7: Insert Pin Per Top (HW15) and Pin Sliding Bottom (HW16) into Frame Door.

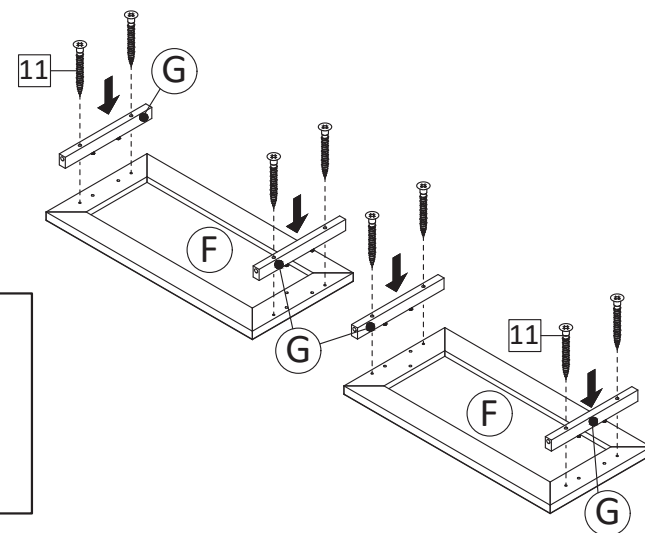


STEP6: Insert Dowel Small (HW5) into Support Frame (G). Insert Support Frame (G) and secure with Screw M8x39 (HW11) tighten screws into Frame Door (F).

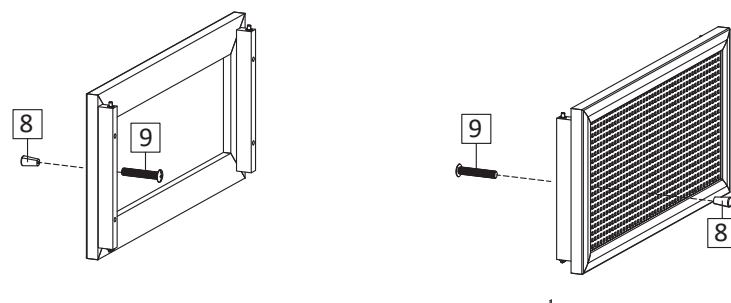

STEP8: Install Handle (HW8) into Frame Door and secure with Screw M4x22 mm (HW9).

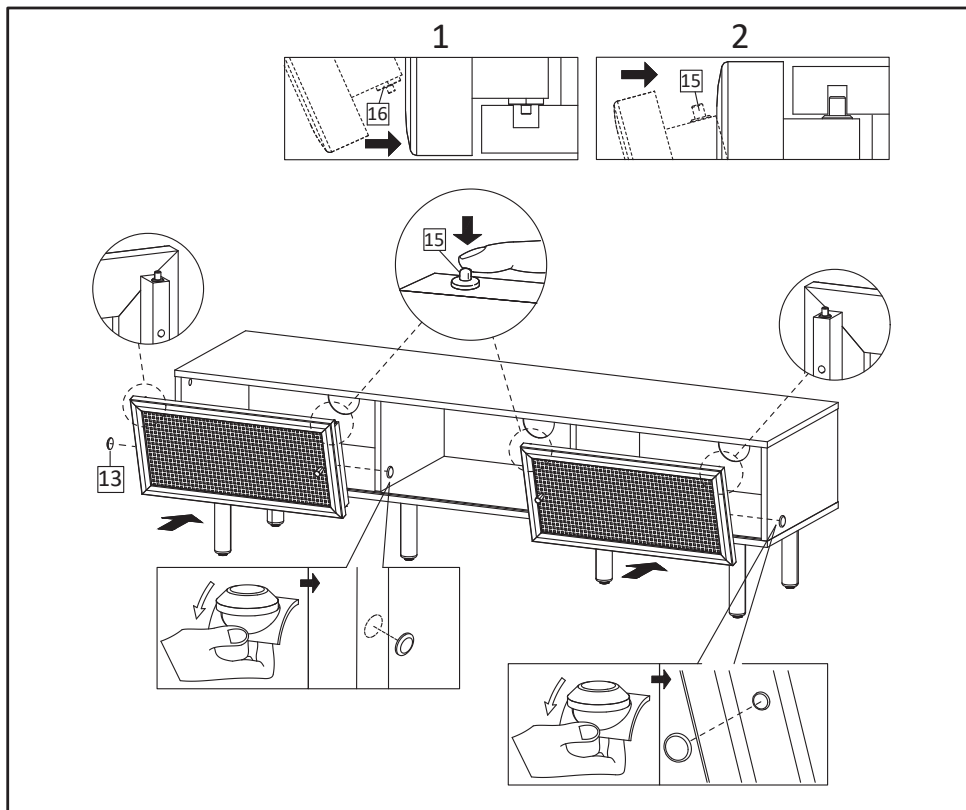


STEP9: Peel the back paper of Bumper (HW13) then 2 pcs on Frame Door Left, 1 pc on Frame Door Right, position as shown in the figure. Hold the frame door with position of the upper pin shown in facing upward. Put the frame door by inserting it to the groove sliding track on Bottom Board (1), Bring the upper Frame Door closer to the Top Board, push down the insert pin to enable inserting the Frame Door to Top Board until you hear 'Click' sound and door has been securely installed. Repeat this step for the other door. Slide the doors to right and left ensuring the doors has been placed properly in the provided track.

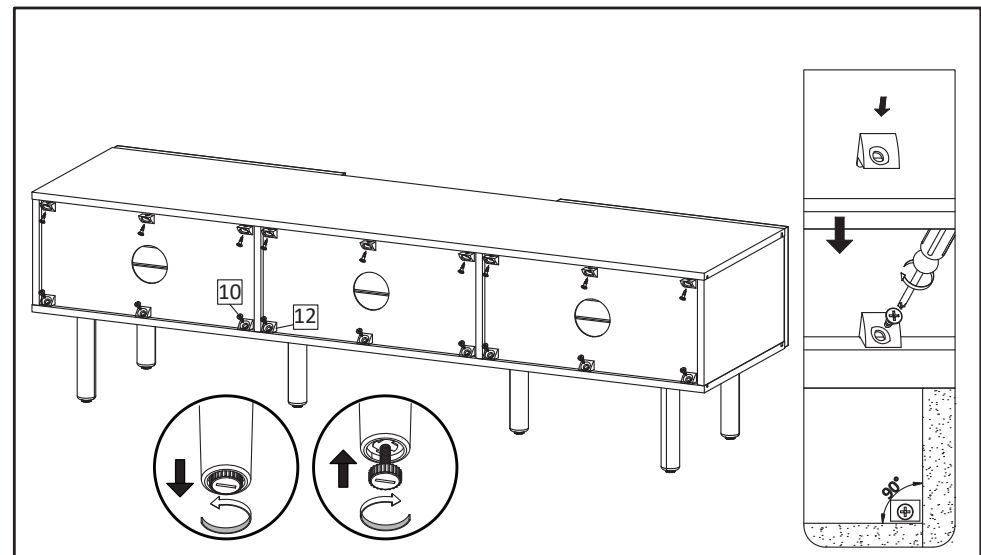

STEP10: Use Wedge (HW12), Screw M 3.5 x15.5 (HW10) to tighten the back of media stand by using screwdriver. Please align the top board and bottom board in 90° position against the side board, before securing the wedges (HW12).

Place your furniture on level floor. The legs come with adjustable leveller, adjust it as needed until your furniture sit steady on the floor.

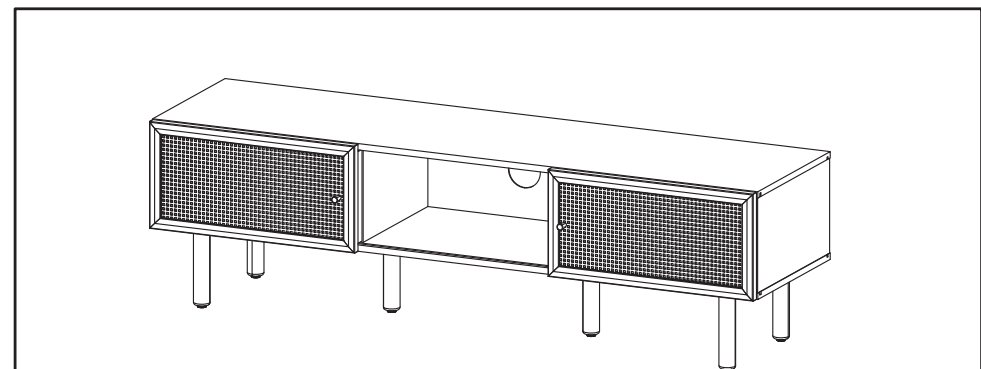




STEP11: Assembly is complete.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE



Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.


Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

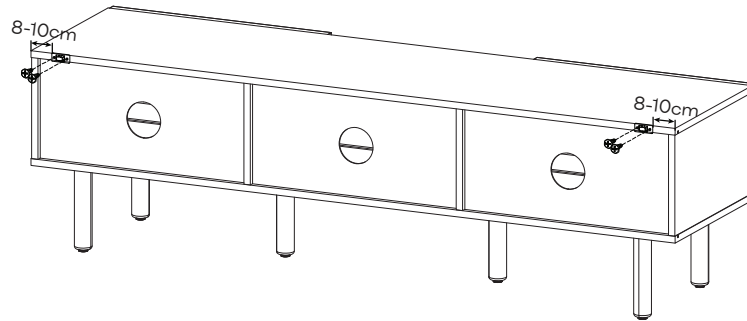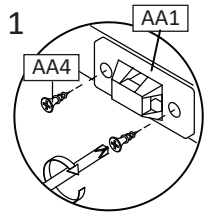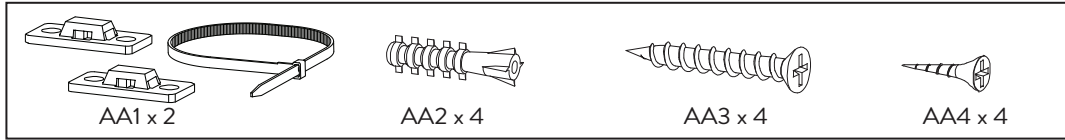




2

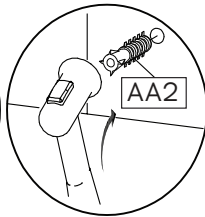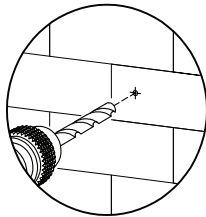

3

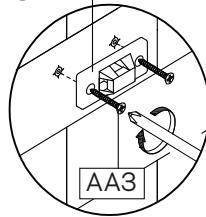

4

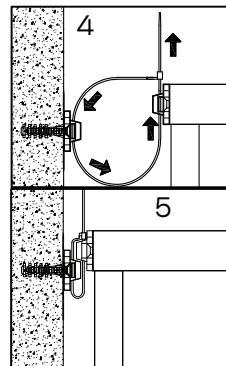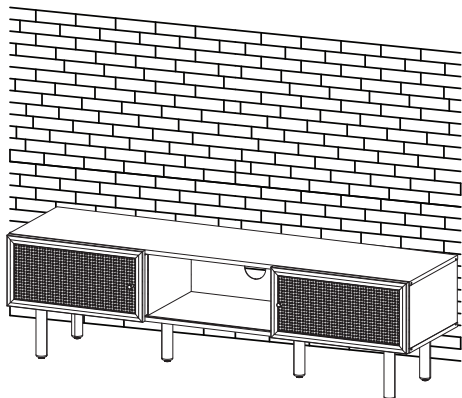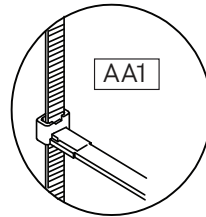

5

