NOTICE

- *Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- *This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- *This item may require periodic tightening.
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discolorration or softtening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax shich should be used on a reguler basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

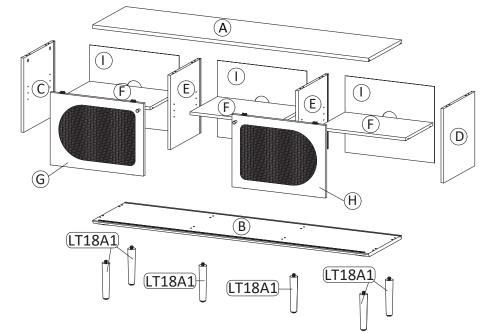



Model# MED9610

Product Dimensions: 59"Wx15"Dx24"H

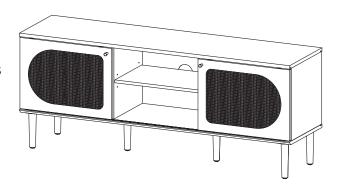

A WARNING

This product is intended for use with a FLAT SCREEN TV ONLY
Maximum Screen Size: 65 inches
Weight Limit: 83.6 lbs
Shelf Load Limit: - 21bs
Drawer Load Limit: - lbs
Use with heavier televisions may result in instability causing tip over resulting in death or Serious injury.



Death or serious injury may occur when children climb on audio and/or video equipment furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on the child.

Hardware List

HW1x8		HW3x8	HW4x16	HW5x8	HW6x2
Ø 6 x 35 mm	Ø 15 mm		Ø 8 x 30 mm	M 7 x 50 mm	L 4
HW7x12	HW8x4	HW9x4	HW10x16	HW11x2	HW12x2
		(Cook) (Down (Down))			3
HW13x2	HW14x1	HW15x24	M 3.5 x 13 mm HW16x24	1 13 4 / 4 = 0 /	M 4 x 25 mm HW PM2x6
		M 4.5 x 12.5 mm		M 3.5 x 15.5 mm	TIVV PIVIZXO

Part List & HW For Multi-Box Items


Piece	Description	Qty	Carton Call
А	Top Board	1	1 of 1
В	Bottom Board	1	1 of 1
С	Side Board Left	1	1 of 1
D	Side Board Right	1	1 of 1
Е	Center Board	2	1 of 1
F	Adjustable Shelf	3	1 of 1
G	Door Left	1	1 of 1
Н	Door Right	1	1 of 1
1	Back Board	3	1 of 1
LT18A1	Leg	6	1 of 1

Piece	Description	Qty	Carton Call
HW1	Cambolt	8	1 of 1
HW2	CamLock	8	1 of 1
HW3	Screw Cap	8	1 of 1
HW4	Dowel	16	1 of 1
HW5	Screw M 7 x 50 mm	8	1 of 1
HW6	Allen Key	2	1 of 1
HW7	Shelf Pin	12	1 of 1
HW8	Sliding Top	4	1 of 1
HW9	Sliding Bottom	4	1 of 1
HW10	Screw M 3.5 x 13 mm	16	1 of 1
HW11	Handle	2	1 of 1
HW12	Screw M 4 x 25 mm	2	1 of 1
HW13	Stopper	2	1 of 1
HW14	Bumper	1	1 of 1
HW15	Screw M 4.5 x 12.5 mm	24	1 of 1
HW16	Wedge	24	1 of 1
HW17	Screw M 3.5 x 15.5 mm	24	1 of 1
HW PM2	Mounting Plate	6	1 of 1


PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.


If any part is missing or damaged, do not attempt to assemble the product. Estimated Assembly Time: 60 minutes.

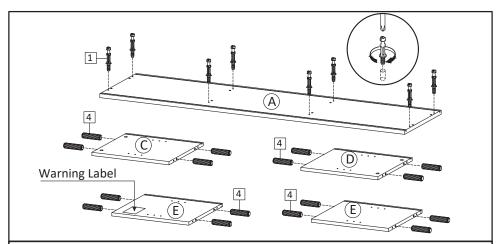


STEP1: Insert Cambolt (HW1)into Top Board (A). Insert Dowel (HW4) into Side Board Left (C), Side Board Right (D) and Center Boards (E).

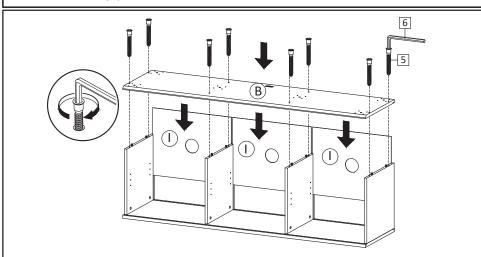


Step3: Insert Back Boards (I) as figure. Put Bottom Board (B) and secure with Screw M7x50 (HW5), tighten screws using Allen Key (HW6).

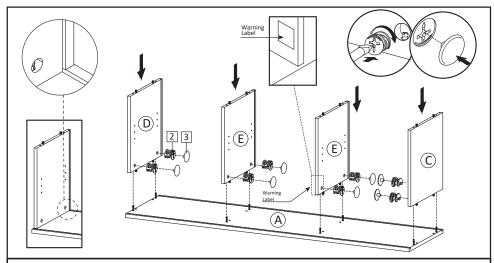


STEP2: Attach Side Board Left (C), Side Board Right (D) and Center Boards (E),into Top Board (A). Insert Camlock (HW2) then tighten using screwdriver. Put Screw Cap (HW3) over the camlock.

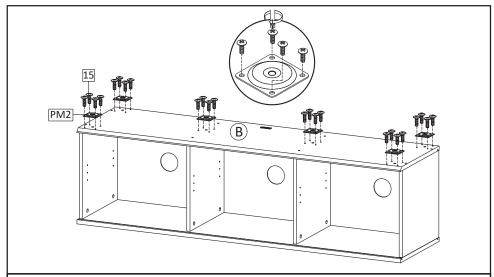


STEP4: Install Mounting Plate (PM2) and secure with screw M4.5x12.5mm (HW15) on Bottom Board.

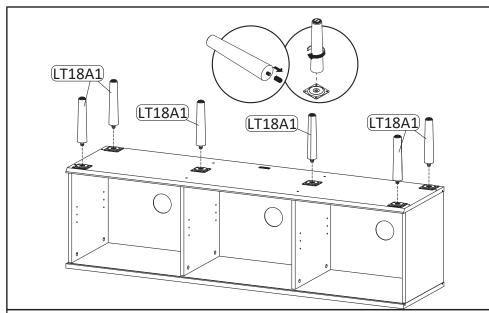


STEP5: Insert Leg (LT18A1) into Mounting Plate, tighten by rotating . the leg clockwise.

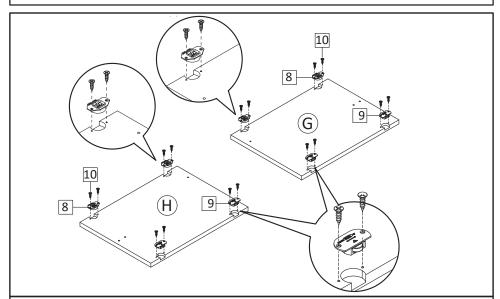


STEP7: Insert Sliding Top (HW8) and Sliding Bottom (HW9) using Screw M3.5x13mm (HW10) into Door Left (G) and Door Right (H). Tighten with a screwdriver.

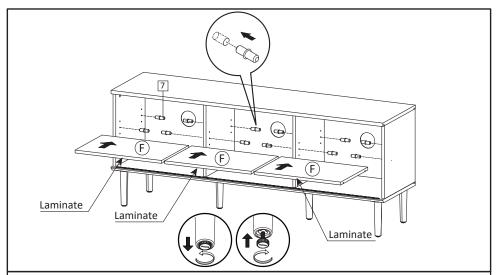

STEP6: insert Shelf Pin (HW7) into the between Side boards and Center boards on the desired level. Then place the Adjustable Shelf (F) onto the Shelf Pin. Place your furniture on level floor. The legs come with adjustable leveller, adjust it as needed until your furniture sit steady on the floor.

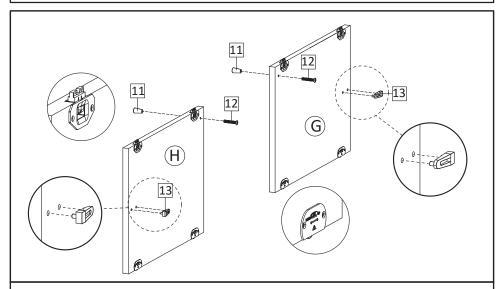

STEP8: Insert Handle (HW11) and Screw M4x25 mm (HW12) into Door Left dan Door Right. Install Stopper (HW13).

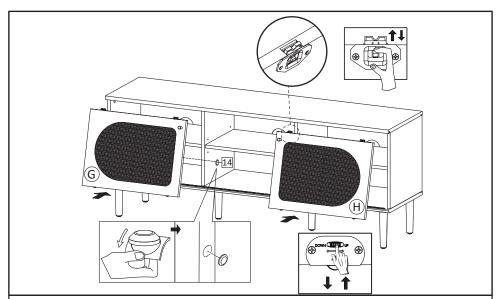


Step9: Peel the back paper of Bumper (HW14) then 1 pcs on Door Left, 1 pc, position as shown in the figure.

Slide in the doors and insert the Sliding Top (HW8) pin into the groove.


Position the Sliding Bottom (HW9) into the groove.

Once all in the right position, release the button on Sliding Roller Adjust gap of the door, by scroll the button on Sliding Roller (HW9).

Follow the down and up direction.

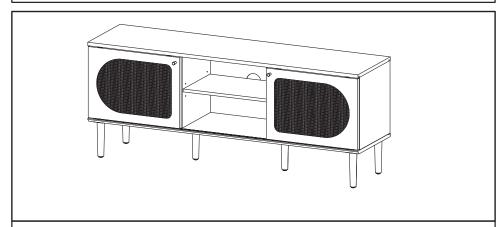

STEP11: Assembly is complete.

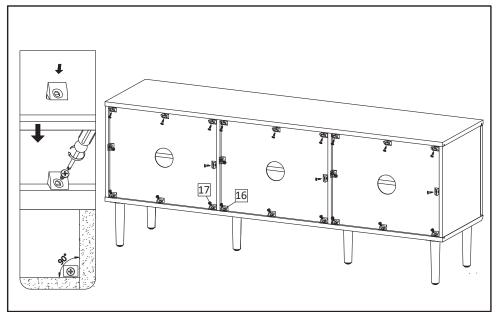

STEP10: Use Wedge (HW16), Screw M 3.5 x15.5 (HW17) to tighten the back of media stand by using screwdriver. Please align the top board and bottom board in 90° position againt the side board, before securing the wedges (HW16).

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.



