

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

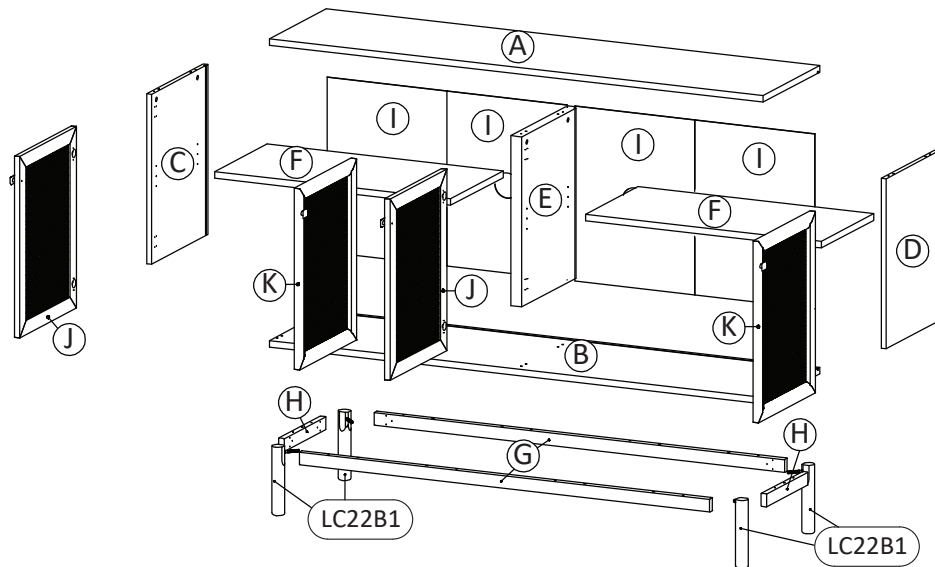

 **SAFAVIEH**
FURNITURE

Model# MED9611

Product Dimensions: 63"Wx16"Dx32"H

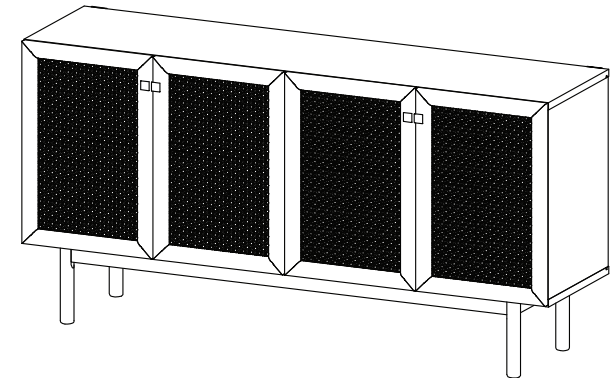







WARNING :

WEIGHT CAPACITY: 68 LBS.

Warning : Do not stand on Media stand.

Warning : Do not over torque bolts.

Hardware List

HW1x6  Ø 6 x 35 mm	HW2x6  Ø 15 mm	HW3x22  Ø 8 x 30 mm	HW4x6  M 7 x 50 mm	HW5x1  L 4	HW6x12  M 6.4 x 53 mm
HW7x8 	HW8x24  M 4 x 16 mm	HW9x4 	HW10x4 	HW11x1 	HW12x16  9 x 14 x 10 mm
HW13x16  M 3.5 x 15.5 mm	HW14x4 	HW15x4  M 4 x 25 mm	HW16x2 	HW17x48  M 4.5 x 12.5 mm	HW18x2  Ø15 mm
HW19x14  M 6 x 12.5 mm	HW20x4  Ø15 mm	HW US11x1 	HW BC410x4 	HW HS26Ax8 	

Part List & HW For Multi-Box Items

Piece	Description	Qty	Carton Call
A	Top Board	1	2 of 2
B	Bottom Board	1	2 of 2
C	Side Board Left	1	2 of 2
D	Side Board Right	1	2 of 2
E	Centre Board	1	1 of 2
F	Adjustable Shelf	2	1 of 2
G	Bottom Skirt 1	2	2 of 2
H	Bottom Skirt 2	2	2 of 2
I	Back Board	4	2 of 2
J	Frame Door Left	2	1 of 2
K	Frame Door Right	2	1 of 2
LC22B1	Leg	4	1 of 2

Piece	Description	Qty	Carton Call
HW1	Cambolt	6	1 of 2
HW2	CamLock	6	1 of 2
HW3	Dowel	22	1 of 2
HW4	Screw M 7 x 50 mm	6	1 of 2
HW5	Allen Key	1	1 of 2
HW6	Screw M 6.4 x 53 mm	12	1 of 2
HW7	Shelf Support	8	1 of 2
HW8	Screw M 4 x 16 mm	24	1 of 2
HW9	Nut	4	1 of 2
HW10	Spring Washer	4	1 of 2
HW11	Wrench	1	1 of 2
HW12	Wedge	16	1 of 2
HW13	Screw M 3.5 x 15.5 mm	16	1 of 2
HW14	Handle	4	1 of 2
HW15	Screw M 4 x 25 mm	4	1 of 2
HW16	List Joint	2	2 of 2
HW17	Screw M 4.5 x 12.5 mm	48	1 of 2
HW18	Screw Cap	2	1 of 2
HW19	Screw M 6 x 12.5 mm	14	1 of 2
HW20	Screw Cover	4	1 of 2
HW US11	Anti Deflection Bar	1	2 of 2
HW BC410	Corner Brace	4	1 of 2
HW HS26A	Hinge	8	1 of 2

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

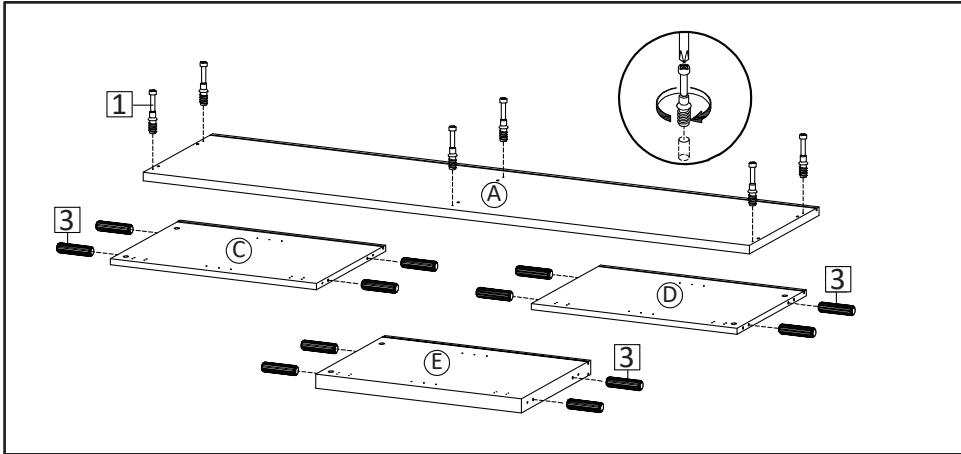


STEP1: Insert Cambolt (HW1) into Top Board (A)
Insert Dowel (HW3) into Center Board (E) ,
Side Board Left (C) and Side Board Right (D)

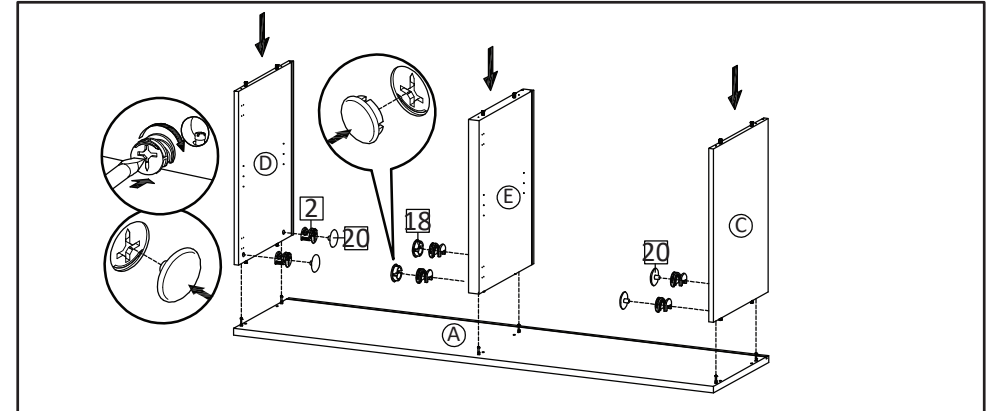

STEP2: Attach Side Board Left (C) , Side Board Right (D) , Center Board (E)
into Top Board (A). Insert Camlock (HW2) then tighten using screwdriver.
Put Screw Cover (HW20) over the screw on Side Boards (C) & (D) ,
and put Screw Cap (HW18) over the screw on Center Board (E).

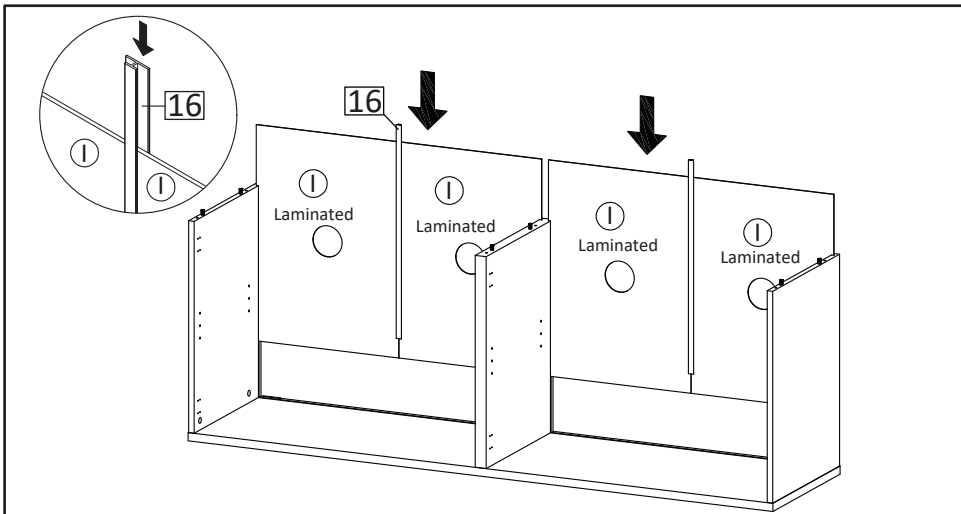

STEP3: Insert Backboard (I) as shown in figure above, and slide
List Joint (HW16) in-between the two backboards.

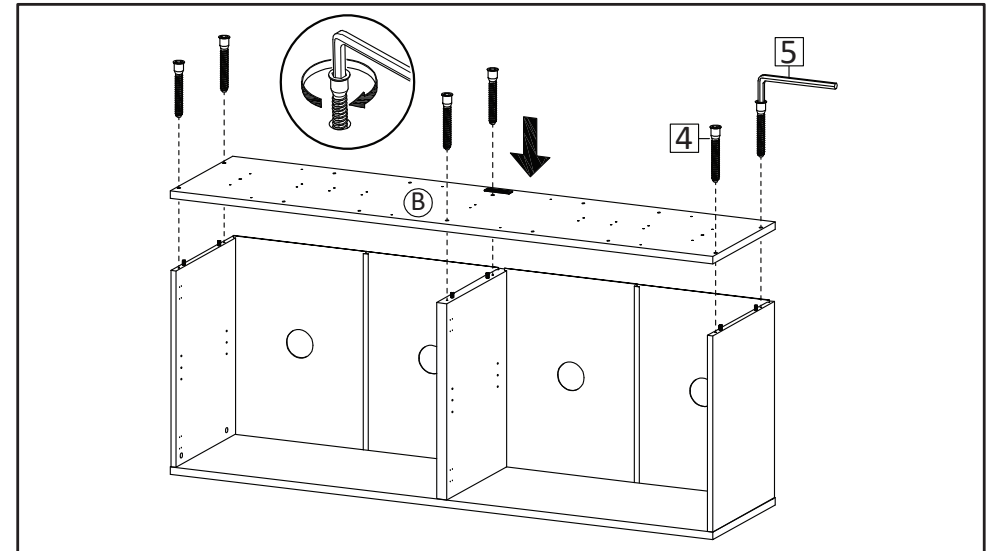

STEP4: Place Bottom Board (B) over and secure with
Screw M7x50 (HW4). Tighten screws using Allen Key (HW5).

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

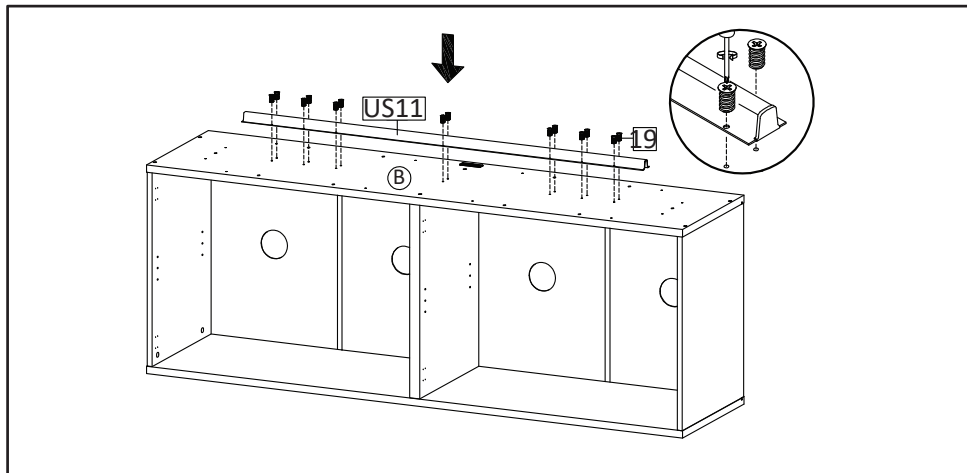


STEP5: Place Anti Deflection Bar (HW US11) ,
secure with screw M6x12,5 (HW19) using screwdriver.

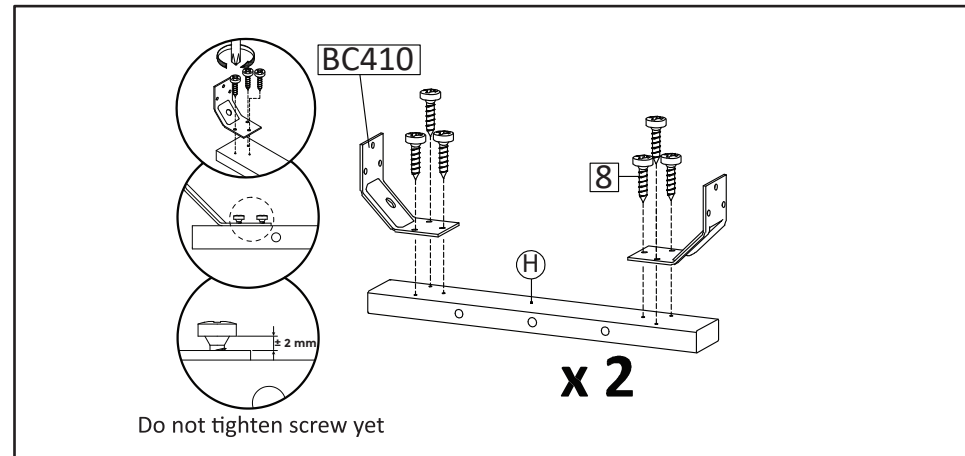

STEP6: Now lets assemble the bottom skirt. Start with installing
Corner Brace (HW BC410) into Bottom Skirt 2 (H)
using Screw M4x16 (HW8). Do not overtighten the screws yet,
leave around 2mm gap.

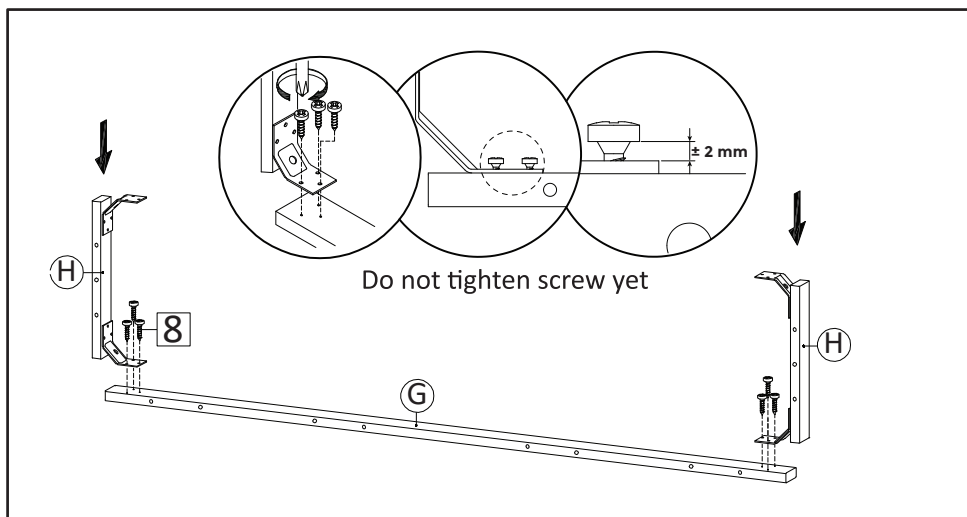


STEP7: Combine the Bottom Skirt 2 from step 6 with Bottom skirt 1 (G),
using Screw M4x16 (HW8). Do not overtighten the screws yet,
leave around 2mm gap.

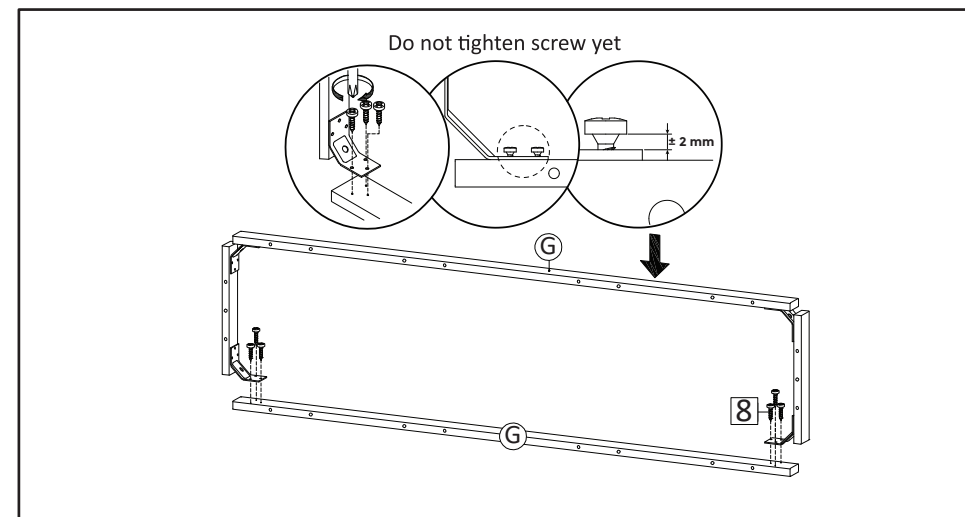


STEP8: Combine components from step 7 with remaining
Bottom skirt 1 (G), using Screw M4x16 (HW8).
Do not overtighten the screws yet, leave around 2mm gap.

PREPARATION


- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

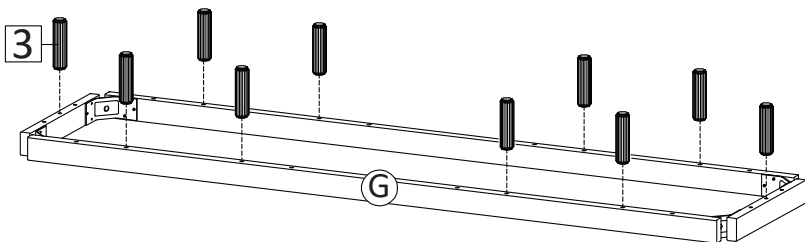


STEP9: Insert Dowel (HW3) into assembled bottom skirt.

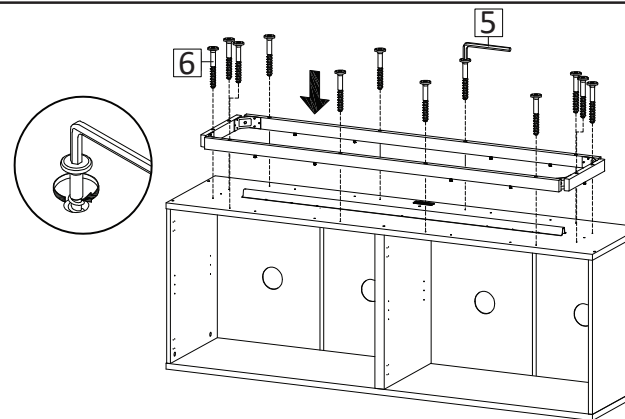

STEP10: Bring the assembled bottom skirt and insert into Bottom Board of the cabinet. Secure with Screw M6.4 x 53 (HW6) using Allen Key (HW5)

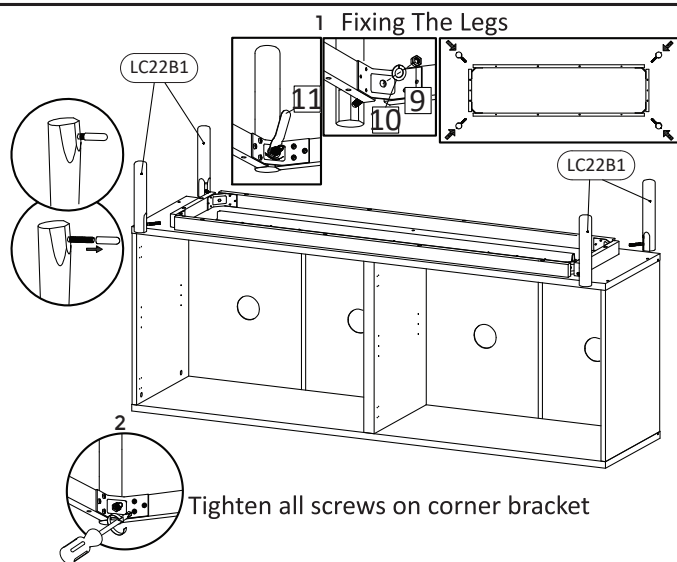

STEP11: Remove plastic cap from Legs. Insert the bolt of the Leg (LC22B1) into hole of corner brace as shown in figure. Insert Spring Washer (HW10) first into the hanger bolt of leg, then followed by Nut (HW9), tighten all the nuts using provided Wrench (HW11). Ensure that all legs have been tightened then tighten all screws on the corner brace.

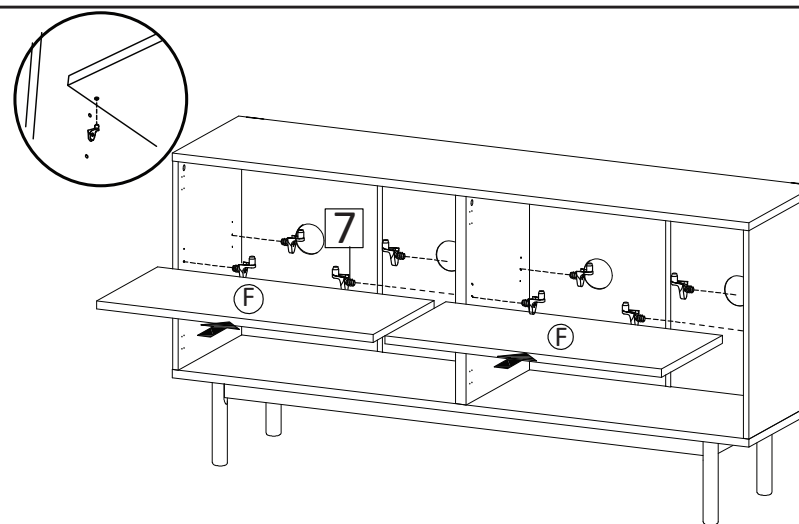

STEP12: After bringing the product upright, insert Shelf Support (HW7) into the holes on Sideboard & Centerboard, on the desired level. Then place the Adjustable Shelf (F) by inserting the hole on the shelf into the shelf support

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

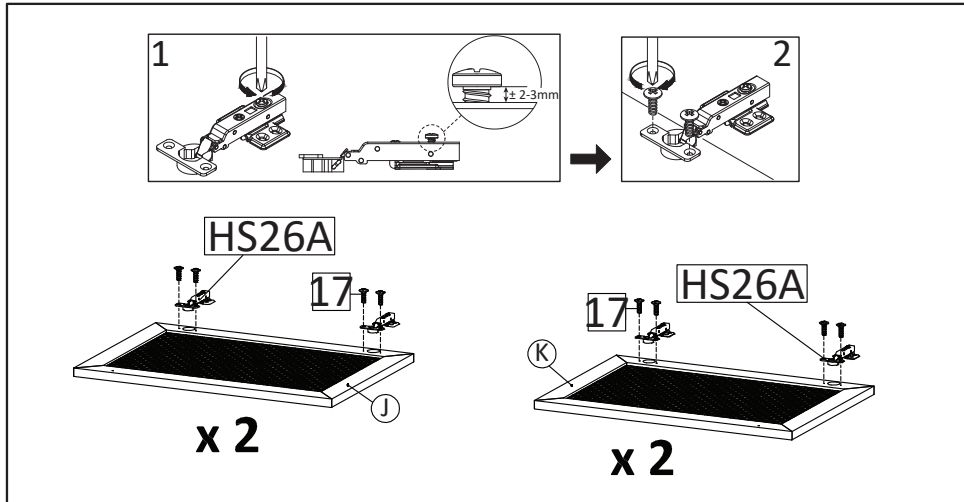


STEP13: Insert Hinge (HW HS26A) into pre-hole in Frame Door Left (J) and Frame Door Right (K). Secure with Screw M4.5 x 12.5 (HW17).

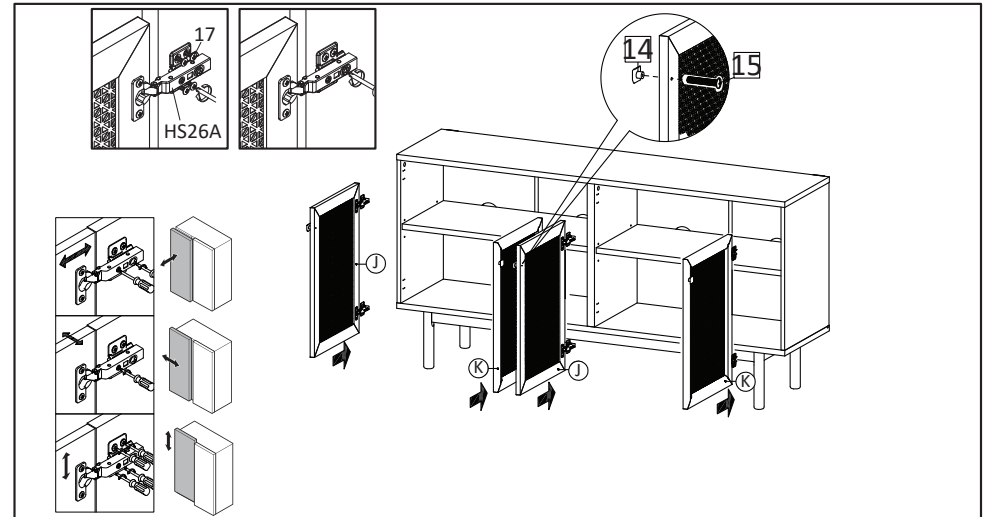

STEP14: Install Frame Door Left (J), Frame Door Right (K) into Side Board Left, Side Board Right and Center Board.

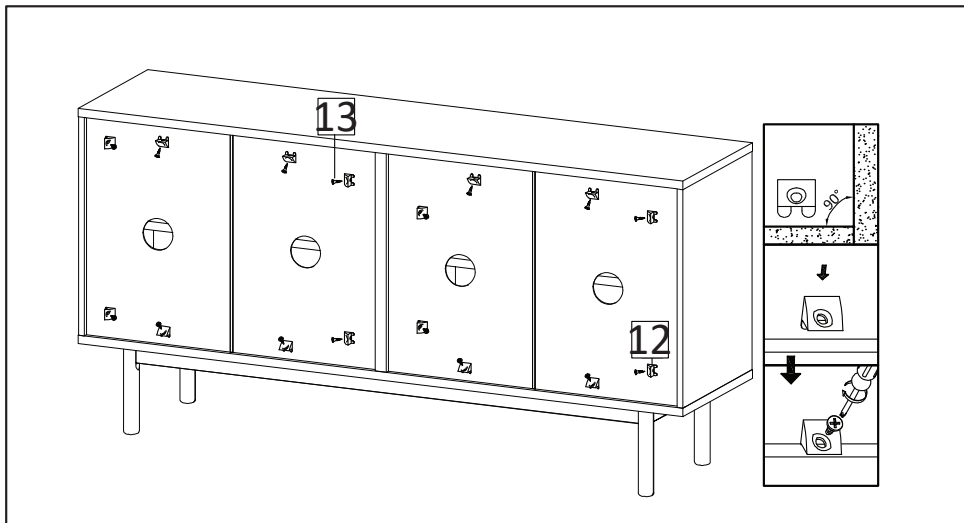

STEP15: Using Wedge (HW12) and Screw M3.5x15.5 (HW13), tighten the back of media stand with screwdriver.

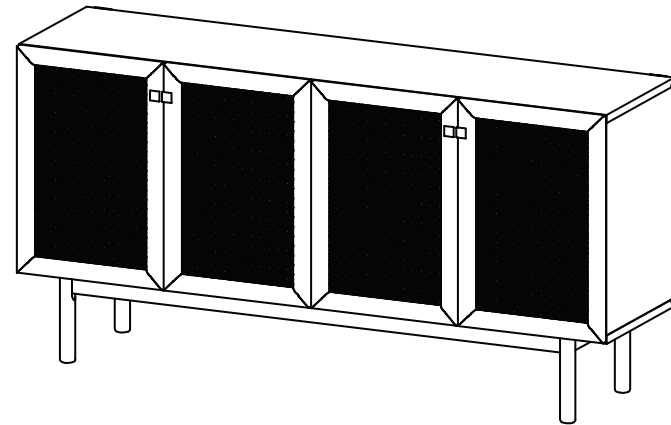



STEP16: Assembly is completed.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.




Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

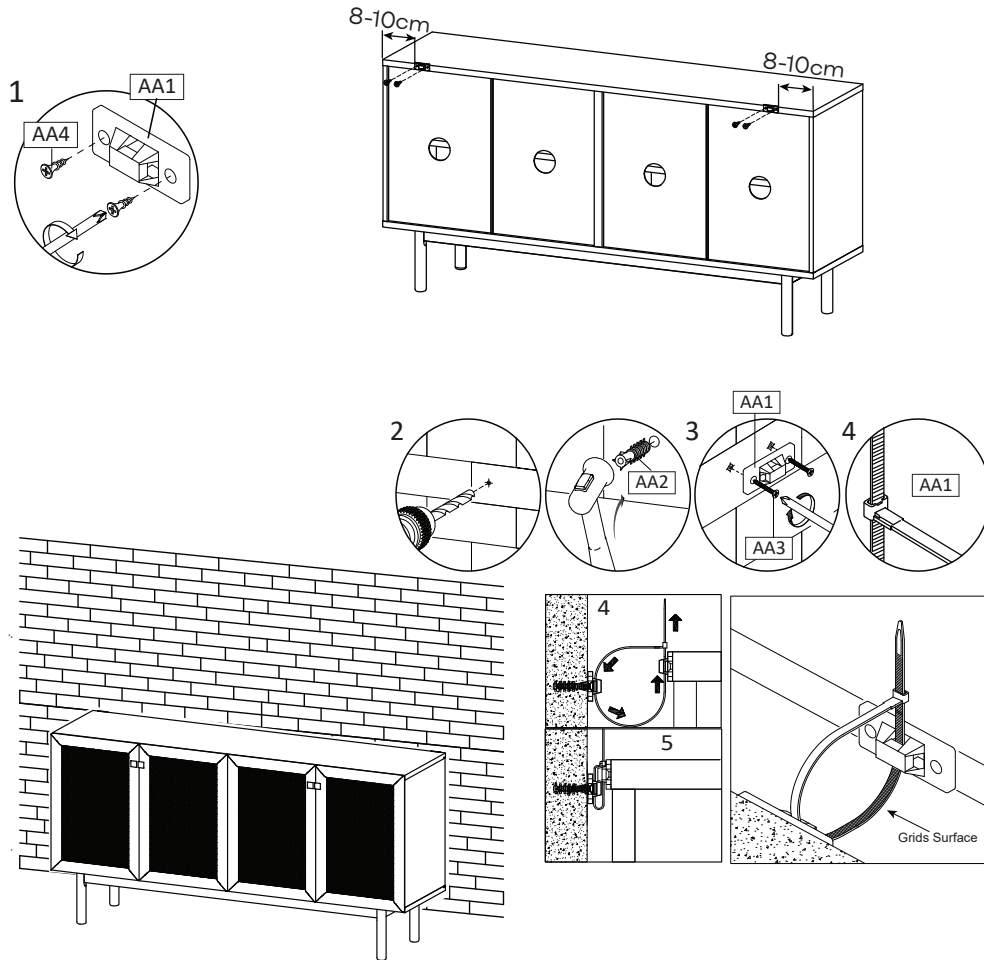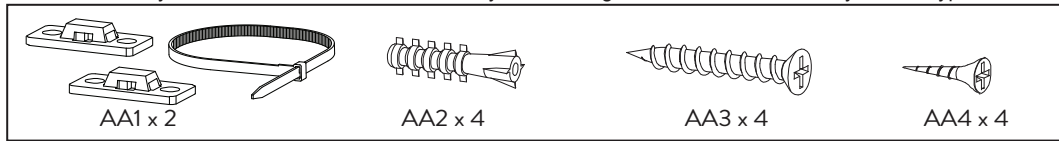

Installation Instructions :



1. Attach bracket (AA1) securely to the back top of the furniture using screw (AA4) provided. Allow 8 - 10 cm from each side.
2. Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs (AA2).
3. Locate the other bracket (AA1) on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line.
4. Lace the end of the restraints strap through the larger hole in each bracket. Ensure the restraints strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed.
5. Make sure that the strap is securely laced & locked.

HOW TO ADJUST HINGES

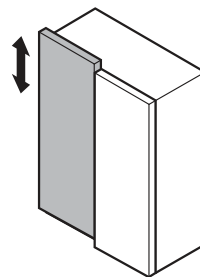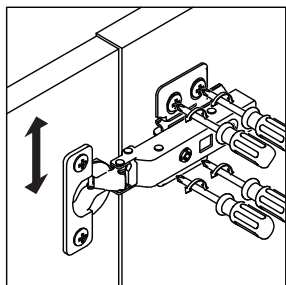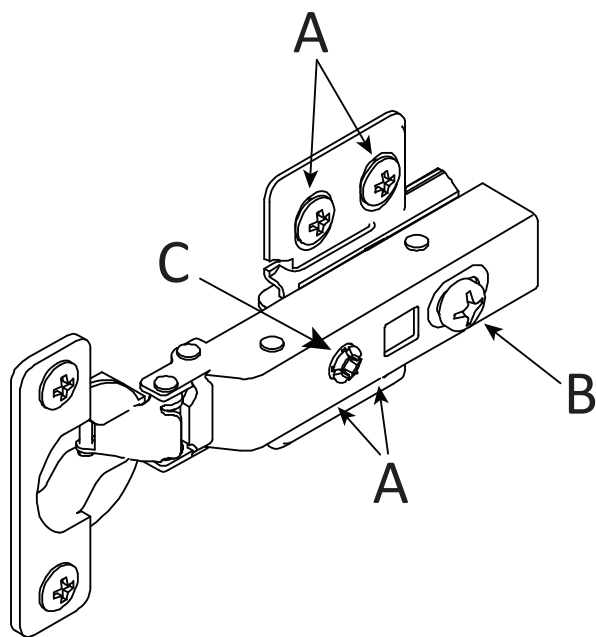



To adjust the vertical height.

Loosen the four screws “A” on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

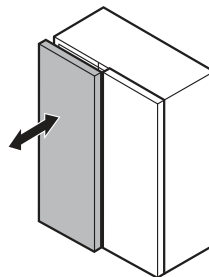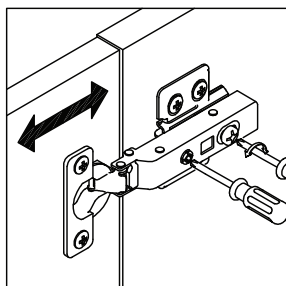

To adjust depth.

Loosen screw “B” and adjust door, if the door can not be adjusted, please loosen screw “C”, then try again. Tighten screw “B” and “C”.

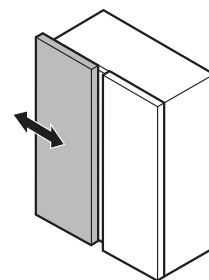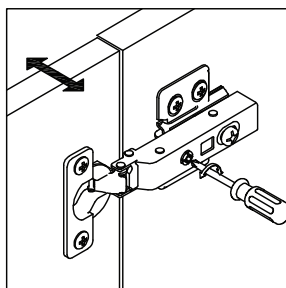

To adjust side ways.

Turn screw “C” on BOTH hinges on each door.