

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

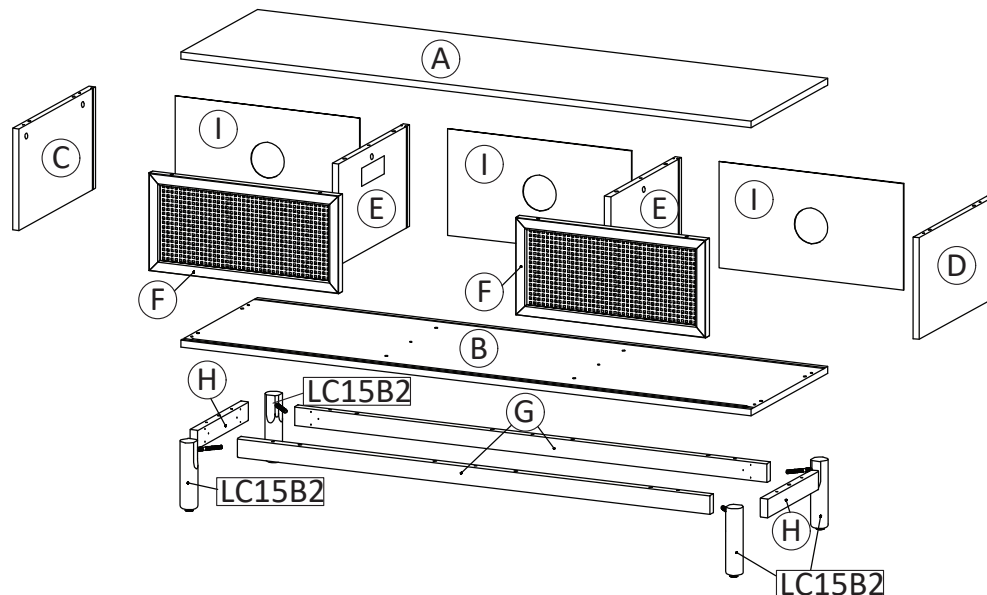

 **SAFAVIEH**
FURNITURE

Model# MED9619

Product Dimensions: 53"Wx15"Dx16"H

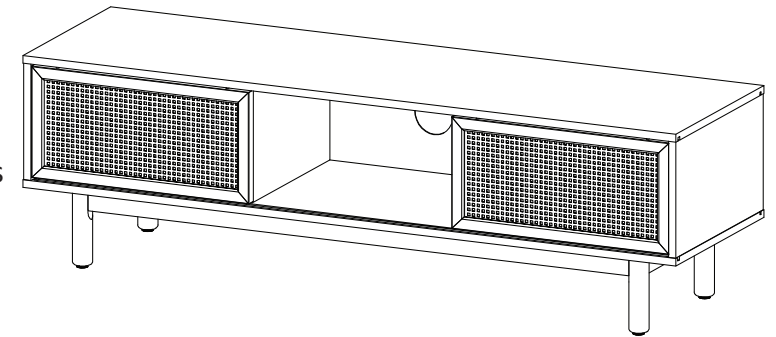





WARNING :

WEIGHT CAPACITY: 75 LBS.

Warning : Do not stand on media stand.

Warning : Do not over torque bolts.

Hardware List

HW1x6  Ø 6 x 35 mm	HW2x6  Ø 15 mm	HW3x26  Ø 8 x 30 mm	HW4x6  M 7 x 50 mm	HW5x10  M 6.4 x 53 mm
HW6x2 	HW7x4 	HW8x4 	HW9x3 	HW10x12 
HW11x12  M 3.5 x 15.5 mm	HW12x6  Ø 15 mm	HW13x4 	HW14x14  M 6 x 12.5 mm	HW15x24  M 4 x 16 mm
HW16x1 	HW BC410x4 	HW US11x1 		

Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board Left	1
D	Side Board Right	1
E	Center Board	2
F	Door	2
G	Bottom Skirt 1	2
H	Bottom Skirt 2	2
I	Back Board	3
LC15B2	Leg	4

Piece	Description	Qty
HW1	Cambolt	6
HW2	CamLock	6
HW3	Dowel	26
HW4	Screw M 7 x 50 mm	6
HW5	Screw M 6.4 x 53 mm	10
HW6	Allen Key	2
HW7	Pin Sliding Top	4
HW8	Pin Sliding Bottom	4
HW9	Bumper	3
HW10	Wedge	12
HW11	Screw M 3.5 x 15.5 mm	12
HW12	Screw Cap	6
HW13	Flange Nut	4
HW14	Screw M 6 x 12.5 mm	14
HW15	Screw M 4 x 16 mm	24
HW16	Wrench	1
HW BC410	Corner Brace	4
HW US11	Anti-Deflection Bar	1

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

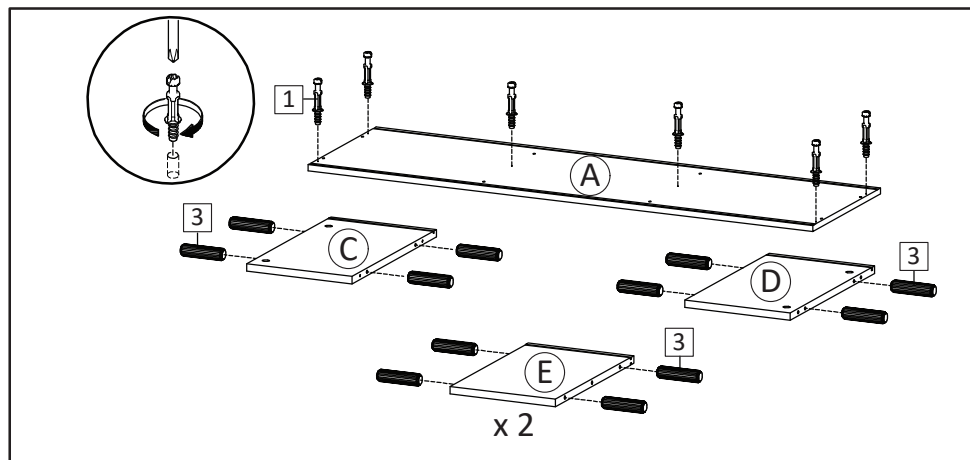


STEP1: Insert Cambolt (HW1) into Top Board (A). Insert Dowel (HW3) into Side Boards (C&D) and Center Boards (E).

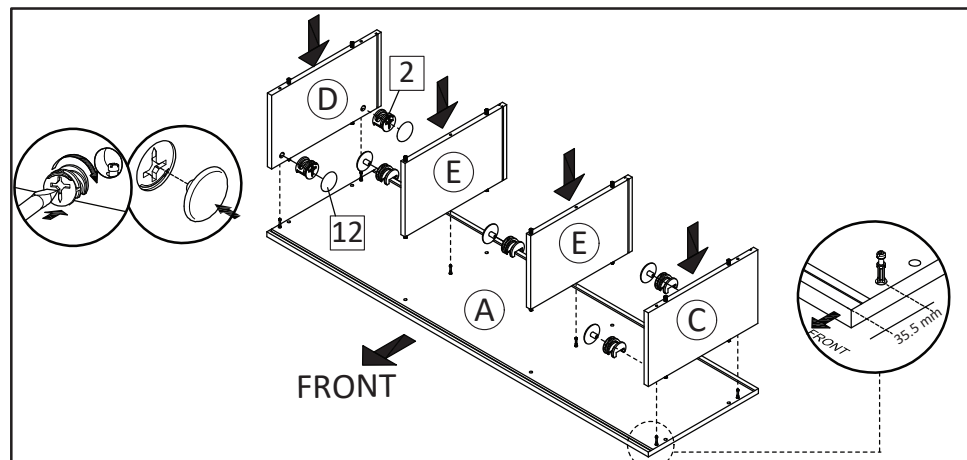

STEP2: Insert Side Boards (C&D) and Center Boards (E) into Top Board (A). Insert the Camlock (HW2) then tighten using a screwdriver. Place the Screw Cap (HW12) over the camlock as shown.

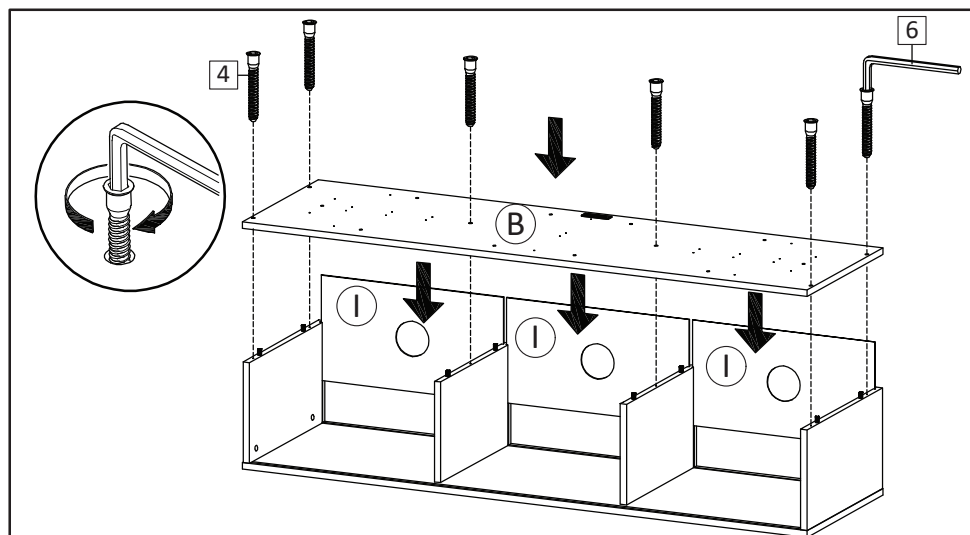

STEP3: Insert Back Board (I) and attach Bottom Board(B), secure with Screw M7x50mm (HW4), tighten screws using Allen Key (HW6).

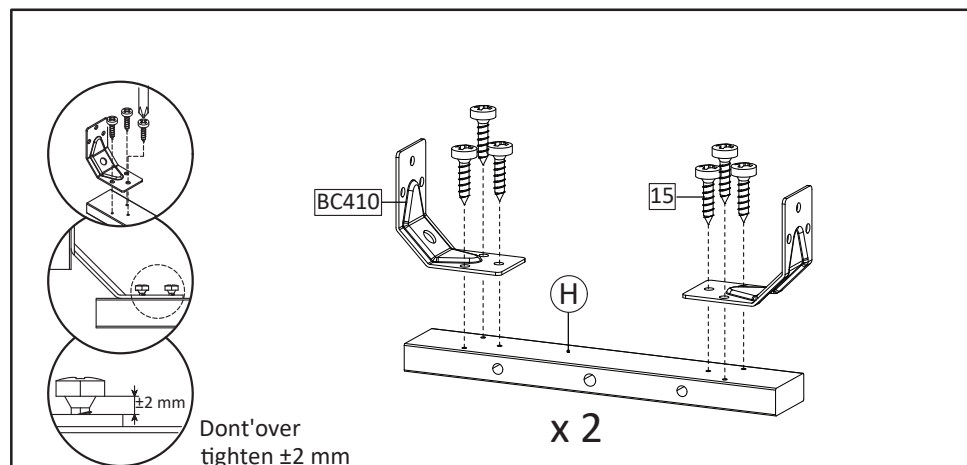

STEP4: Now let's combine the bottom skirt. Start with installing Corner Brace (HW BC410) into Bottom Skirt 2 (H) using Screw M4x16mm (HW15). Do not overtighten screw yet, leave around 2mm gap.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

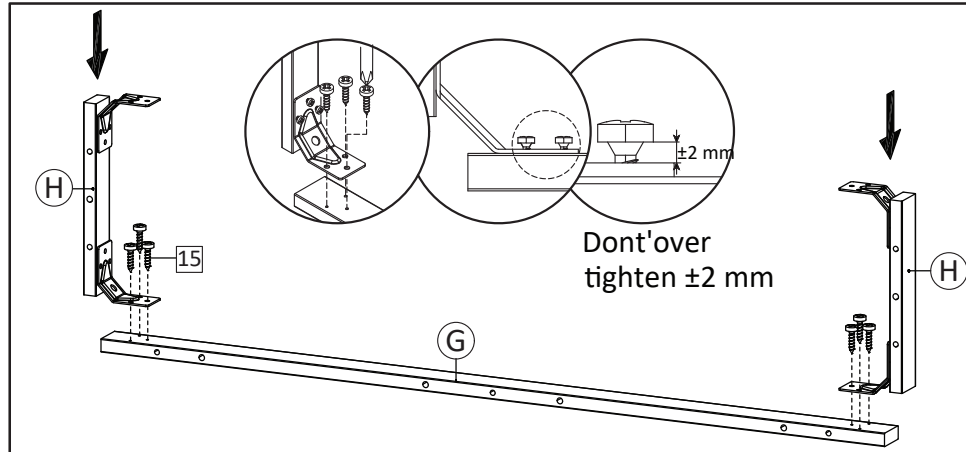


STEP5 : Combine the Bottom Skirt 2 (H) from step 4 with Bottom skirt 1 (G),using Screw M4x16mm (HW15). Do not overtight screw yet, leave around 2mm gap.

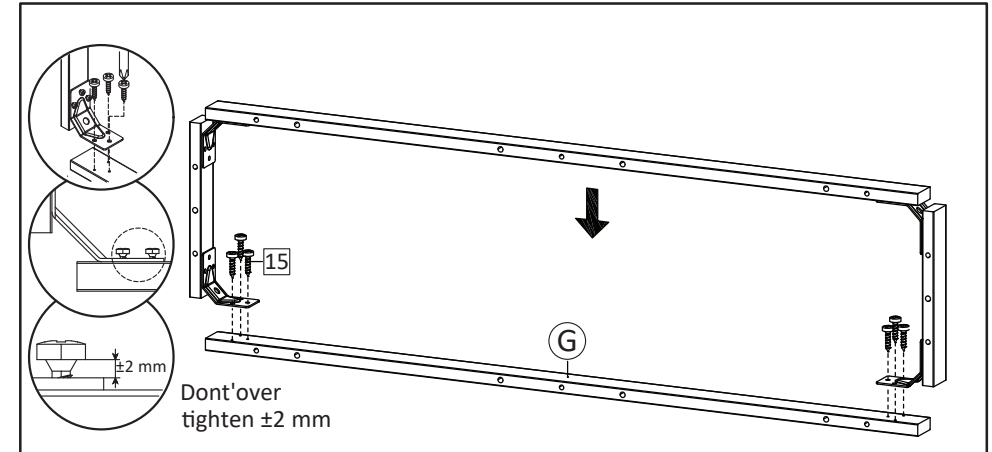

STEP6 : Combine the Bottom Skirt from step 5 with Bottom skirt 1 (G),using Screw M4x16mm (HW15). Do not overtight screw yet, leave around 2mm gap.

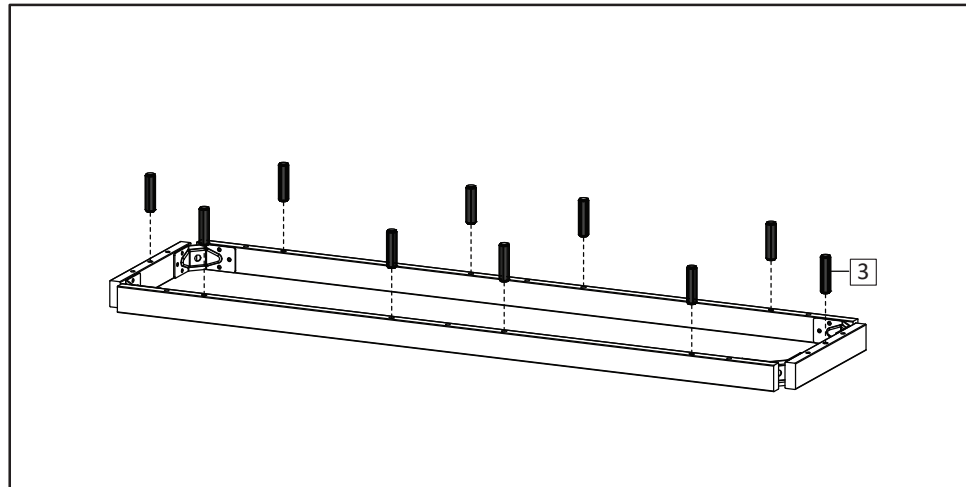

STEP7: Insert Dowel (HW3) into assembled Bottom skirt from previous step.

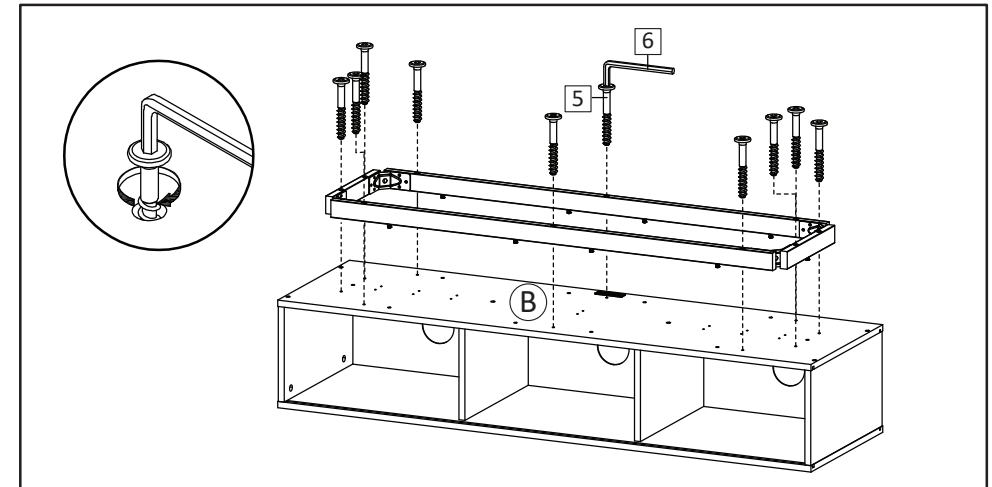

STEP8: Attach Bottom Skirt onto Bottom Board (B),secure with Screw M6.4x53mm (HW5) using Allen Key (HW6).

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

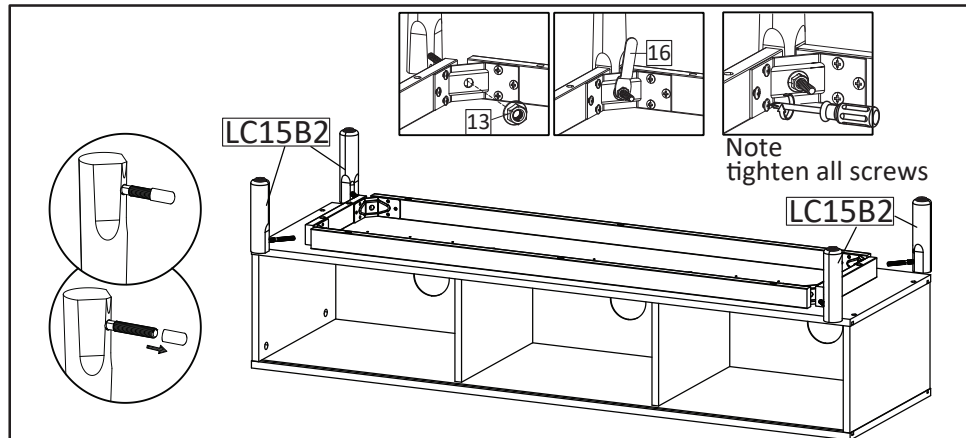


STEP9: First, let's fix the leg by inserting leg to Corner Brace, insert Flange Nut (HW13) first into the hanger bolt of leg, tighten all the Flange nut using provided Wrench (HW16). Second, after Ensuring that all legs has been tightened, continue with tighten all screws on the corner brace.

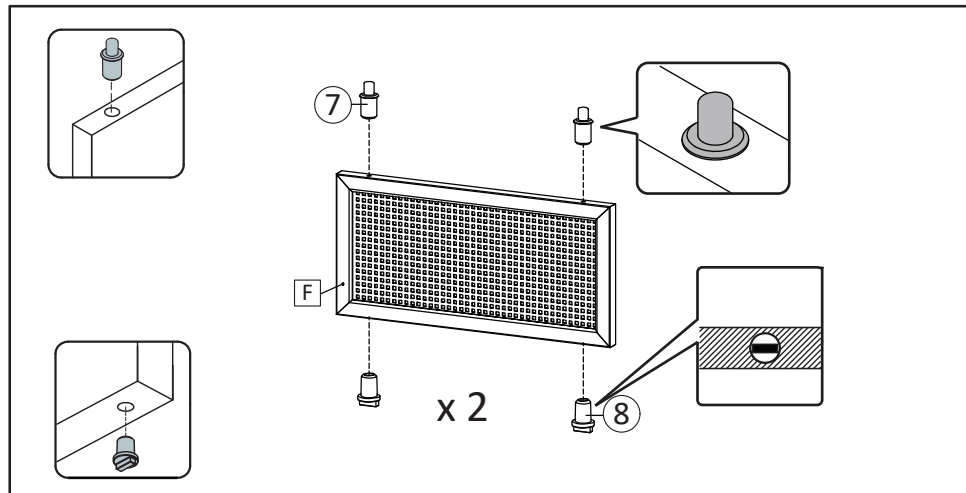

STEP11: Insert Top Pin Sliding (HW7) and Bottom Pin Sliding (HW8) on both end of frame door as specified position in the figure.

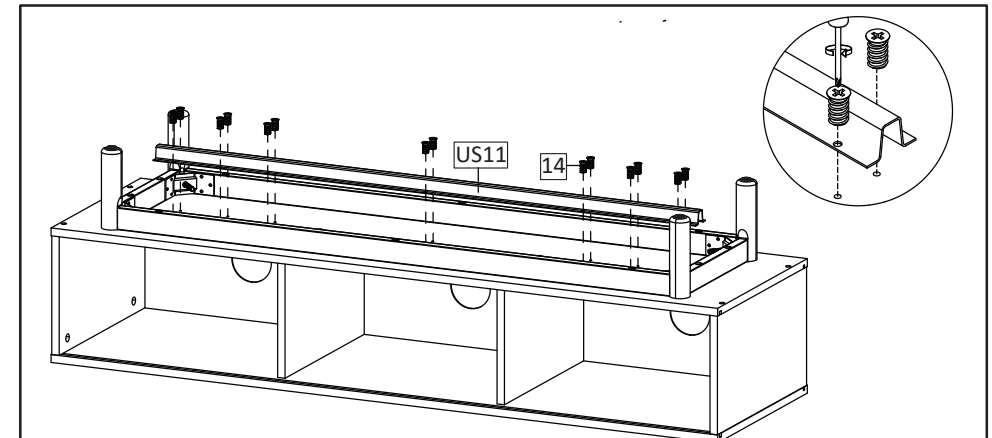



STEP10: Place Anti-Deflection Bar (HWUS11), secure with screw M6x12.5mm (HW14), tighten using screwdriver.

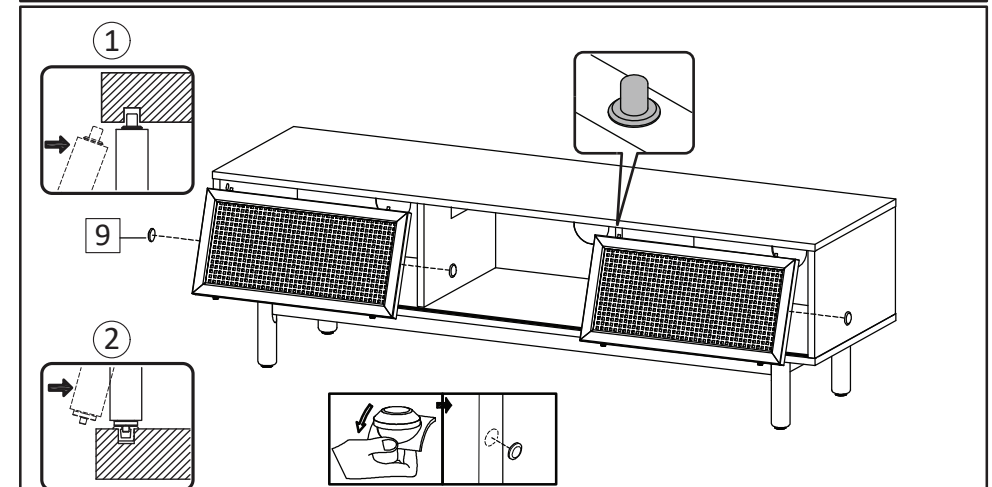

STEP12: Hold the frame door with position of the upper pin shown in facing upward. Put the frame door by inserting it to the upper groove on Top Board (A), then place the lower part aligned into the groove on bottom board (B). Peel the back paper of Bumper (HW9) then place on both frame door, position as shown in the figure.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

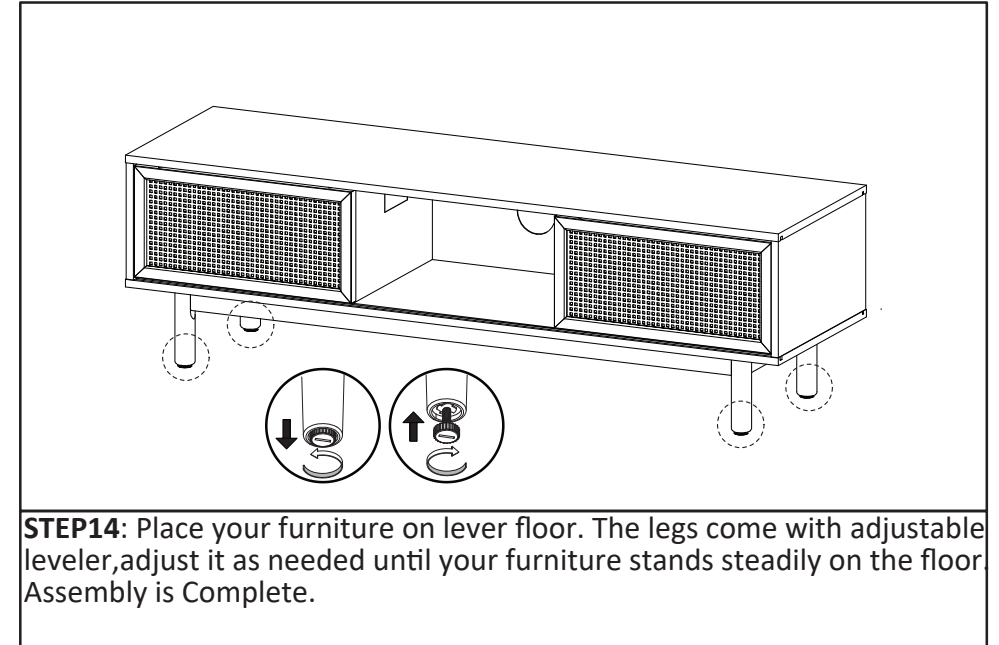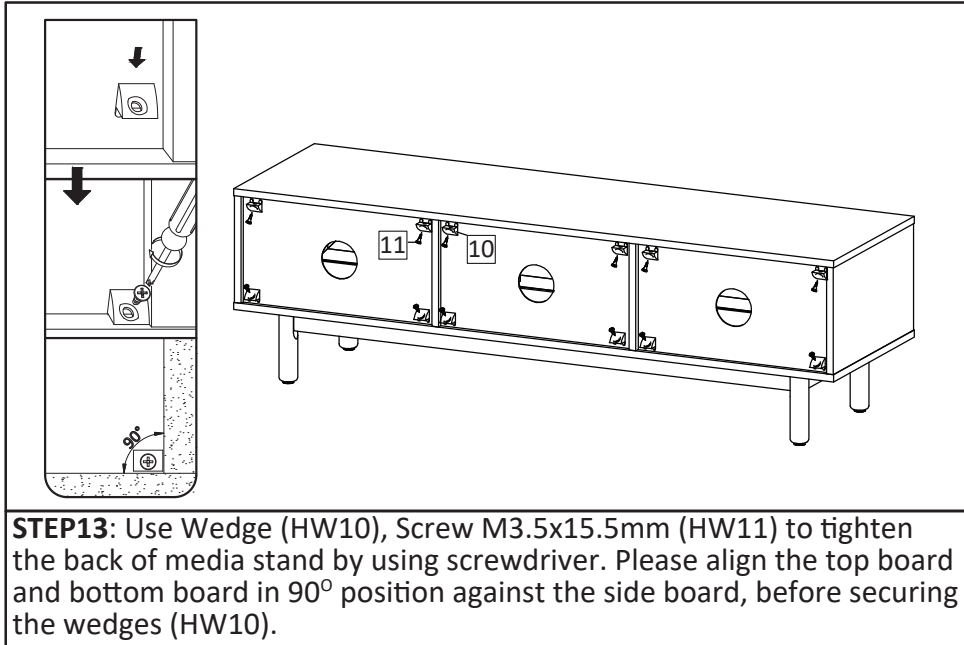

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

