

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

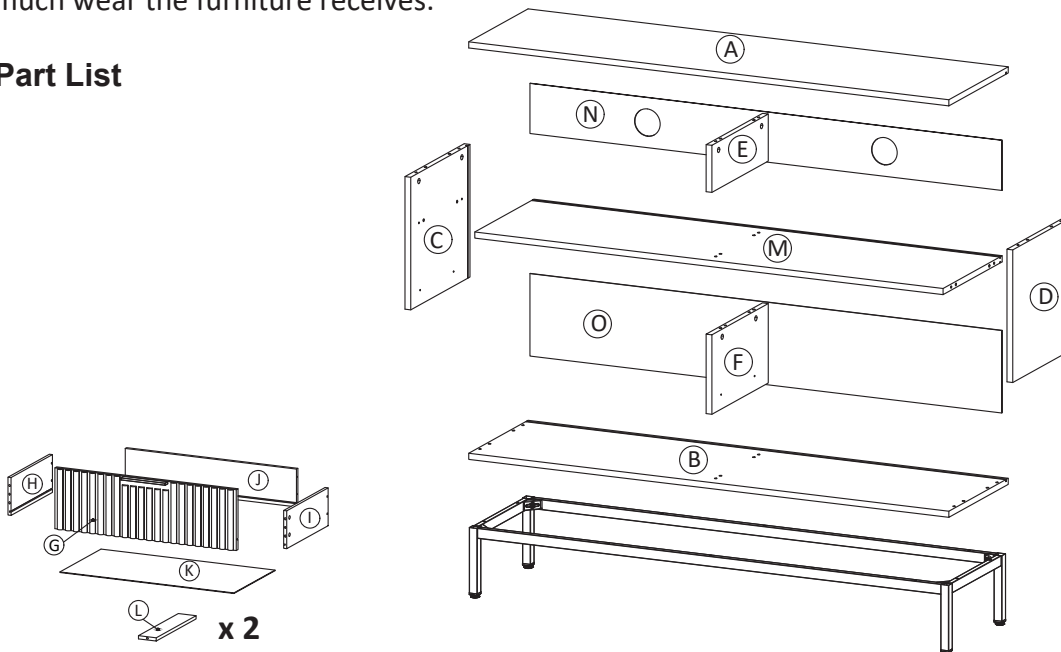

 **SAFAVIEH**
FURNITURE

Model# MED9622

Product Dimensions: 59"Wx16"Dx25"H

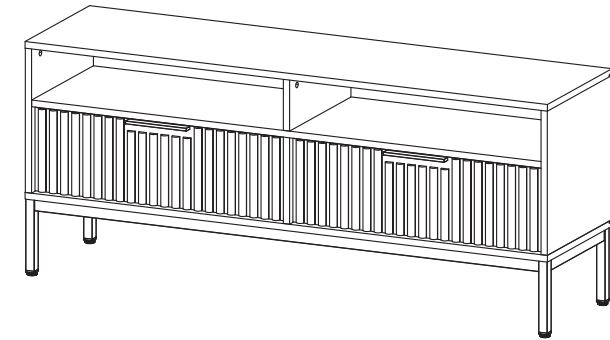









WARNING

This product is intended for use with a
FLAT SCREEN TV ONLY
Maximum Screen Size: 65 inches
Weight Limit: 88 lbs
Shelf Load Limit: 37 lbs
Drawer Load Limit: 31 lbs
Use with heavier televisions may result
in instability causing tip over resulting in
death or Serious injury.

WARNING

Death or serious injury may occur
when children climb on audio
and/or video equipment furniture.
A remote control or toys placed on
the furnishing may encourage a
child to climb on the furnishing and
as a result the furnishing may tip
over on the child.

Hardware List

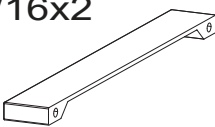HW1x22  $\varnothing$ 6 x 35 mm	HW2x12  $\varnothing$ 15 mm	HW3x10  $\varnothing$ 12 mm	HW4x4  $\varnothing$ 6 x 30 mm	HW5x16  $\varnothing$ 8 x 30 mm
HW6x2  $\varnothing$ 8 x 50 mm	HW7x8  M 7 x 50 mm	HW8x14  M 6.4 x 45 mm	HW9x4  M 6 x 40 mm	HW10x2  L 4
HW11x8  M 6 x 10.5 mm	HW12x12  M 3.5 x 13 mm	HW13x12  M 8 x 39 mm	HW14x28  M 3.5 x 15.5 mm	HW15x28 
HW16x2 	HW17x4  M 4 x 22 mm	HW18x6  $\varnothing$ 15 mm	HW19x2 	HW20x2 
HW21x4 	HW22x4 	HW23x4 	HW RM35Ax2  350 mm	

Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board Left	1
D	Side Board Right	1
E	Center Board Small	1
F	Center Board Big	1
G	Front Drawer	2
H	Side Drawer Left	2
I	Side Drawer Right	2
J	Back Drawer	2
K	Bottom Drawer	2
L	Support Drawer	2
M	Fixed Shelf	1
N	Back Board Small	1
O	Back Board Big	1

Piece	Description	Qty
HW1	Cambolt	22
HW2	CamLock Big	12
HW3	CamLock Small	10
HW4	Dowel Small	4
HW5	Dowel Medium	16
HW6	Dowel Big	2
HW7	Screw M 7 x 50 mm	8
HW8	Screw M 6.4 x 45 mm	14
HW9	Screw M 6 x 40 mm	4
HW10	Allen Key	2
HW11	Screw M 6 x 10.5 mm	8
HW12	Screw M 3.5 x 13 mm	12
HW13	Screw M 8 x 39 mm	12
HW14	Screw M 3.5 x 15.5 mm	28
HW15	Wedge	28
HW16	Handle	2
HW17	Screw M 4 x 22 mm	4
HW18	Screw Cap	6
HW19	Support Metal Leg 1	2
HW20	Support Metal Leg 2	2
HW21	Metal Square Leg	4
HW22	Corner Brace	4
HW23	Support Corner Brace	4
HW RM35A	Drawer Runner	2

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

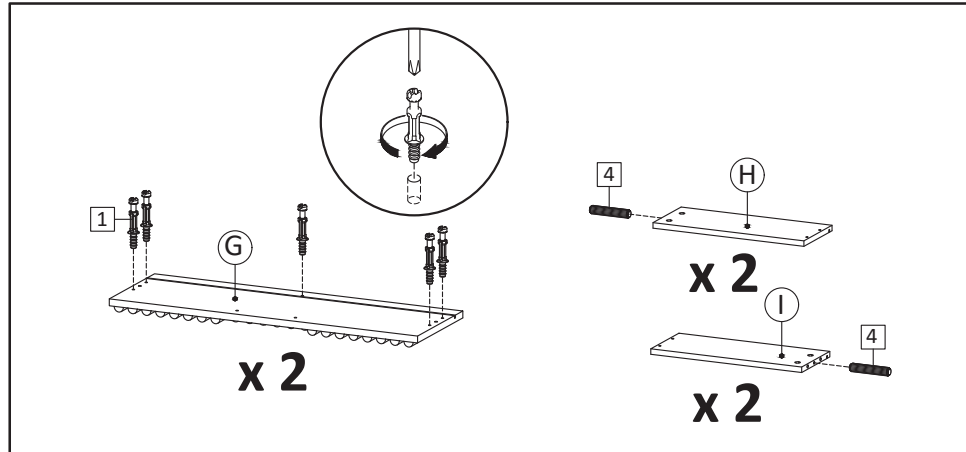


STEP1: Insert Cambolt (HW1) into Front Drawer (G).
Insert Dowel Small (HW4) into Side Drawers (H&I).

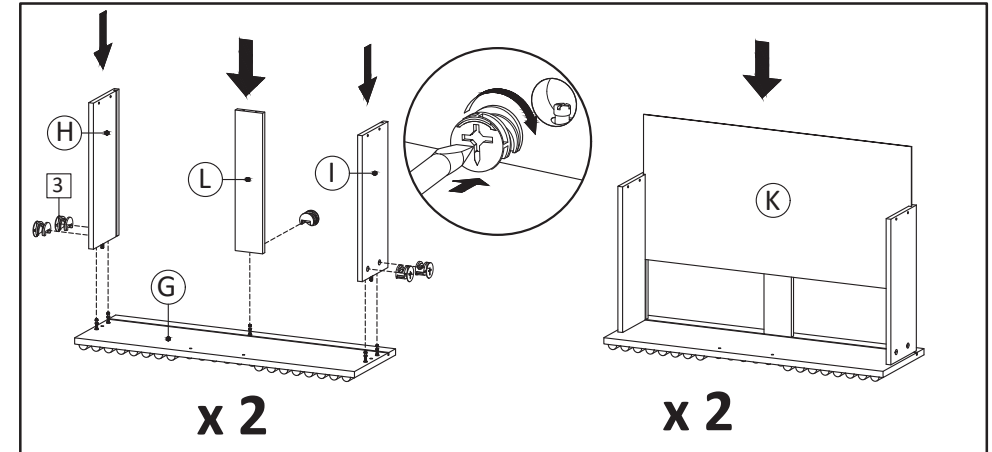

STEP2: Combine Side Drawers (H&I) and Support Drawers (L) into Front Drawer (G) then tighten camlock (HW3) using screwdriver. Insert Bottom Drawer (K) into Front Drawer with laminated face facing upward.

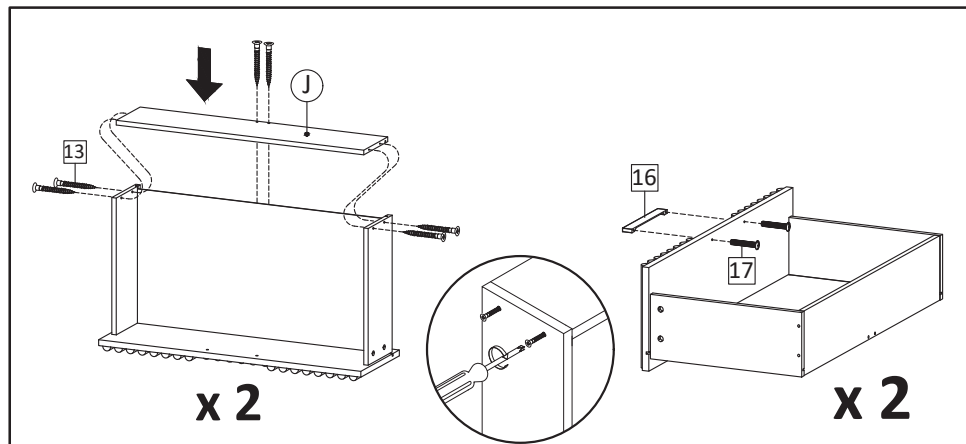

STEP3: Insert Back Drawer (J) and secure with Screw M8x39mm (HW13). Use Screw M4x22mm (HW17) to attach Handle (HW16) to the Front Drawer.

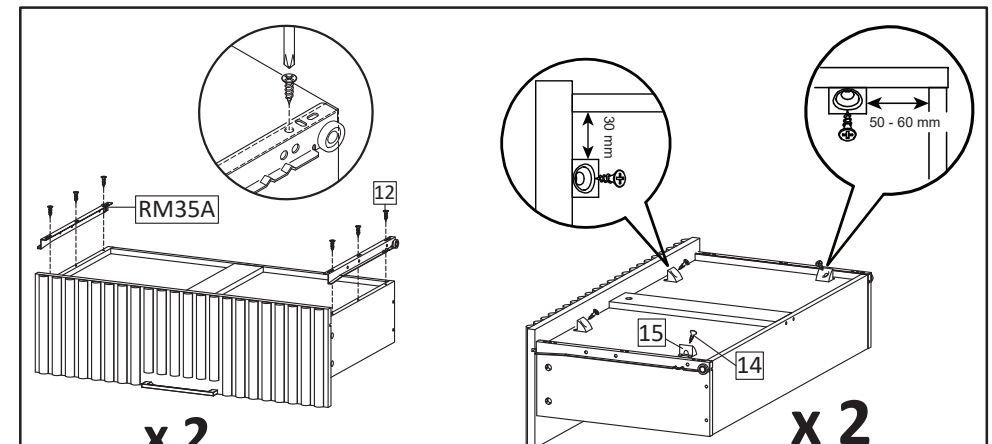

STEP4: Install the Drawer Runner (HW RM35A) into position as shown in picture. Secure with screws M3.5x13mm (HW12). Insert the Screw M3.5x15.5mm (HW14) and wedge (HW15) into the bottom of the drawer according to the picture.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

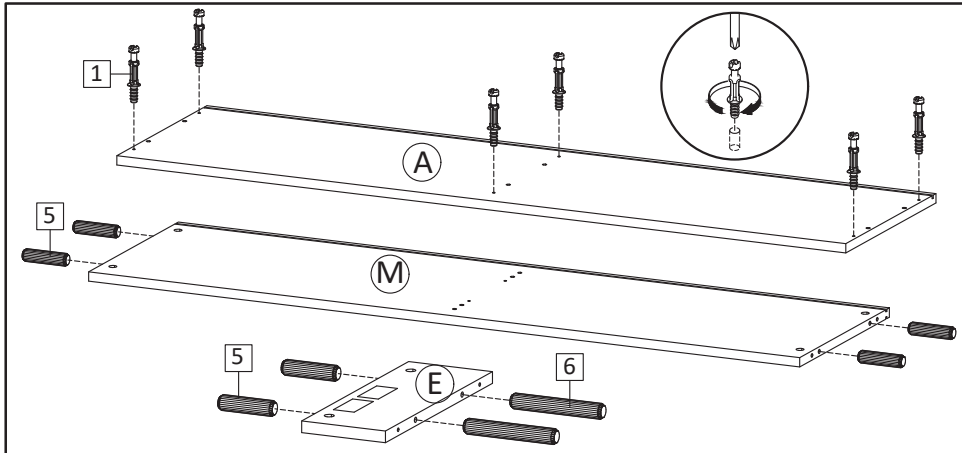


STEP5: Insert Cambolt (HW1) into Top Board (A), and Insert Dowel Medium (HW5) into Fixed Shelf (M) And Center Board Small (E). Insert Dowel Big (HW6) into position as the above image.

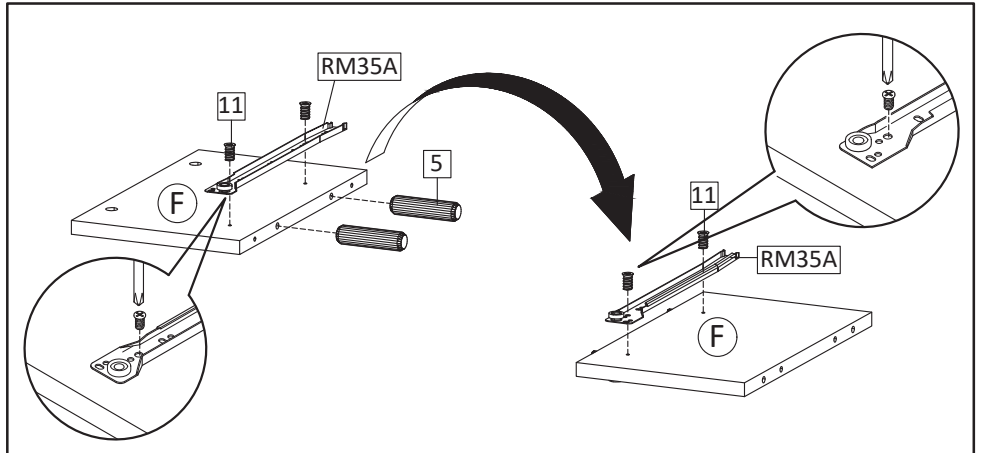

STEP6: Part of Drawer Runner must be installed to Center Board Big (F). Secure part of the Drawer Runner (HW RM35A) into position as the above image, using screw M6x10.5mm (HW11) and insert Dowel Medium (5), then flip the board to access the opposite surface.

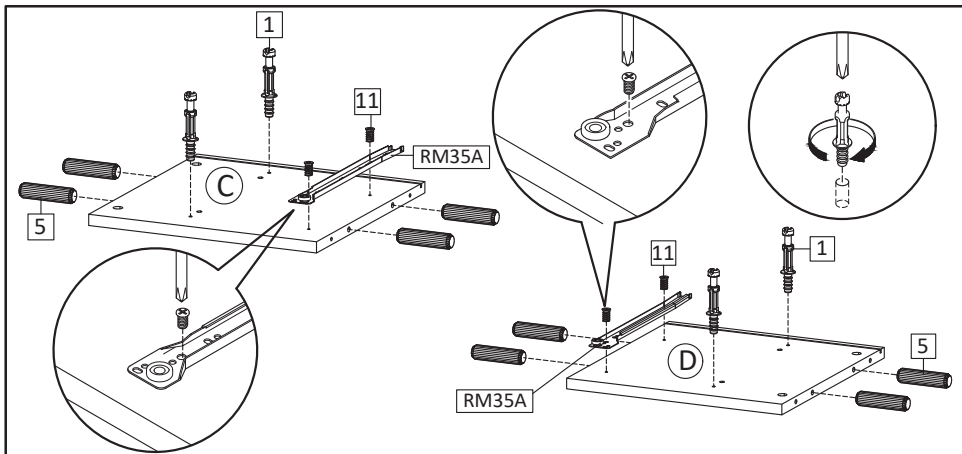


STEP7: Insert Dowel Medium (HW5) into Side Board Left (C) and Side Board Right (D). Insert Cambolt (HW1) into Side Board Left (C) and Side Board Right (D). Continue with securing part of the Drawer Runner (HW RM35A) into position as the above image, using screw M6x10.5mm (HW11).

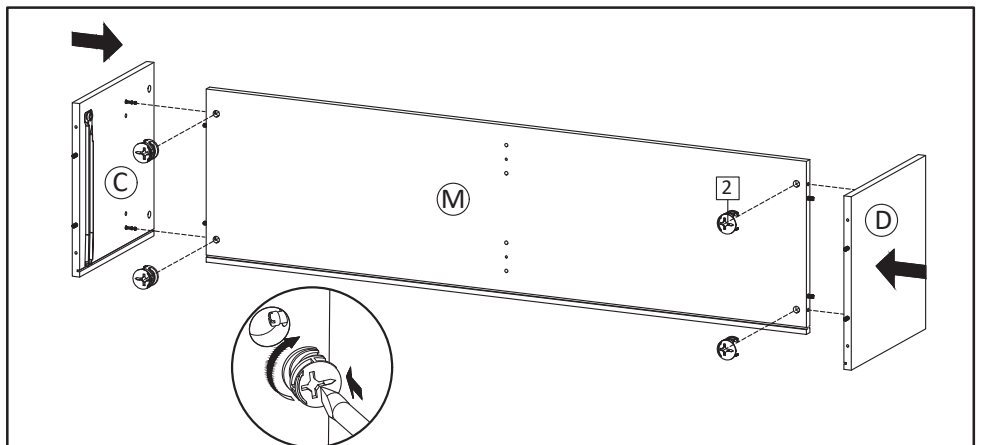


STEP8: Attach Side Board Left (C) and Side Board Right (D) into Fixed Shelf (M), Insert Camlock Big (HW2) and tighten it using screwdriver.

PREPARATION


- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

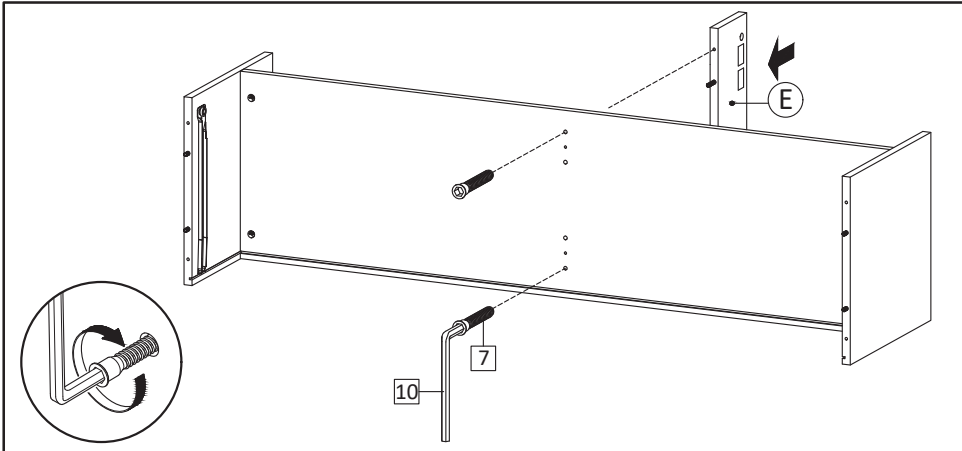


STEP9: Continue by attaching Center Board Small (E) into the assembled components from step 8. secure with Screw M7x50mm (HW7) using Allen Key (HW10).

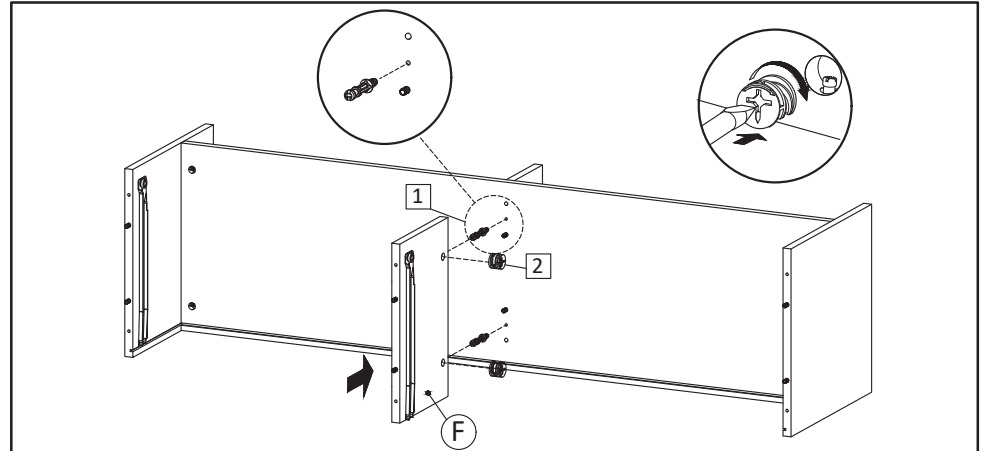

STEP10: First insert Cambolt (HW1) into Fixed Shelf. Then attach Center Board Big (F) Insert Camlock Big (HW2) and tighten it using screwdriver.

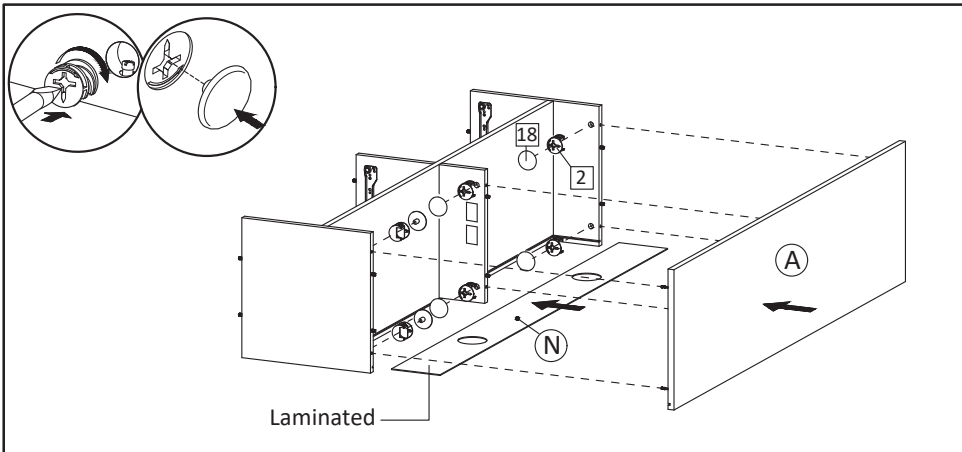

STEP11: Insert Back Board Small (N) into the grooved lines of the assembled body. Then attach Top Board (A) secure with Camlock Big (HW2) and tighten it using screwdriver. Put the Screw Cap (HW18) over the tightened camlock.

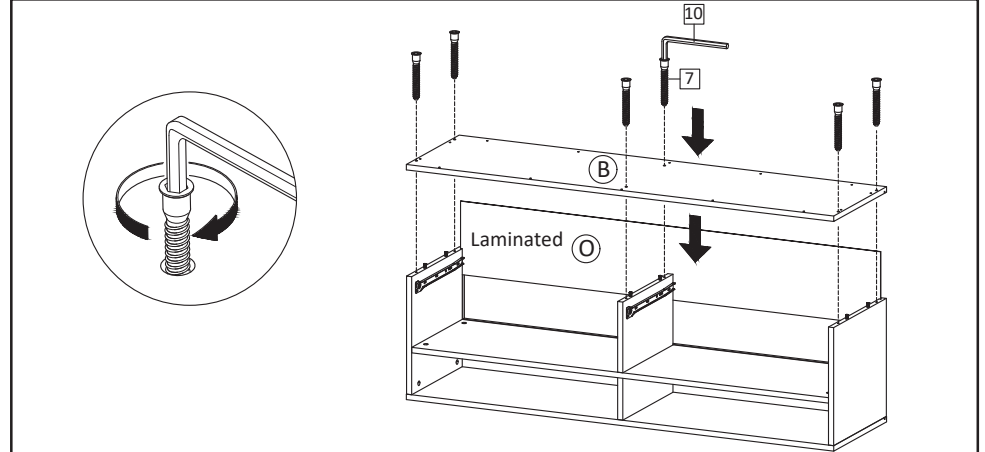

STEP12: Bring the Assembled component as position in the drawing. Insert Back Board Big (O) into the grooves lines. Then attach the Bottom Board (B) secure with Screw M7x50mm (HW7) using Allen Key (HW10).

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

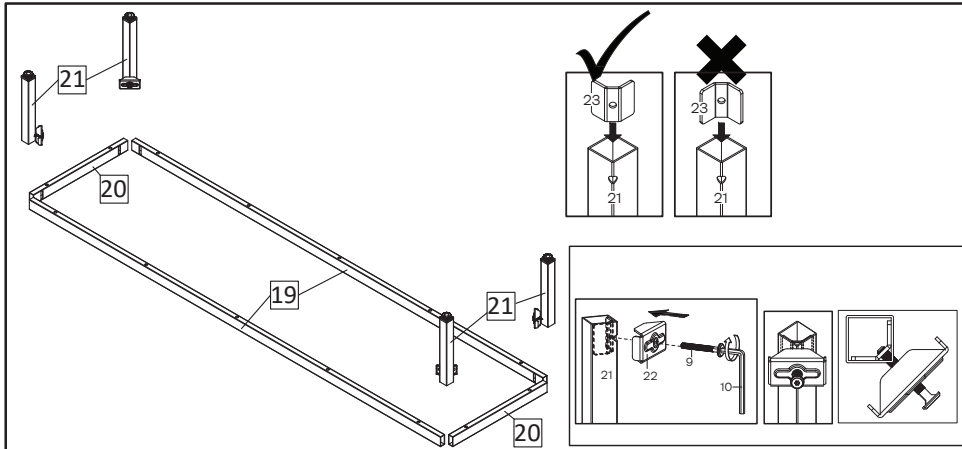


STEP13: Insert Support Corner Brace (HW23) and place it inside Leg (HW21) tube. Insert Screw (HW9) into the hole of Corner Brace (HW22). Screw in slightly just enough to grip Leg (HW21) with Support Corner Brace (HW23) inside. Do not tighten. Arrange Support Metal Leg 1 (HW19) & Support Metal Leg 2 (HW20) on the floor as per image.

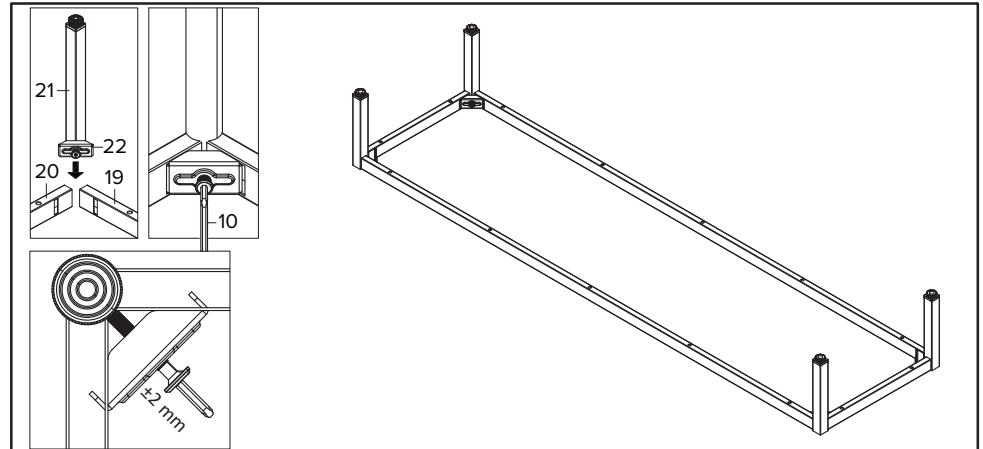

STEP14: Install the prepared Leg (HW21). Ensure the Corner Brace (HW22) hooks onto the hole of Support Metal Leg 1 (HW19) and (HW20). Screw in just enough to grip the support using Allen Key (HW10). Do not fully tighten. Repeat for the other legs

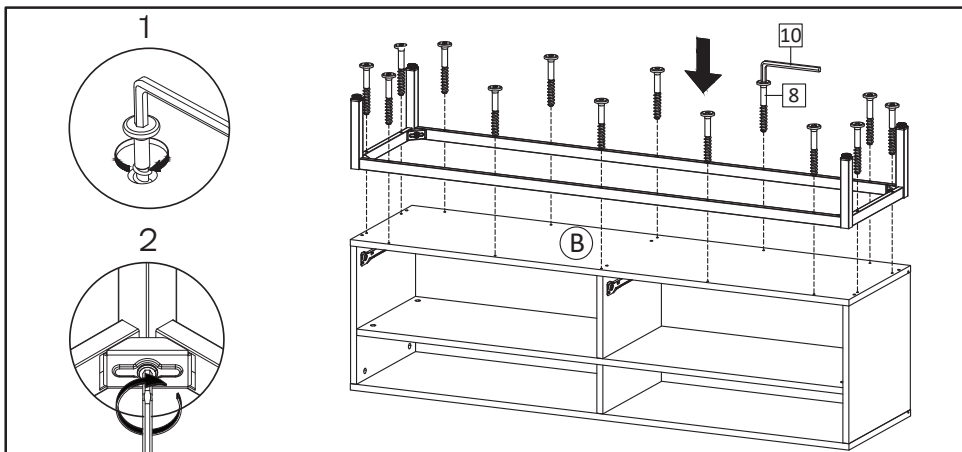



STEP15: Install assembled leg unit from Step 14 onto main assembled unit by inserting Screw (HW8). Tighten with Allen Key (HW10). Then tighten all the Screw on the assembled leg unit.

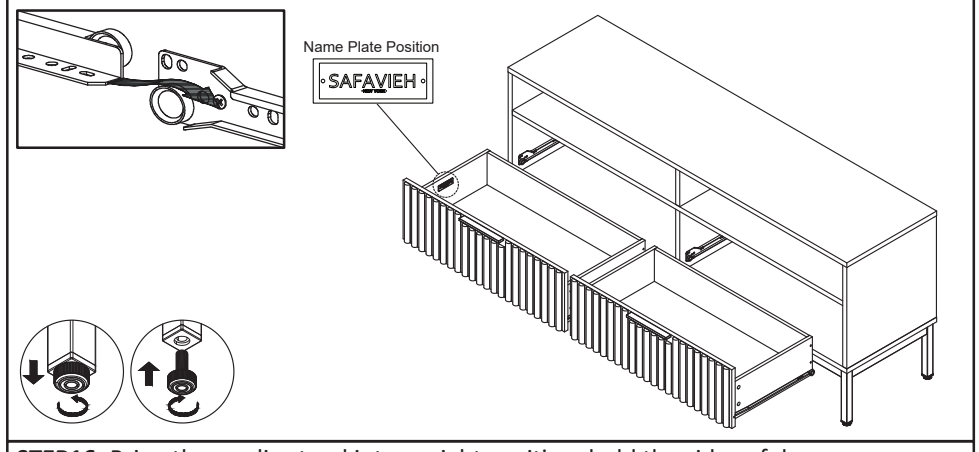

STEP16: Bring the media stand into upright position, hold the sides of drawer, position the wheel of Drawer Runner at drawer back and the wheel of Drawer Runner at side boards, according to the image. Slide in the drawers one by one into the media stand. Place your furniture on level floor. The legs come with adjustable leveller, adjust it as needed until your furniture sit steadily on the floor.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

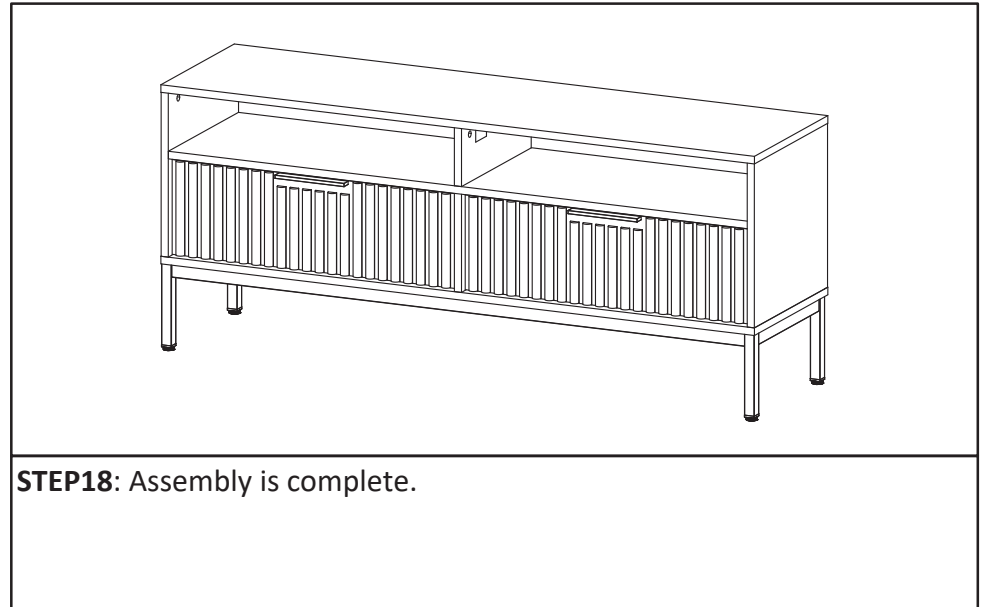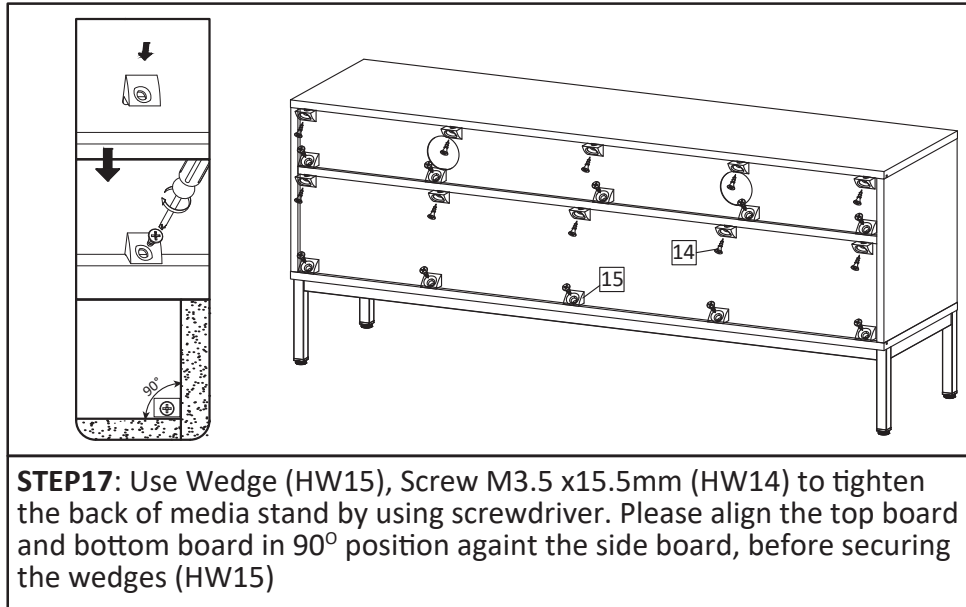

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

