

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

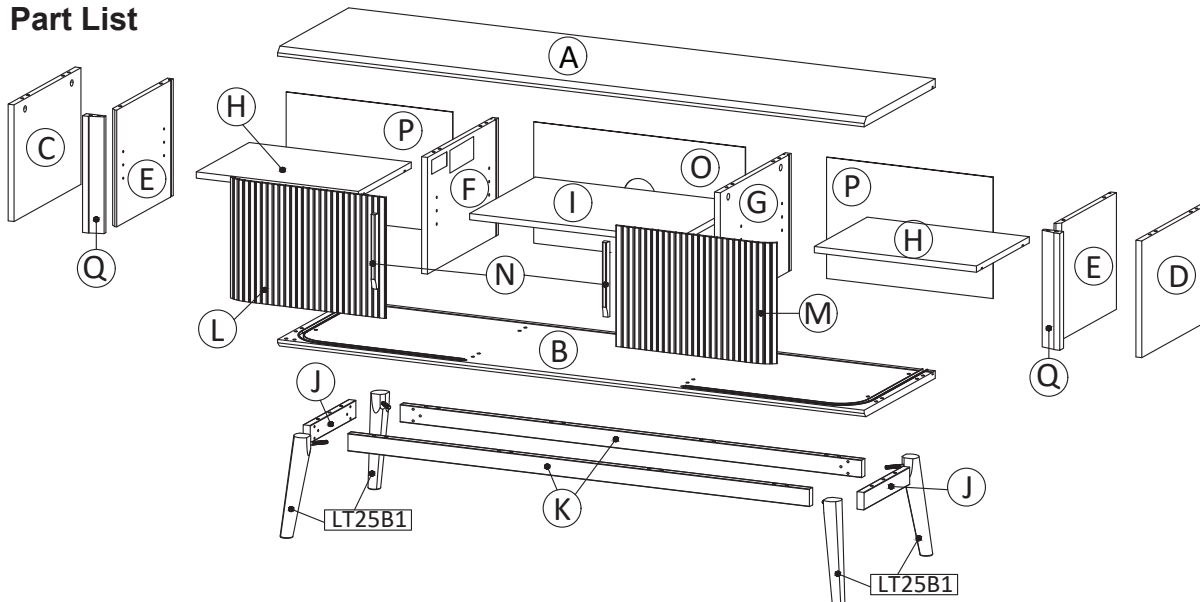

 **SAFAVIEH**
FURNITURE

Model# MED9624

Product Dimensions: 59"Wx15"Dx22"H

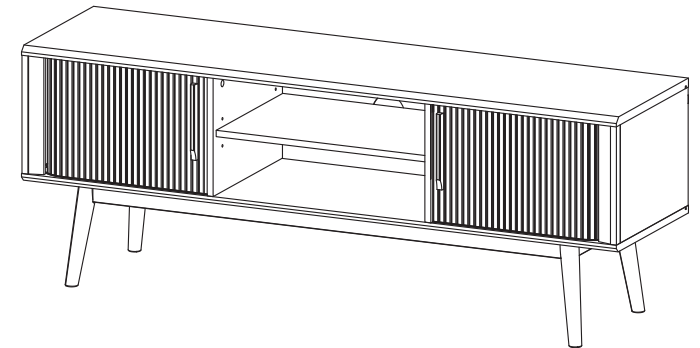









WARNING

This product is intended for use with a
FLAT SCREEN TV ONLY
Maximum Screen Size: 65 inches
Weight Limit: 84 lbs
Shelf Load Limit: 26 lbs
Drawer Load Limit: - lbs
Use with heavier televisions may result
in instability causing tip over resulting in
death or Serious injury.

WARNING

Death or serious injury may occur
when children climb on audio
and/or video equipment furniture.
A remote control or toys placed on
the furnishing may encourage a
child to climb on the furnishing and
as a result the furnishing may tip
over on the child.

Hardware List

HW1x8  Ø 6 x 35 mm	HW2x8  Ø 15 mm	HW3x4  Ø 15 mm	HW4x42  Ø 8 x 30 mm	HW5x8  M 7 x 50 mm
HW6x2  L 4	HW7x12 	HW8x28  M 4 x 16 mm	HW9x1 	HW10x4 
HW11x12  M 6.4 x 53 mm	HW12x4 	HW13x14 	HW14x14  M 3.5 x 15.5 mm	HW15x14  M 6 x 12.5 mm
HW16x2 	HW US11x1 	HW BC410x4 		

Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board Left	1
D	Side Board Right	1
E	Center Board	2
F	Center Board Left	1
G	Center Board Right	1
H	Adjustable Shelf 1	2
I	Adjustable Shelf 2	1
J	Bottom Skirt 1	2
K	Bottom Skirt 2	2
L	Door Left	1
M	Door Right	1
N	Handle	2
O	Back Board 1	1
P	Back Board 2	2
Q	Support Board	2
LT25B1	Leg	4

Piece	Description	Qty
HW1	Cambolt	8
HW2	CamLock	8
HW3	Screw Cap	4
HW4	Dowel	42
HW5	Screw M 7 x 50 mm	8
HW6	Allen Key	2
HW7	Shelf Pin	12
HW8	Screw M 4 x 16 mm	28
HW9	Wrench	1
HW10	Flange Nut	4
HW11	Screw M 6.4 x 53 mm	12
HW12	Ring	4
HW13	Wedge	14
HW14	Screw M 3.5 x 15.5 mm	14
HW15	Screw M 6 x 12.5 mm	14
HW16	Anti-Tip Set	2
HW US11	Anti-Deflection Bar	1
HW BC410	Corner Brace	4

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

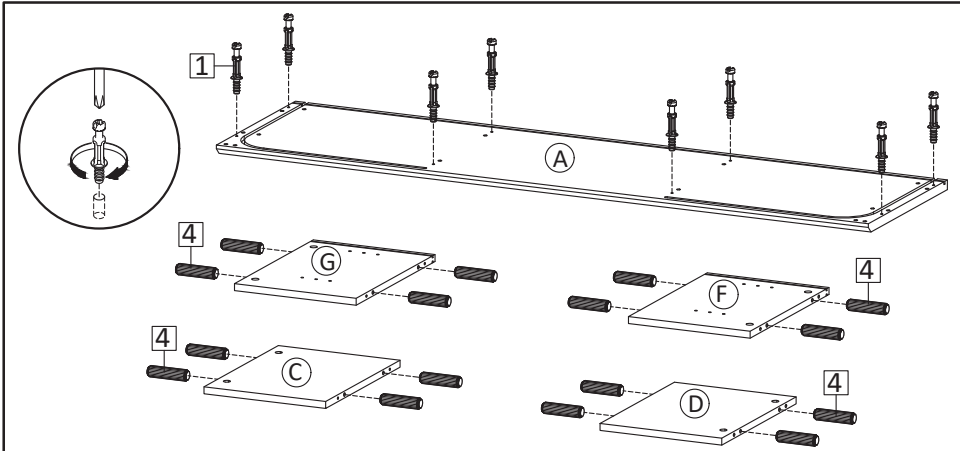


STEP1: Insert Cambolt (HW1) into Top Board (A), and Insert Dowel (HW4) into Side Board Left (C), Side Board Right (D) and Center Board Left (F), Center Board Right (G) into position as the above image.

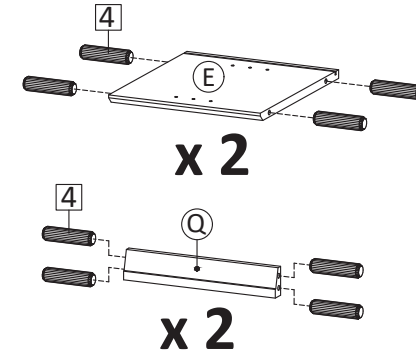

STEP2: Insert Dowel (HW4) into Center Board (E) and Support Board (Q) into position as the above image.

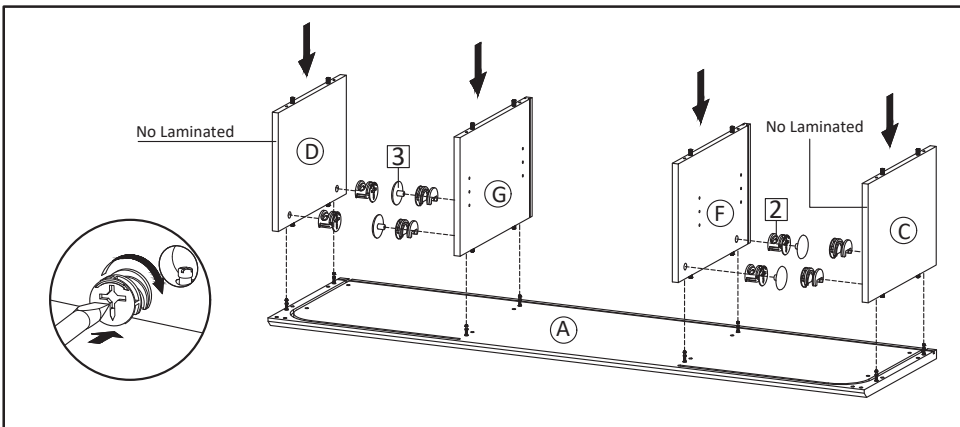

STEP3: Attach Side Board Left (C), Side Board Right (D), Center Board Left (F) and Center Board Right (G) into Top Board (A). Secure with Camlock (HW2) and tighten it using screwdriver. Put the Screw Cap (HW3) over the tightened camlock, into position as the above image.

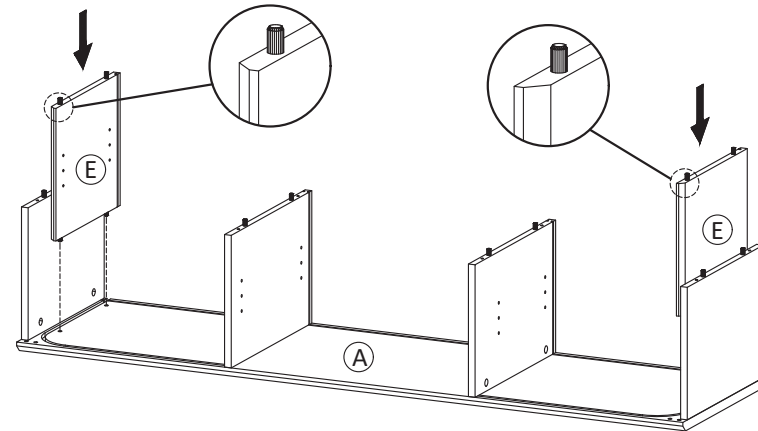

STEP4: Attach Center Boards (E) into Top Board (A). Into position as the above image.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

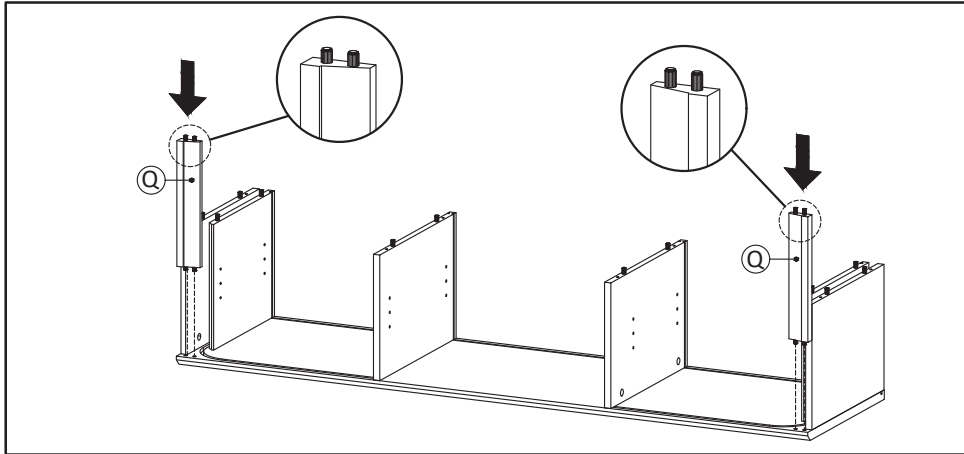


STEP5: Attach Support Board (Q) into Top Board (A).
Into position as the above image.

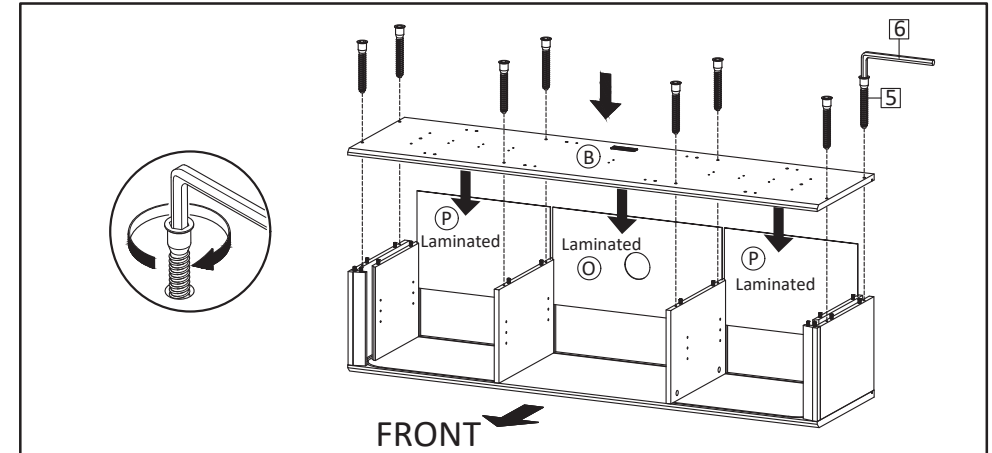

Step6: Insert Back Board 1 (O) and Back Boards 2 (P) with laminated surface facing front.
Put Bottom Board (B) and secure with Screw M7x50mm (HW5),
tighten screws using Allen Key (HW6).

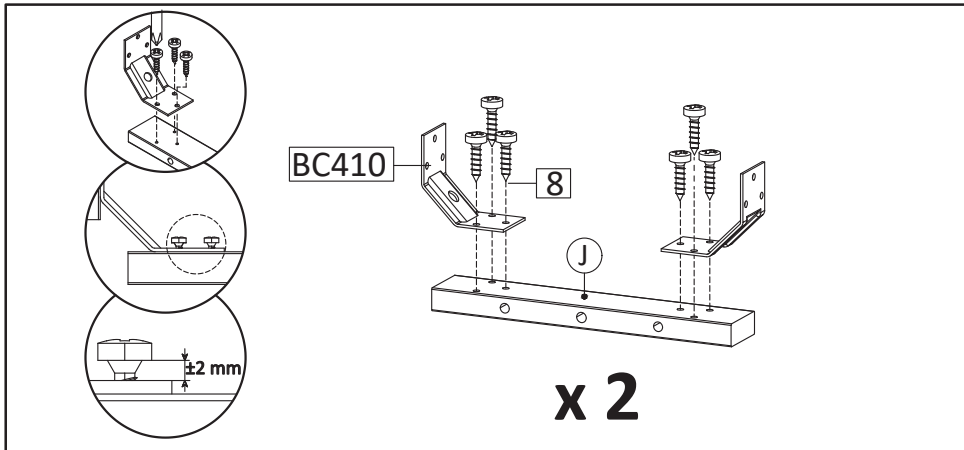

STEP7: Now let's combine the bottom skirt. Start with installing
Corner Brace (HW BC410) into Bottom Skirt 1 (J) using
Screw M4x16mm (HW8). Do not overtight screw yet,
leave around 2mm gap.

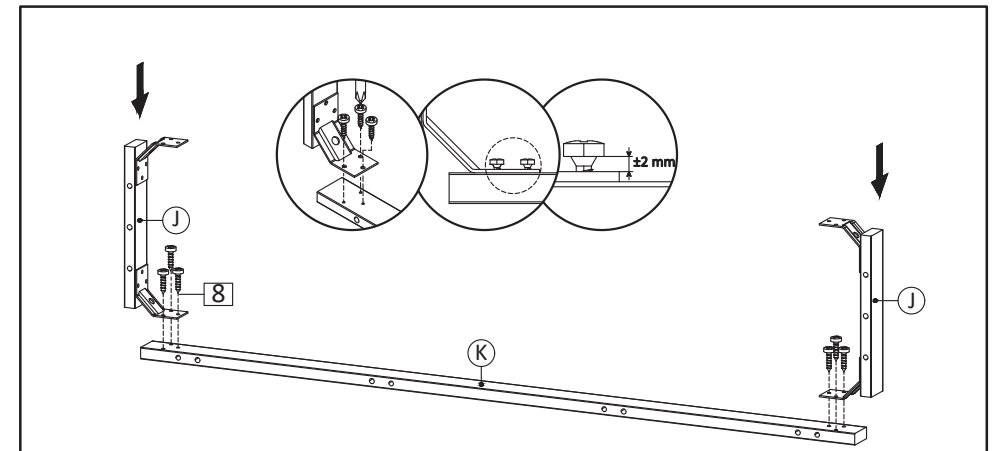

STEP8: Combine components from step 7 with
remaining Bottom Skirt 2 (K), using Screw M4x16mm (HW8).
Do not overtight screw yet, leave around 2mm gap.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

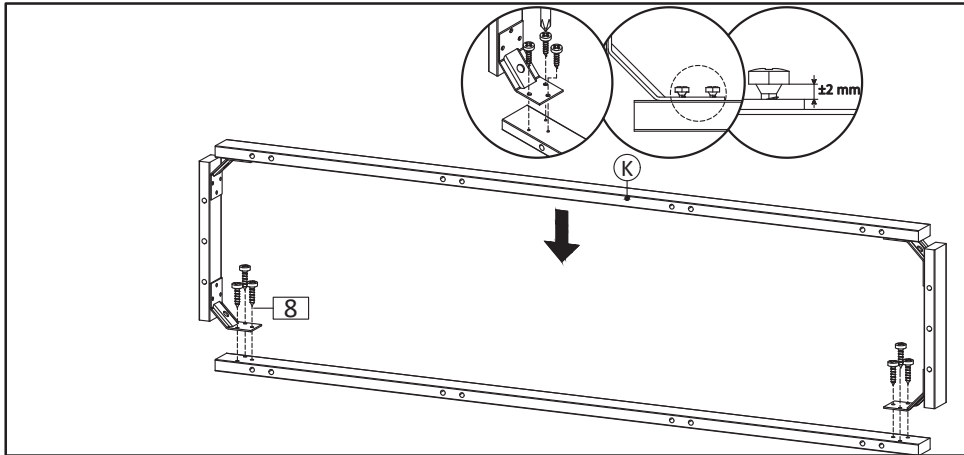


STEP9: Combine the Bottom Skirt 1 from step 8 with remaining Bottom Skirt 2 (K), using Screw M4x16mm (HW8). Do not overtight screw yet, leave around 2mm gap.

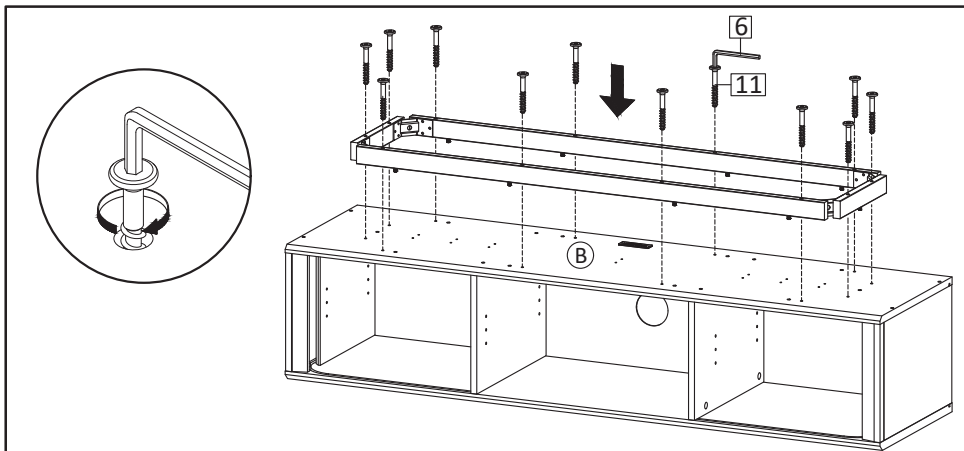

STEP11: Insert Screw M6.4x53mm (HW11) using Allen Key (HW6) into assembled bottom skirt and bottom board.

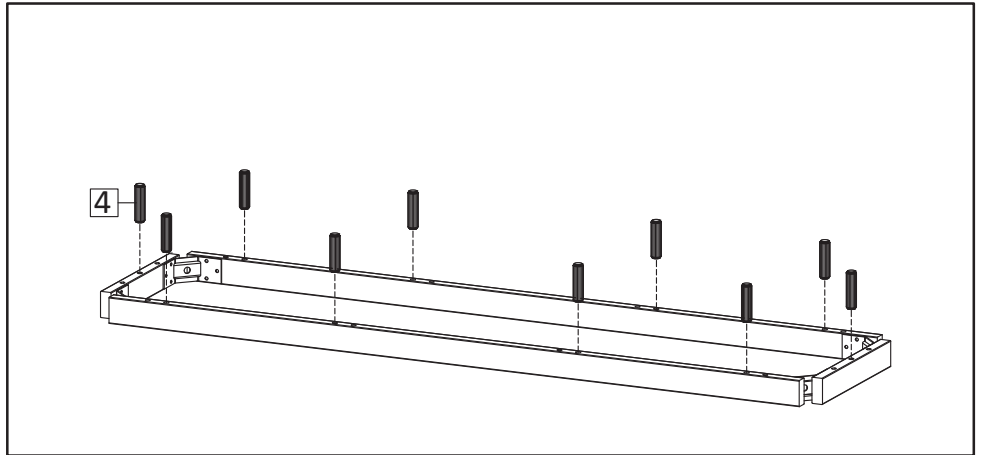


STEP10: Insert Dowel (HW4) into assembled bottom skirt.

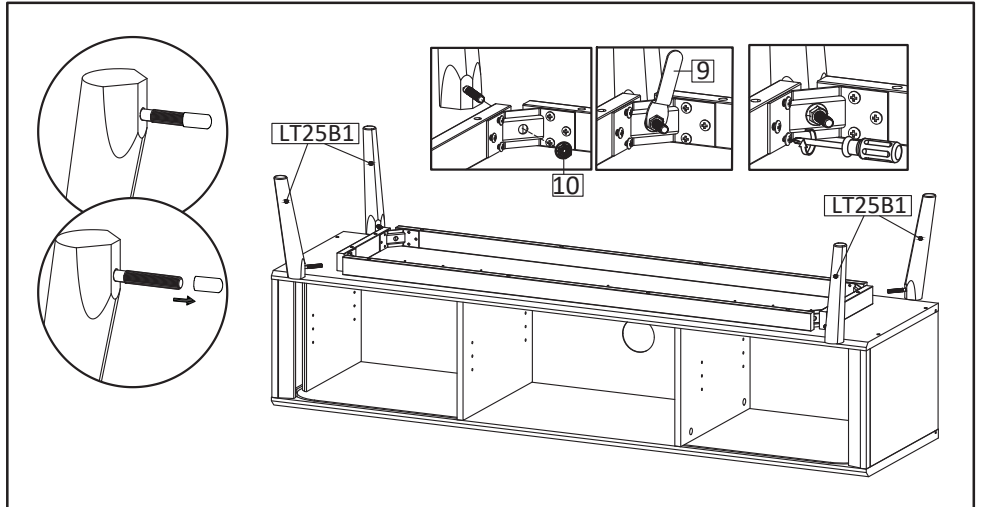


STEP12: First, let's fix the leg by inserting leg to Corner Brace, insert Flange Nut (HW10) into the hanger bolt of leg, tighten all the Flange nut using provided Wrench (HW9). Second, after Ensuring that all legs has been tightened, continue with tighten all screws on the corner brace.

PREPARATION


- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

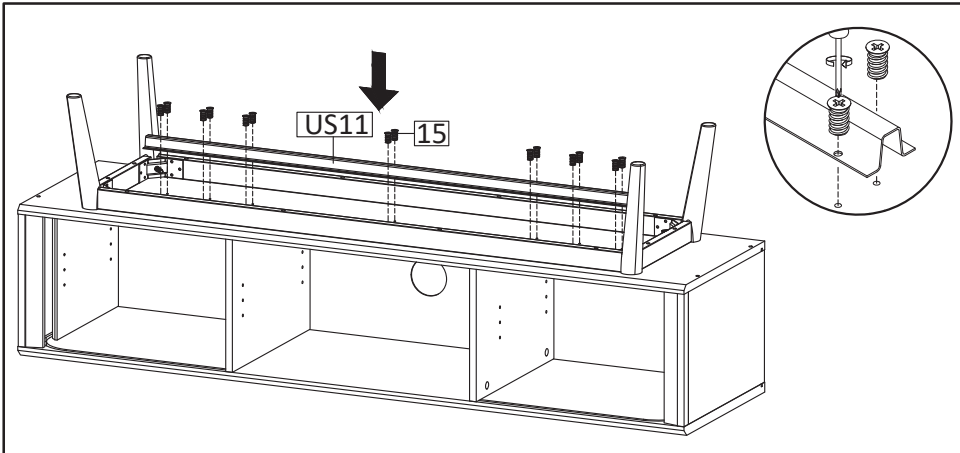


STEP13: Insert Anti Deflection Bar (HW US11), Screw M6x12.5mm (HW15) into Bottom Board.

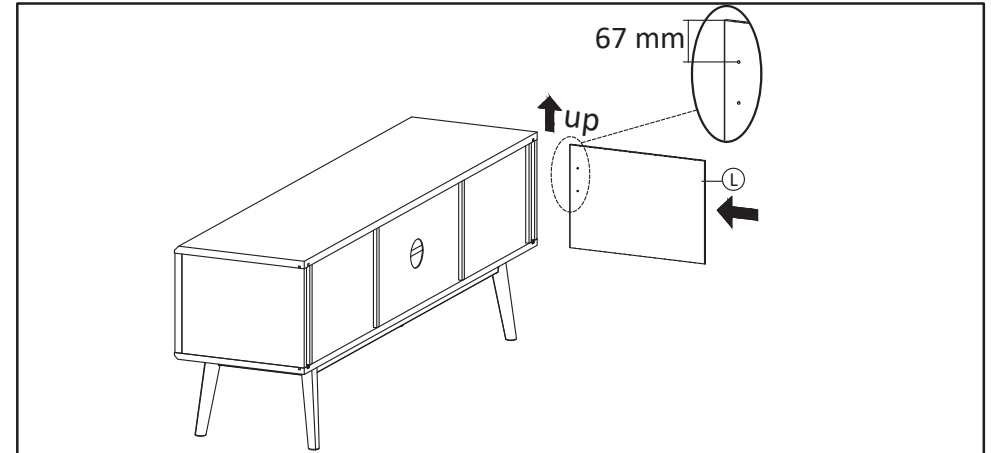

Step14: Insert the Door Left (L) into the groove. Position the top and bottom parts of the door within the grooves of the top and bottom of the body. Follow the downward and upward directions position as shown in the figure.

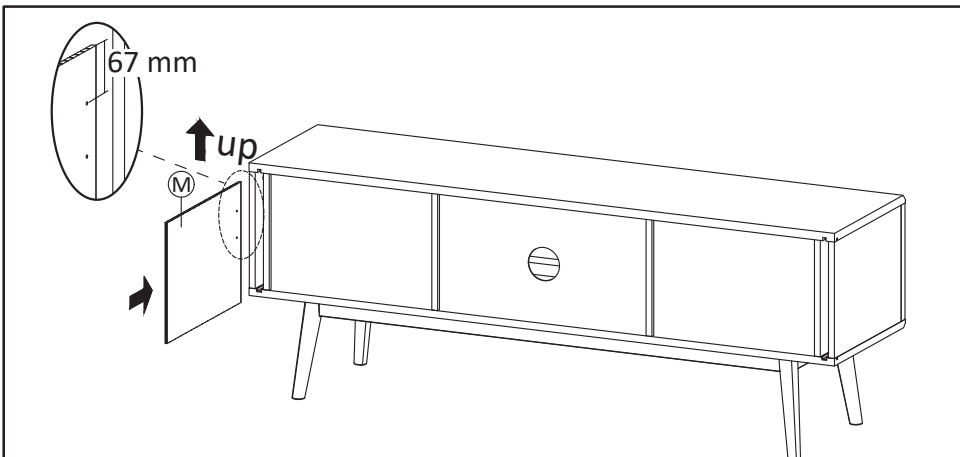

Step15: Insert the Door Right (M) into the groove. Position the top and bottom parts of the door within the grooves of the top and bottom of the body. Follow the downward and upward directions position as shown in the figure.

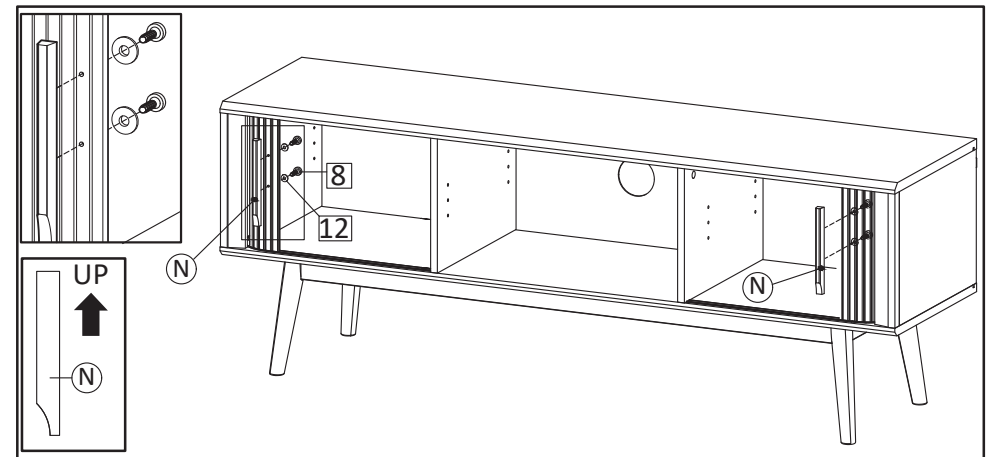

STEP16: Insert Screw M4x16mm (HW8) & Ring (HW12) into the holes on Doors Left & Right position as shown in the figure.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

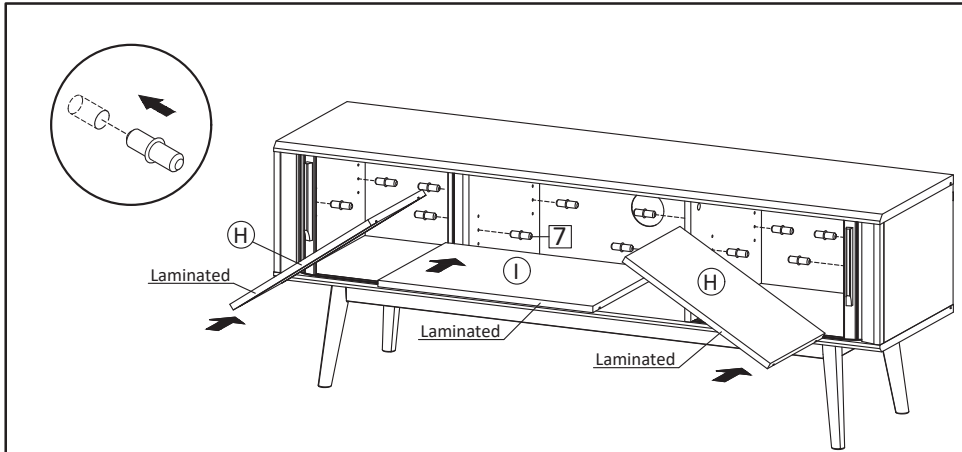


STEP17: Insert Shelf Pin (HW7) into the holes on Sideboard & Centerboard, on the desired level. Then place the Adjustable Shelf 1 (H) & Adjustable Shelf 2(I) by inserting the hole on the shelf into the shelf support.

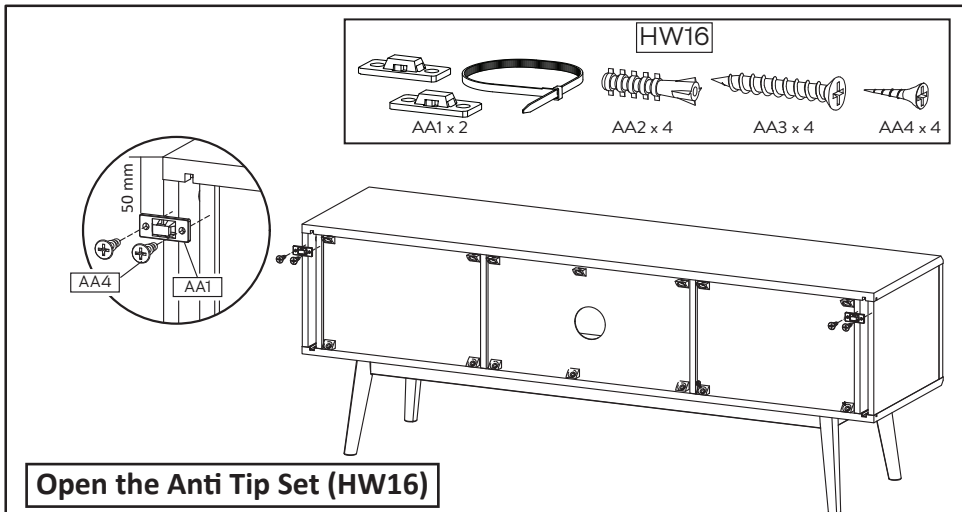

STEP19: Attach the bracket (AA1) from anti tip set (HW16) securely to the top back of the furniture using the screws provided. Leave 50 mm as a door stopper.

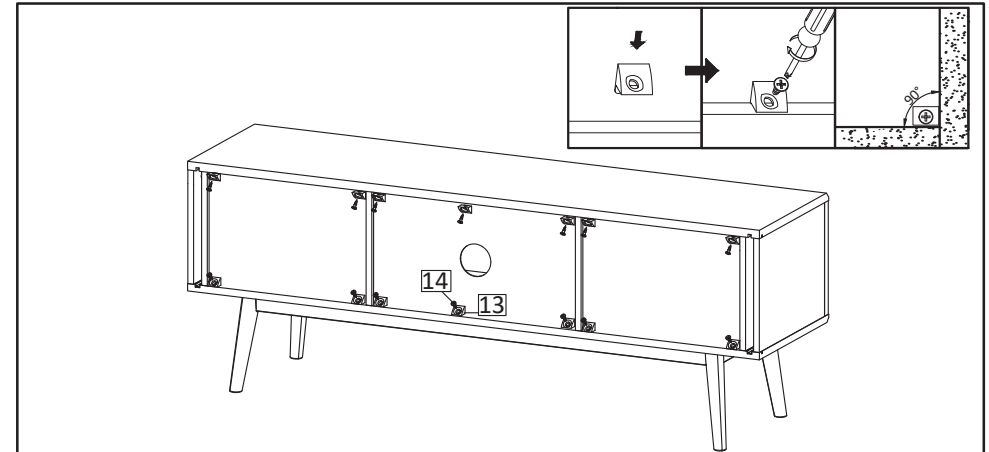


STEP18: Use Wedge (HW13), Screw M3.5x15.5mm (HW14) to tighten the back of media stand by using screwdriver.

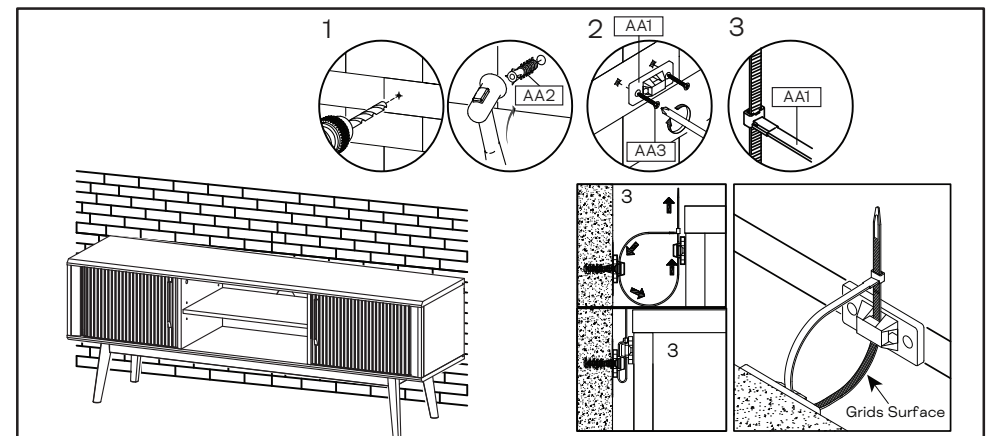

STEP20: Please make a hole for wall plugs position on the wall and minimum 15 mm below bracket secured to the back of unit attach the wall plugs. Locate the other bracket on the wall over wall plugs (AA2). Place furniture into position so both brackets (AA1) are vertically in the line. Lace the end of the restrains strap through the larger hole in each bracket. Ensure the restrains strap with grids surface facing the inner loops. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Make sure that the strap is securely laced & locked.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

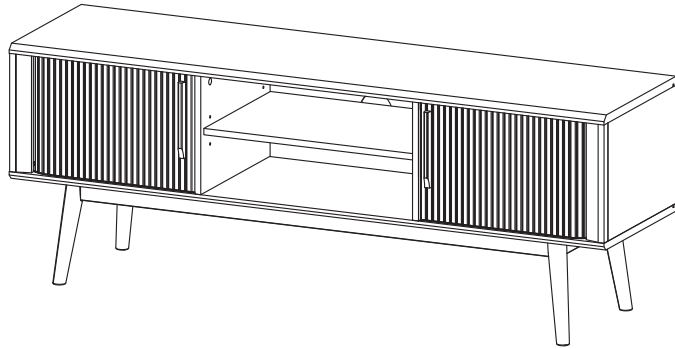

STEP21: Assembly Complete.