

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

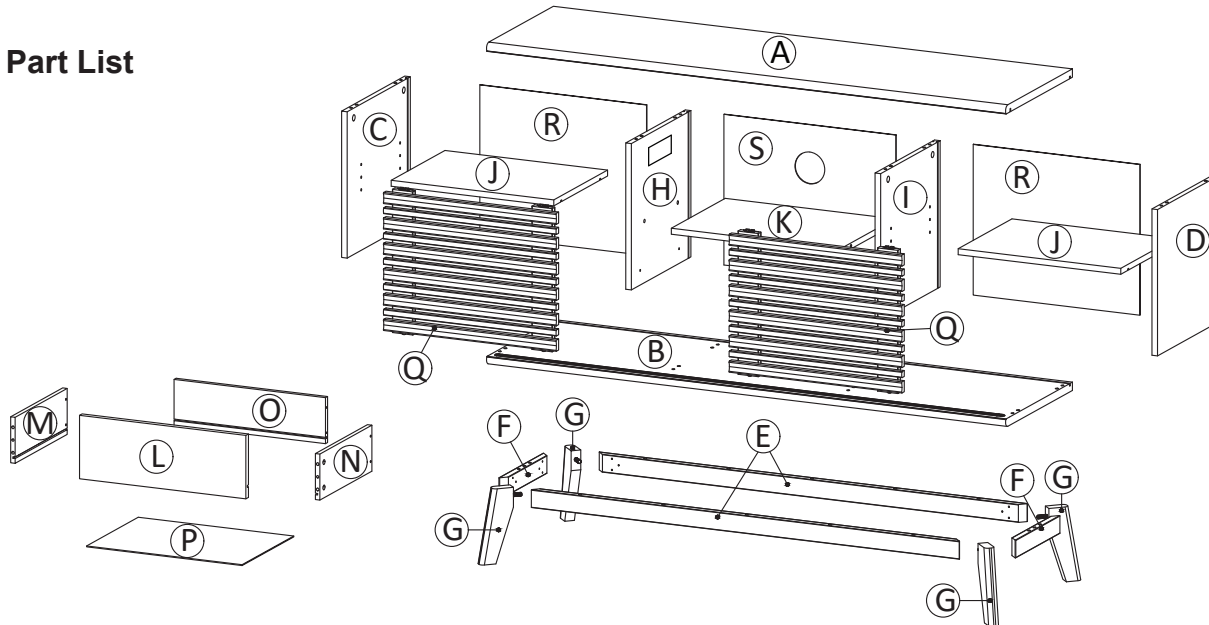

 **SAFAVIEH**
FURNITURE

Model# MED9638

Product Dimensions: 55"Wx15"Dx24"H

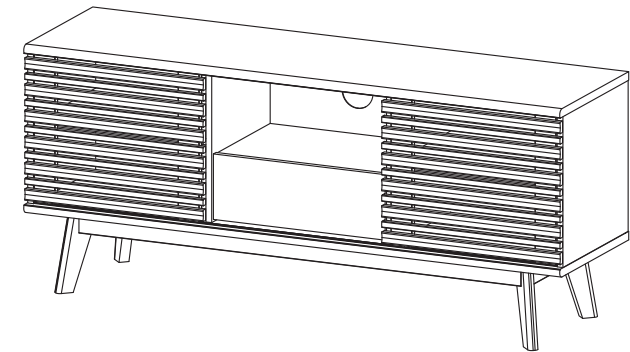

WARNING :










WEIGHT CAPACITY: 77 LBS.

DRAWER LOAD CAPACITY: 18 LBS.

Warning : Do not stand on media stand.

Warning : Do not over torque bolts.

Hardware List

HW1x12  $\varnothing$ 6 x 35 mm	HW2x8  $\varnothing$ 15 mm	HW3x4  $\varnothing$ 12 mm	HW4x26  $\varnothing$ 8 x 30 mm	HW5x2  $\varnothing$ 6 x 30 mm
HW6x8  M 7 x 50 mm	HW7x4  M 8 x 39 mm	HW8x10  M 6.4 x 53 mm	HW9x22  M 3.5 x 13 mm	HW10x14  M 6 x 12.5 mm
HW11x16  M 3.5 x 15.5 mm	HW12x8  	HW13x4  	HW14x1  	HW15x4 
HW16x24  M 4 x 16 mm	HW17x16  	HW18x4  	HW19x4  	HW20x2 
HW21x8  $\varnothing$ 15 mm	HW22x3  	HW BC410x4  	HW RM30Ax1  	HW US90x1 

Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board Left	1
D	Side Board Right	1
E	Bottom Skirt 1	2
F	Bottom Skirt 2	2
G	Leg	4
H	Center Board Left	1
I	Center Board Right	1
J	Adjustable Shelf	2
K	Fixed Shelf	1
L	Front Drawer	1
M	Side Drawer Left	1
N	Side Drawer Right	1
O	Back Drawer	1
P	Bottom Drawer	1
Q	Door	2
R	Back Board 1	2
S	Back Board 2	1

Piece	Description	Qty
HW1	Cambolt	12
HW2	CamLock Big	8
HW3	CamLock Small	4
HW4	Dowel Big	26
HW5	Dowel Small	2
HW6	Screw M 7 x 50 mm	8
HW7	Screw M 8 x 39 mm	4
HW8	Screw M 6.4 x 53 mm	10
HW9	Screw M 3.5 x 13 mm	22
HW10	Screw M 6 x 12.5 mm	14
HW11	Screw M 3.5 x 15.5 mm	16
HW12	Shelf Pin	8
HW13	Flange Nut	4
HW14	Wrench	1
HW15	Floor Protector	4
HW16	Screw M 4 x 16 mm	24
HW17	Wedge	16
HW18	Sliding Top	4
HW19	Sliding Bottom	4
HW20	Allen Key	2
HW21	Screw Cap	8
HW22	Bumper	3
HW BC410	Corner Brace	4
HW RM30A	Drawer Runner	1
HW US90	Anti Deflection Bar	1

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

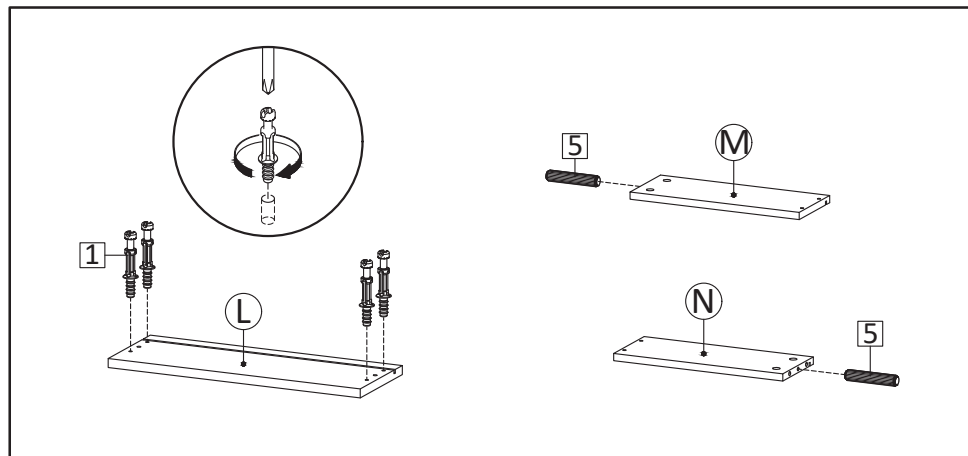


STEP1: Insert Cambolt (HW1) into Front Drawer (L). Insert Dowel Small (HW5) into Side Drawers (M&N).

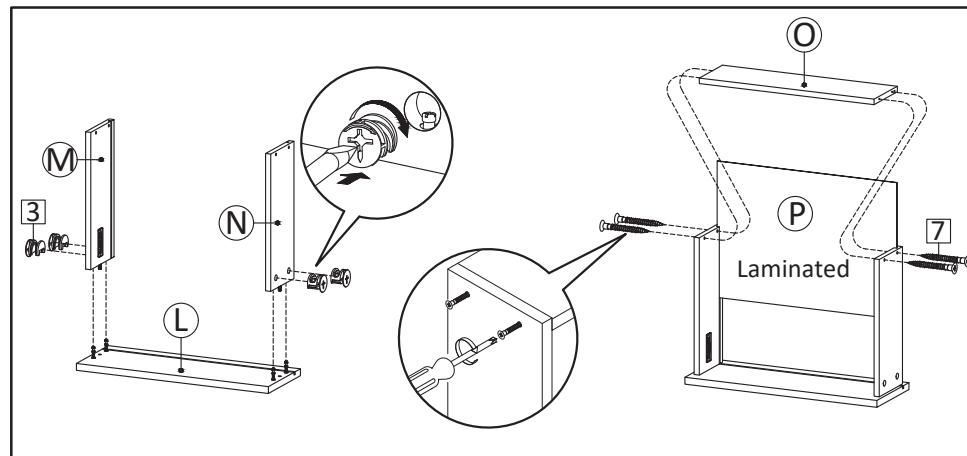

STEP2: Combine Side Drawers (M&N) into Front Drawer (L) then tighten Camlock Small (HW3) using screwdriver. Insert Bottom Drawer (P) with laminated face facing upward then put Back Drawer (O) and secure with Screw M8x39mm (HW7).

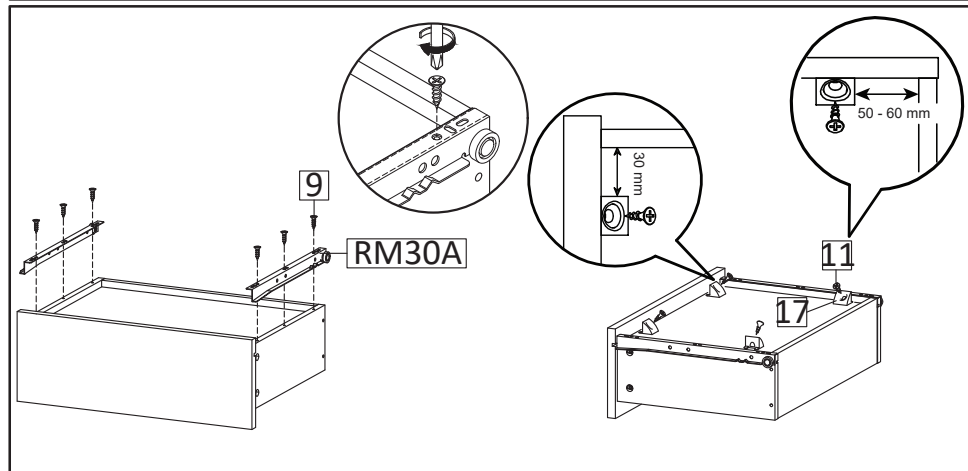

STEP3: Install the Drawer Runner (HW RM30A) into position as shown in picture. Secure with screws M3.5x13mm (HW9). Insert the Screw M3.5x15.5mm (HW11) and Wedge (HW17) into the bottom of the drawer according to the picture.

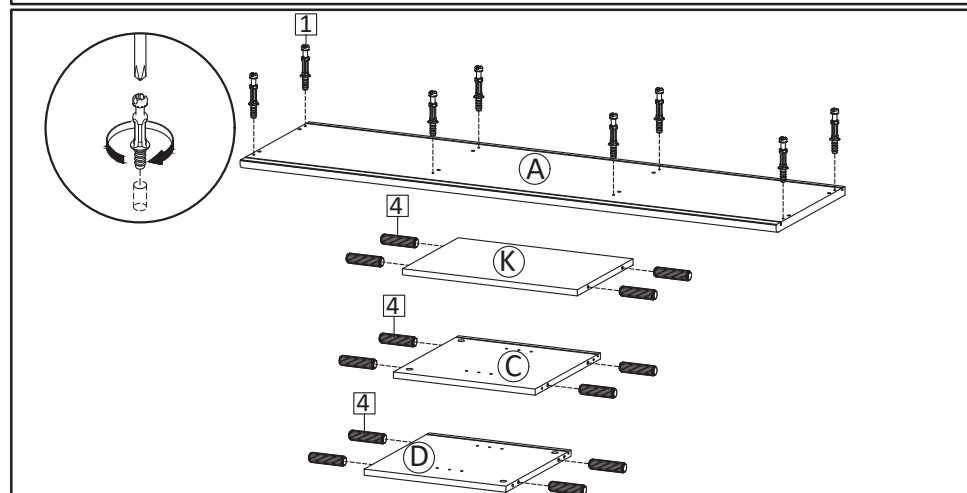

STEP4: Insert Cambolt (HW1) into Top Board (A). Insert Dowel Big (HW4) into Side Board Left (C), Side Board Right (D) and Fixed Shelf (K) as figure.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

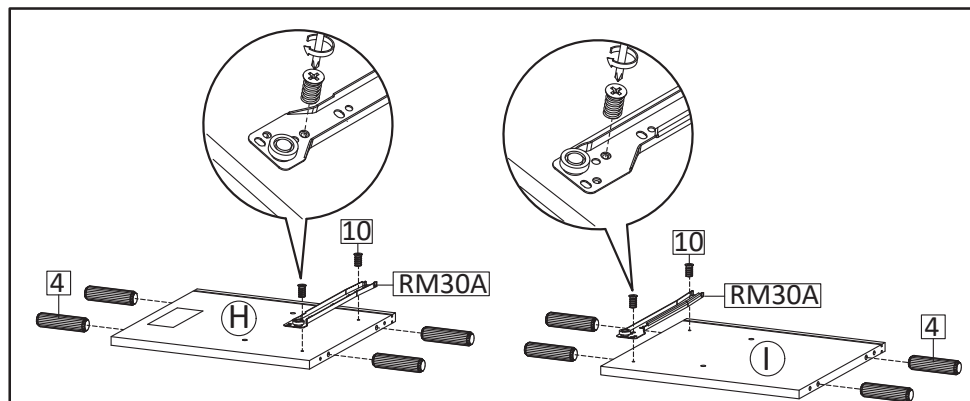


STEP5: Insert Dowel Big (HW4) into Center Board Left (H) and Center Board Right (I). Continue with securing part of the Drawer Runner (HW RM30A) into position as the above image, using screw M6x10.5mm (HW10).

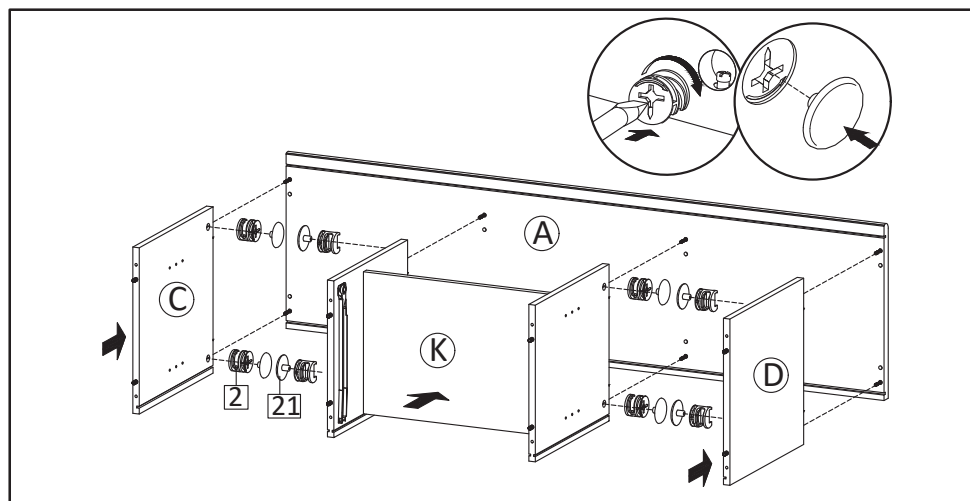

STEP7: Arrange Side Board left (C), Side Board Right (D) and assembled components from step 6 as per figure. Attach Top Board (A), insert Camlock (HW2) then tighten using a screwdriver. Place the Screw Cap (HW21) over the camlock as shown.

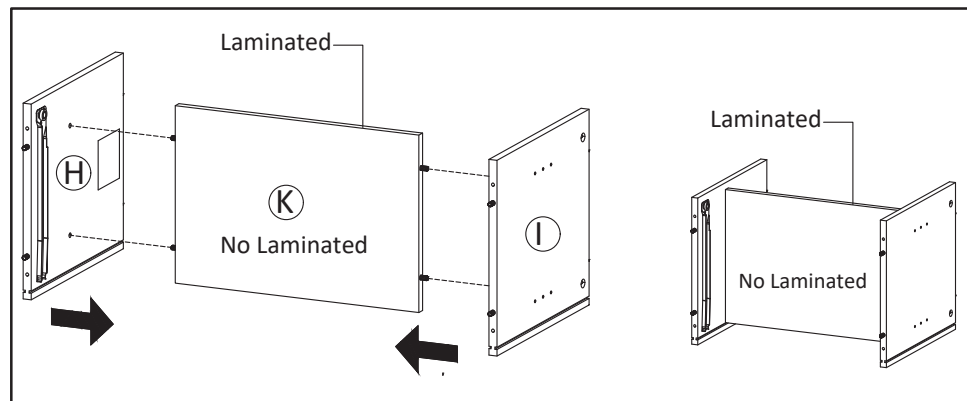

STEP6: Combine Center Boards (H&I) into Fixed Shelf (K) into position as the above image.

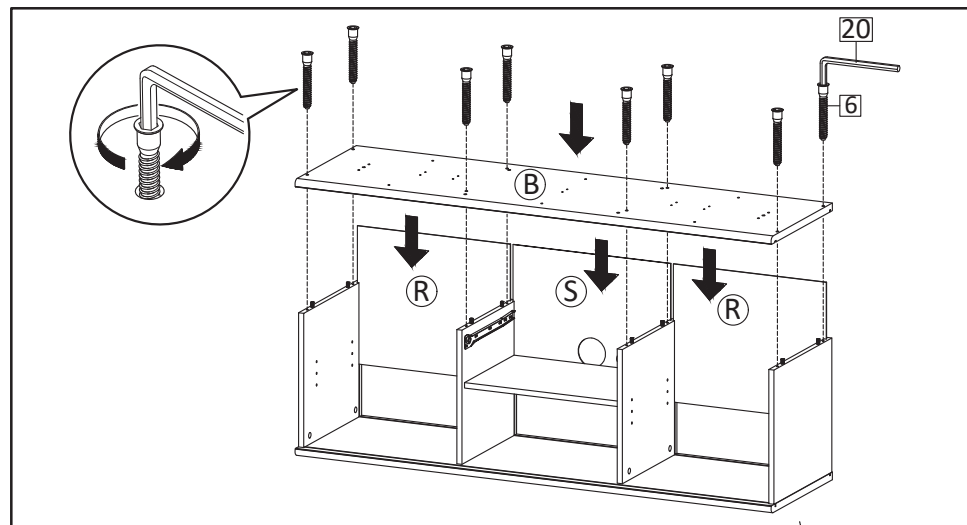

STEP8: Attach Back Board 1 (R), Back Boards 2 (S) and Insert Bottom Board (B), secure with Screw M7x50mm (HW6), tighten screws using Allen Key (HW20).

PREPARATION





*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.


*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

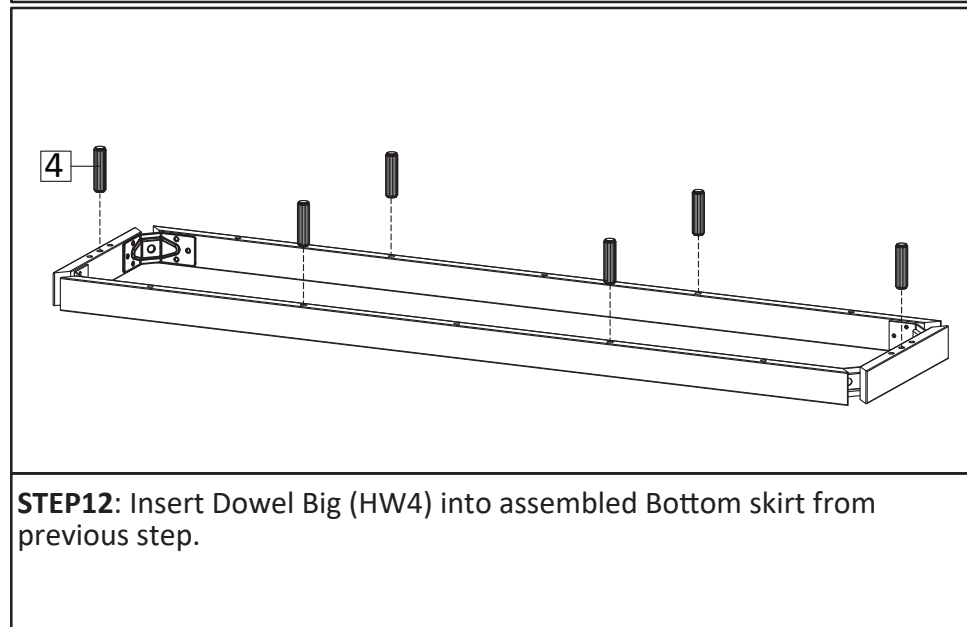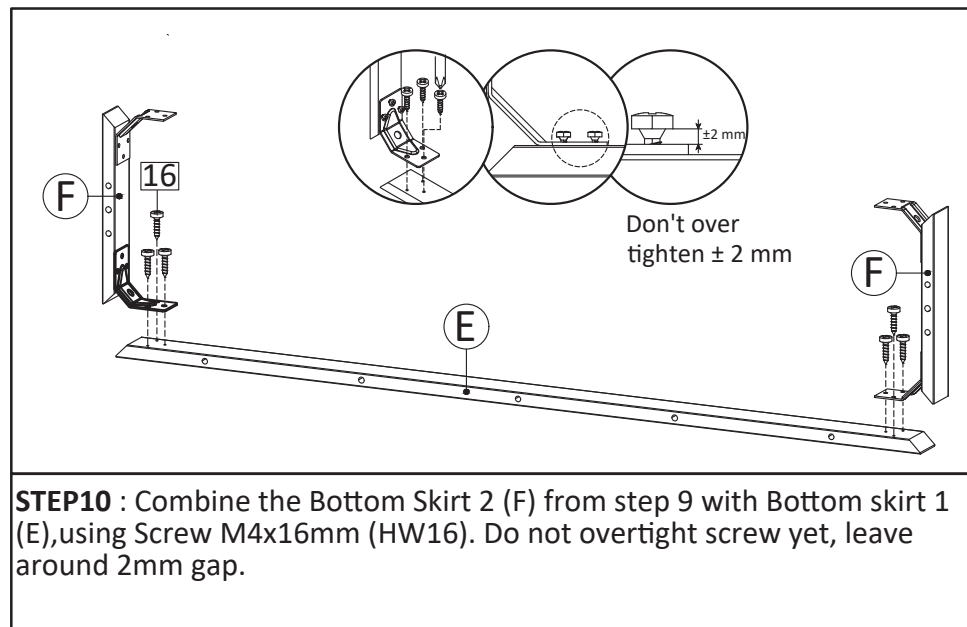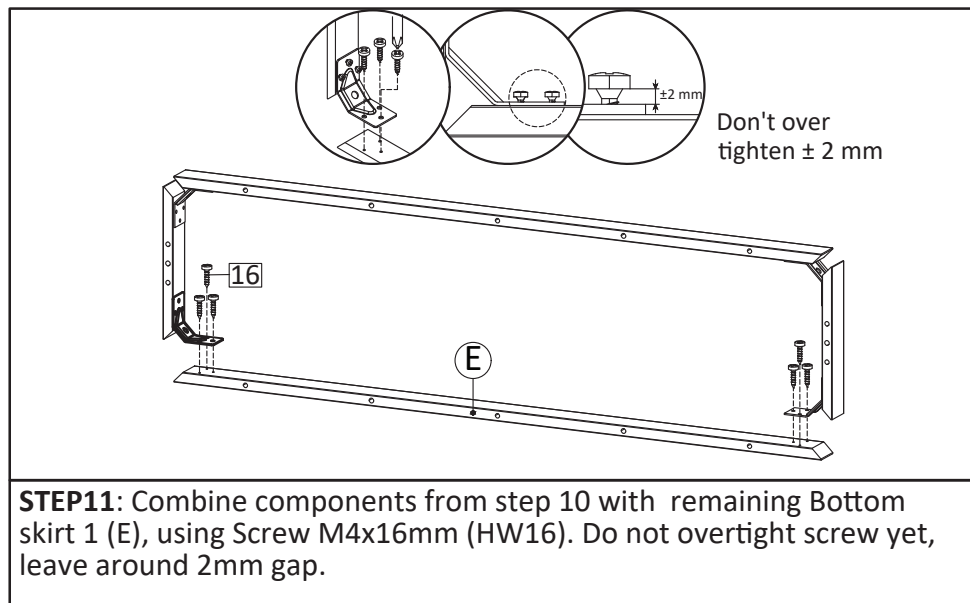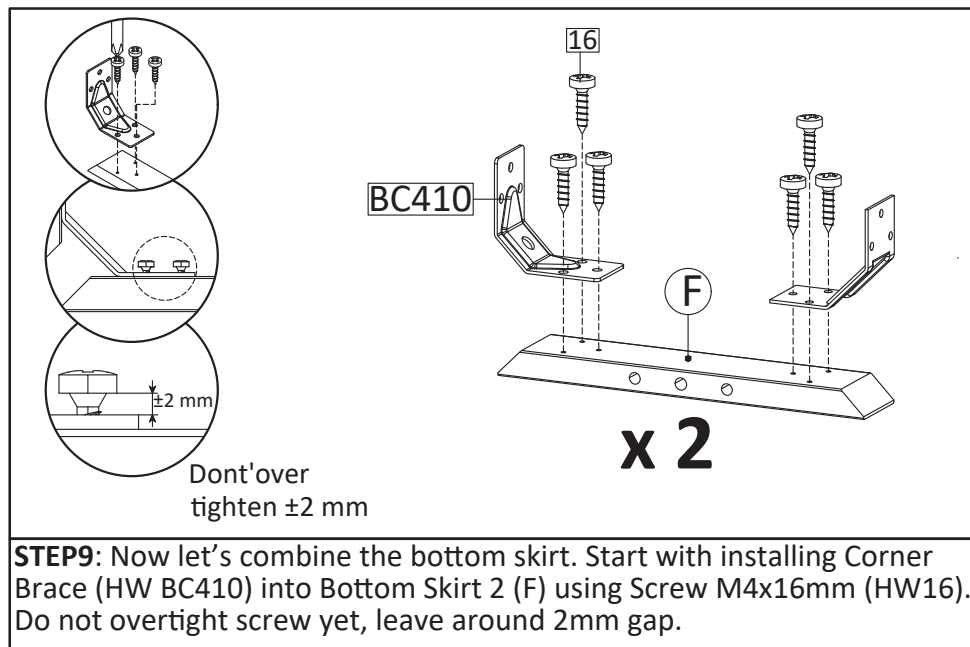


PREPARATION


- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

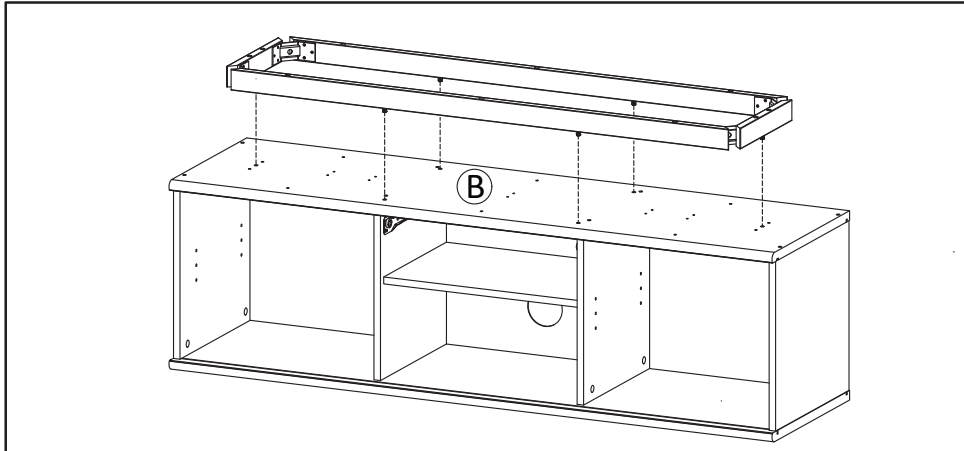


STEP13: Bring the assembled bottom skirt and insert into Bottom Board of the Sideboard.

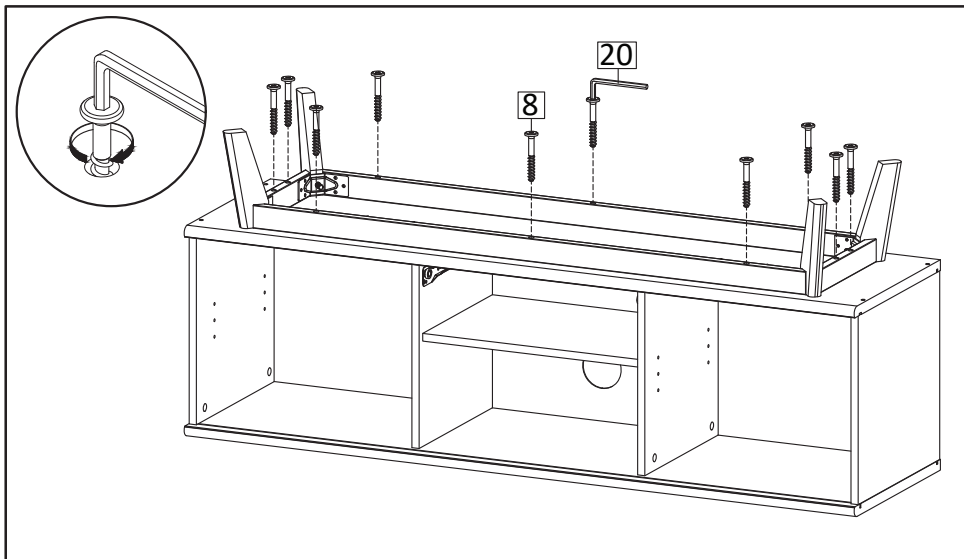

STEP15: Insert Screw M6.4x53mm (HW8) using Allen Key (HW20) into assembled bottom skirt and bottom board.

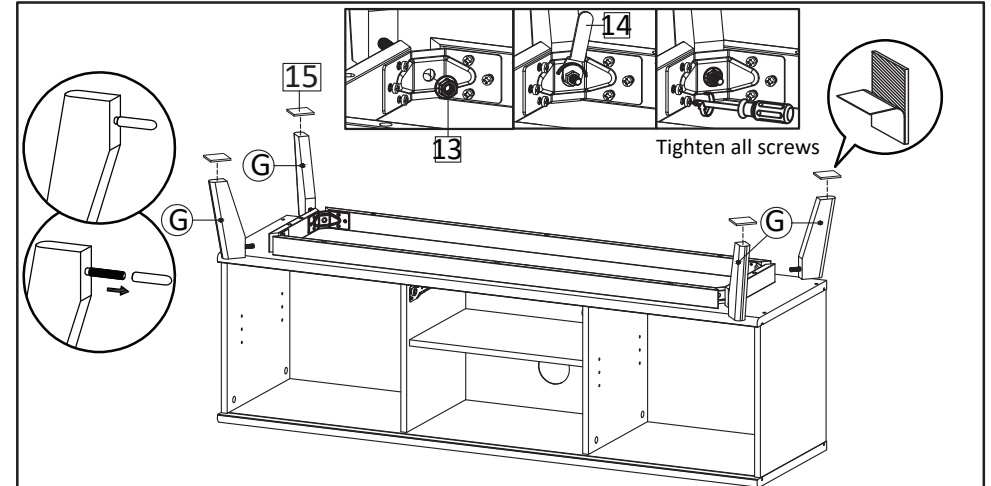

STEP14: First, let's fix the leg by inserting leg to Corner Brace, Insert Flange Nut (HW13) first into the hanger bolt of leg, tighten all the Flange Nut using provided Wrench (HW14). Second, after ensuring that all legs has been tightened, continue with tighten all screws on the corner brace. Peel off paper from Floor Protector (HW15) and stick it onto the leg.

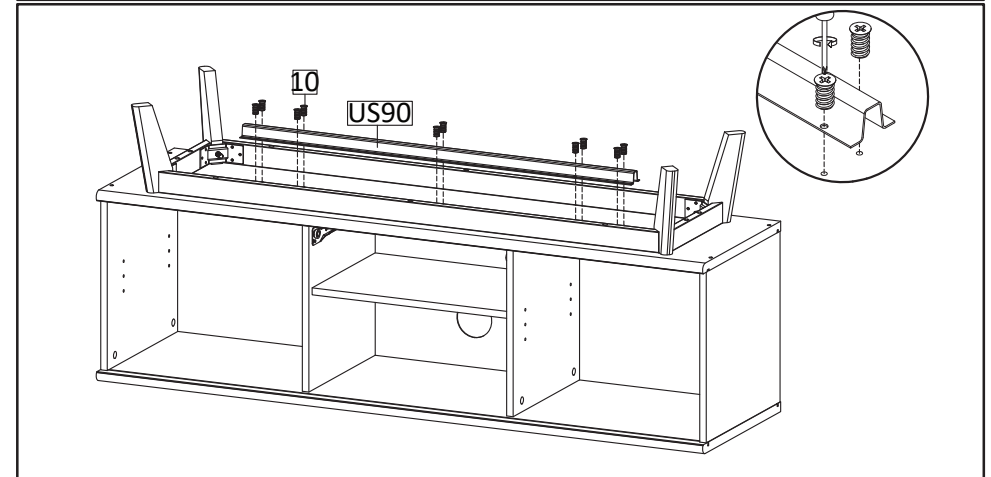

STEP16: Place Anti-Deflection Bar (HWUS90), secure with screw M6x10.5mm (HW10), tighten using screwdriver.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

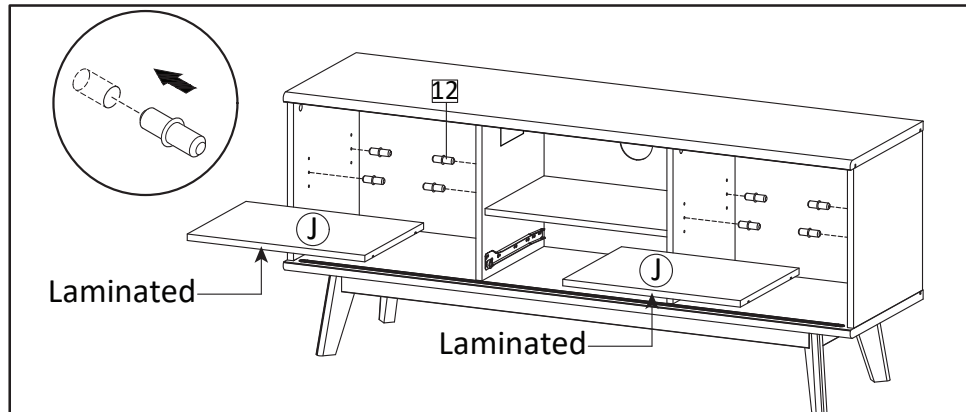


STEP17: After bringing the product upright, insert Shelf Pin (HW12) into the grooving on Side board & Center board, on the desired level. Then place the Adjustable Shelf (J) by inserting the hole on the shelf into the shelf pin.

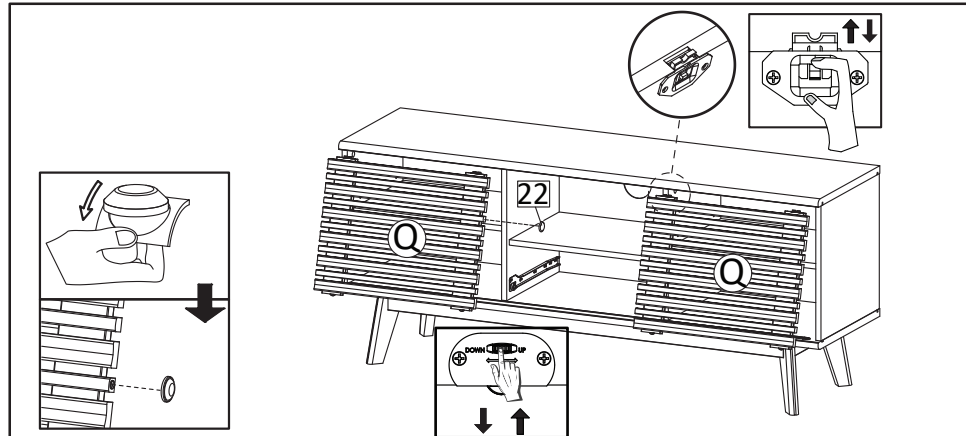

Step19: Install the doors (Q) and insert the Sliding Top (HW18) pin into the groove line of the Top Board. Position the Sliding Bottom (HW19) into the sliding track of Bottom Board. Adjust gap of the door, by scroll the button on Sliding Roller (HW19). Follow the down and up direction. Slide both doors to right and left ensuring the door has been placed properly in the back sliding track. Add Bumper (HW22) bar of left door as shown in figure.

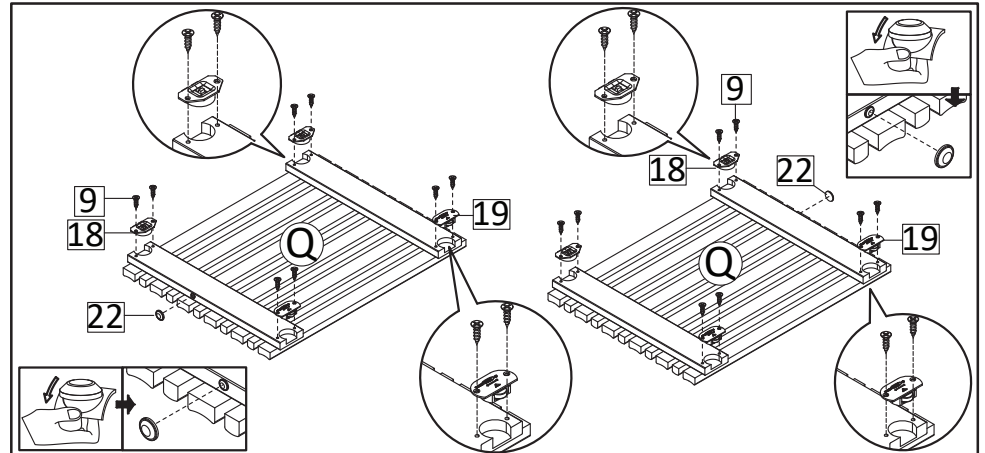


STEP18: Insert Sliding Top (HW18) and Sliding Bottom (HW19) using Screw M3.5x13mm (HW9) into Door (Q), tighten with a screwdriver. Peel the back paper of Bumper (HW22) then 2 pcs on Door, 1 pc, position as shown in the figure.

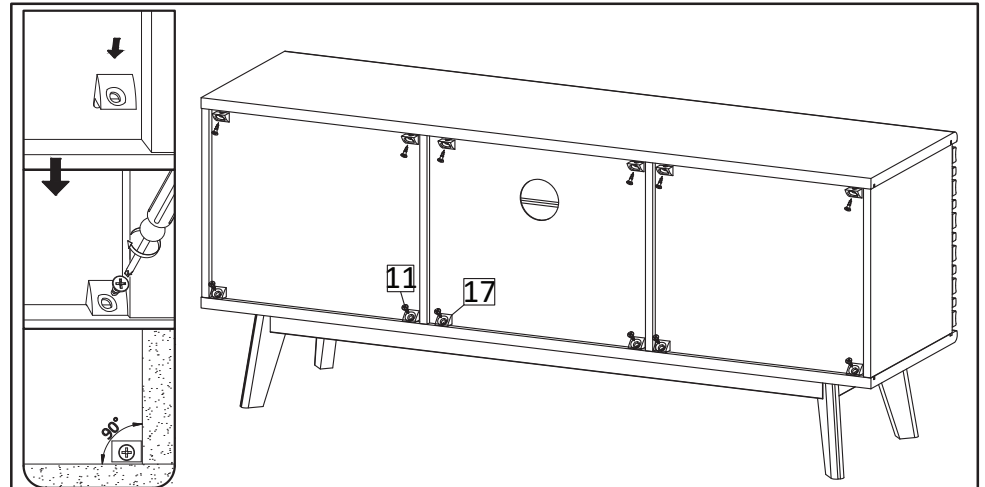


STEP20: Use Wedge (HW17), Screw M3.5x15.5mm (HW11) to tighten the back of media stand by using screwdriver. Please align the top board and bottom board in 90° position against the side board, before securing the wedges (HW17).

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

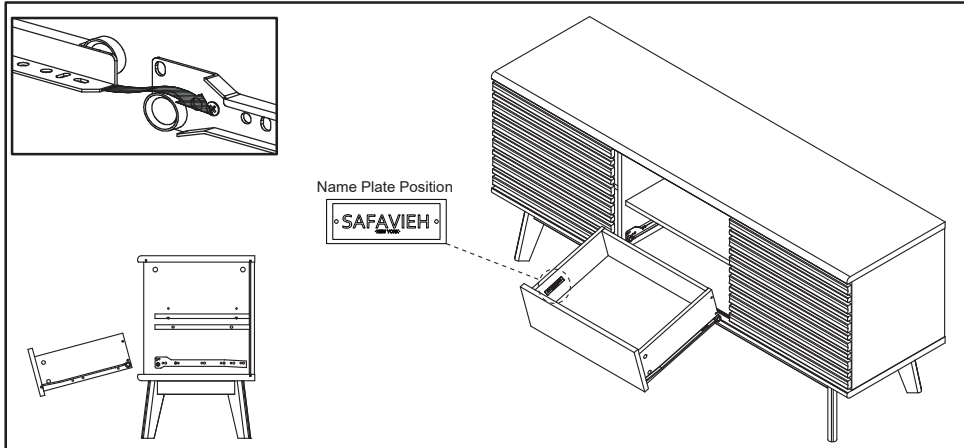

STEP21: Hold the sides of drawer, position the wheel of Drawer Runner at drawer back and the wheel of Drawer Runner at side boards, according to the image. Slide in the drawer into the Media Stand/Sideboard.

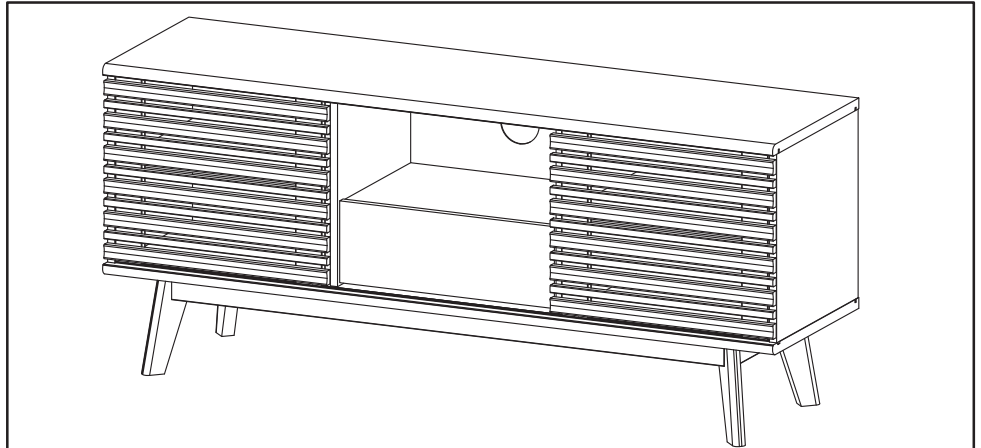

STEP22: Assembly is Complete.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

