

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

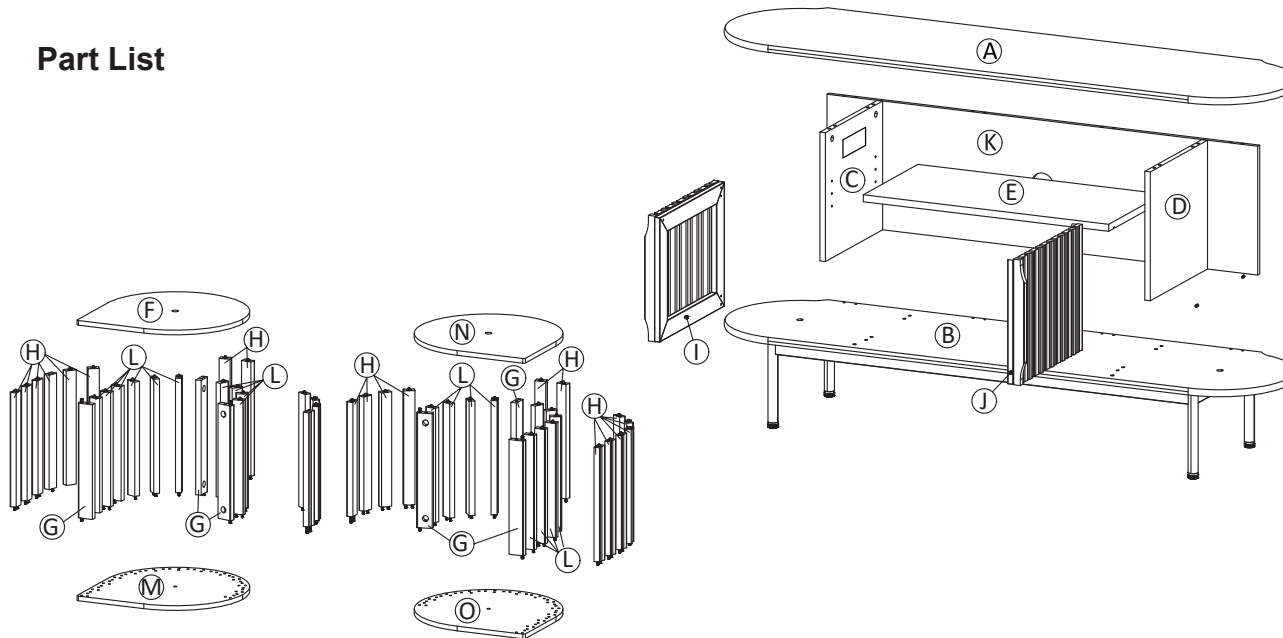

 **SAFAVIEH**
FURNITURE

Model# MED9639

Product Dimensions: 60"Wx15"Dx23"H

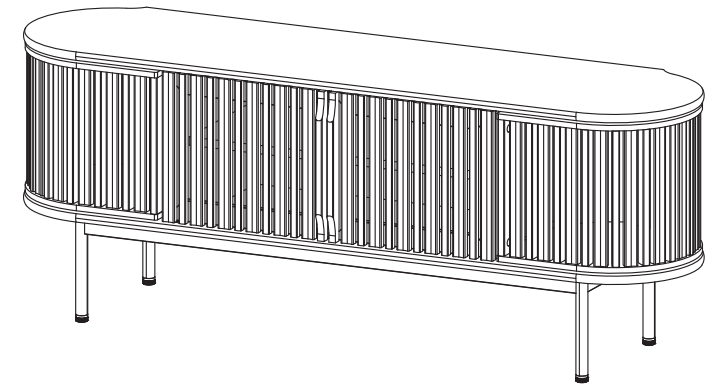















WARNING :

WEIGHT CAPACITY: 85 LBS.

Warning : Do not stand on media stand.

Warning : Do not over torque bolts.

Hardware List

HW1x12  $\varnothing$ 6 x 35 mm	HW2x16  $\varnothing$ 15 mm	HW3x8  $\varnothing$ 8 x 30 mm	HW4x20  $\varnothing$ 6 x 30 mm	HW5x10  M 4 x 12.5 mm
HW6x4  M 3.5 x 13 mm	HW7x4  	HW8x4  	HW9x4  M 7 x 50 mm	HW10x2 
HW11x2  	HW12x2  	HW13x2  	HW14x4  	HW15x2 
HW16x12  $\varnothing$ 6 x 32 mm	HW17x8  $\varnothing$ 12 mm	HW18x4  M 6 x 40 mm	HW19x12  M 6.4 x 53 mm	HW20x4  M 6 x 25 mm
HW21x2  	HW22x2  	HW23x4  	HW24x16  	HW25x2 
HW26x2  	HW27x2  	HW28x4  	HW29x4  	HW30x2 
HW31x1  				

Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Center Board Left	1
D	Center Board Right	1
E	Adjustable Shelf	1
F	Top Swivel Board 1	1
G	Bar Side 1	6
H	Bar Side 2	24
I	Door Left	1
J	Door Right	1
K	Back Board	1
L	Bar Side 3	20
M	Bottom Swivel Board 1	1
N	Top Swivel Board 2	1
O	Bottom Swivel Board 2	1

Piece	Description	Qty
HW1	Cambolt Long	12
HW2	CamLock Big	16
HW3	Dowel Big	8
HW4	Dowel Small	20
HW5	Screw M 4.5 x 12.5 mm	10
HW6	Screw M 3.5 x 13 mm	4
HW7	Shelf Pin	4
HW8	Small Pipe	4
HW9	Screw M 7 x 50 mm	4
HW10	Allen Key	2
HW11	Foam Pad	2
HW12	Pivot Hinge Bottom Set	2
HW13	Pivot Hinge Top	2
HW14	Corner Brace	4
HW15	Plate for Push to Open Latch	2
HW16	Cambolt Short	12
HW17	CamLock Small	8
HW18	Screw M 6 x 40 mm	4
HW19	Screw M 6.4 x 53 mm	12
HW20	Screw M 6 x 25 mm	4
HW21	Stopper	2
HW22	Push Tool	2
HW23	Support Corner Brace	4
HW24	Screw Cap	16
HW25	Screw Cap	2
HW26	Support Metal Leg 1	2
HW27	Support Metal Leg 2	2
HW28	Metal Leg	4
HW29	Swivel	4
HW30	PVC Sheet	2
HW31	Cable Hole	1

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

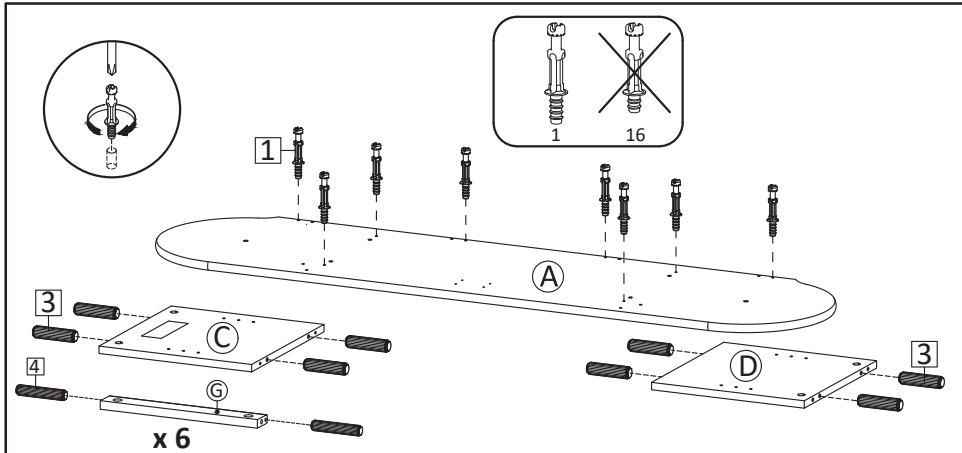


STEP1: Insert Cambolt Long (HW1) into Top Board (A). Insert Dowel Big (HW3) into Center Boards (C&D). Insert Dowel Small (HW4) into Bar Side 1 (G).

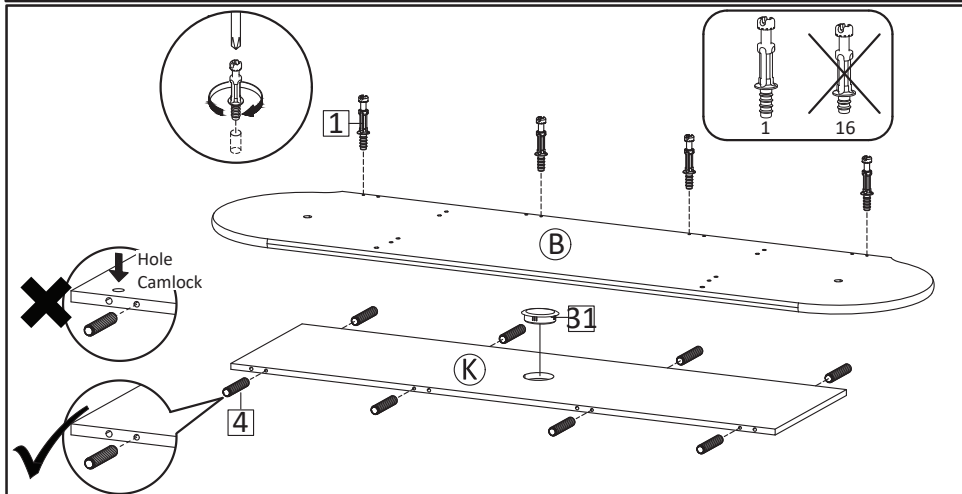

STEP3: Insert Cambolt Long (HW1) into Bottom Board (B). Lay down the Back Board (K), notice the surface without camlock hole facing up. Insert Dowel Small (HW4) and Cable Hole (HW31) into Back Board (K).

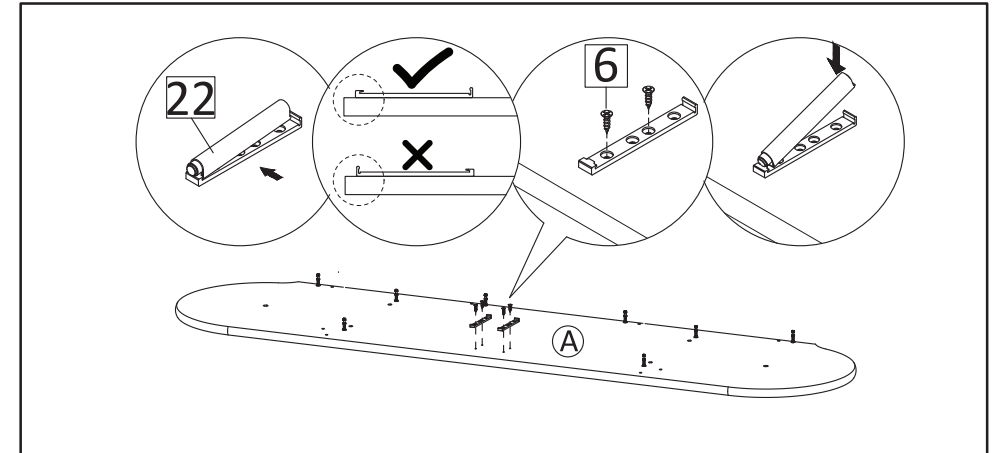

STEP2: Insert Push Tool (HW22) secure with Screw M3.5x13mm (HW6) into Top Board (A).

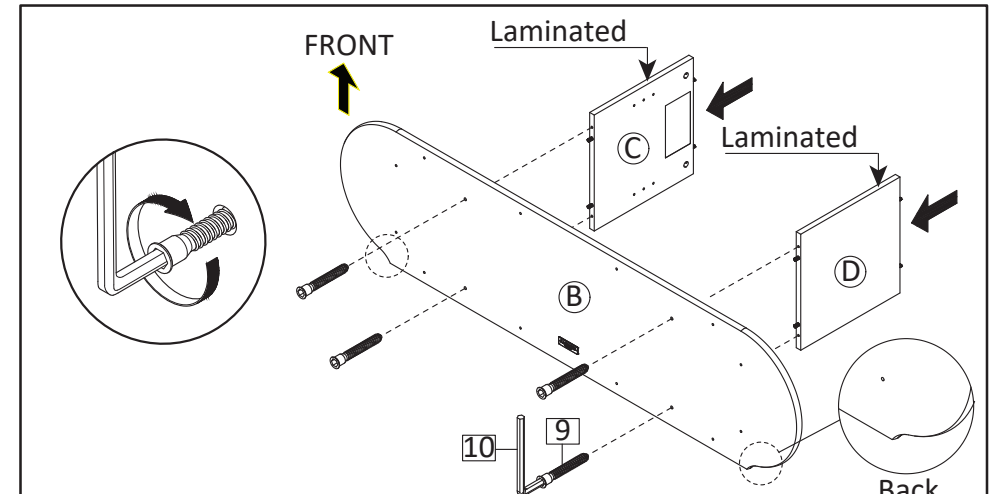

STEP4: Insert Center Boards (C&D) into Bottom Board secure with Screw M7x50mm (HW9),tighten screws using Allen Key (HW10) as figure.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

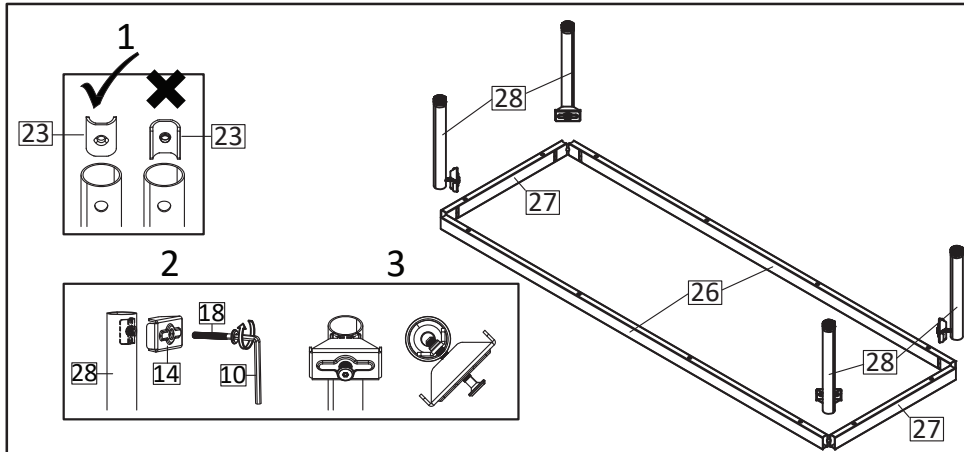


STEP5: Insert Support Corner Brace (HW23) and place it inside Leg tube (HW28). Insert Screw (H18) into the hole of Corner Brace (HW14). Screw in slightly just enough to grip Leg (HW21) with Support Corner Brace (HW23) inside Do not tighten. Arrange Support Metal Leg 1 (HW26) & Support Metal Leg 2 (HW27) on the floor as per image.

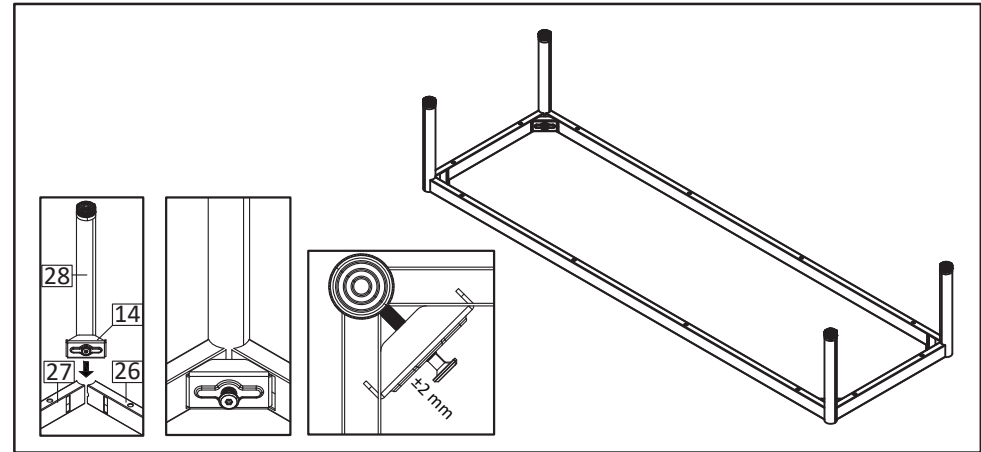

STEP6: Install the prepared Leg (HW28). Ensure the Corner Brace (HW14) hooks onto the hole of Support Metal Leg (HW26) and (HW27). Screw in just enough to grip the support metal leg using Allen Key (HW10). Do not fully tighten. Repeat for the other legs.

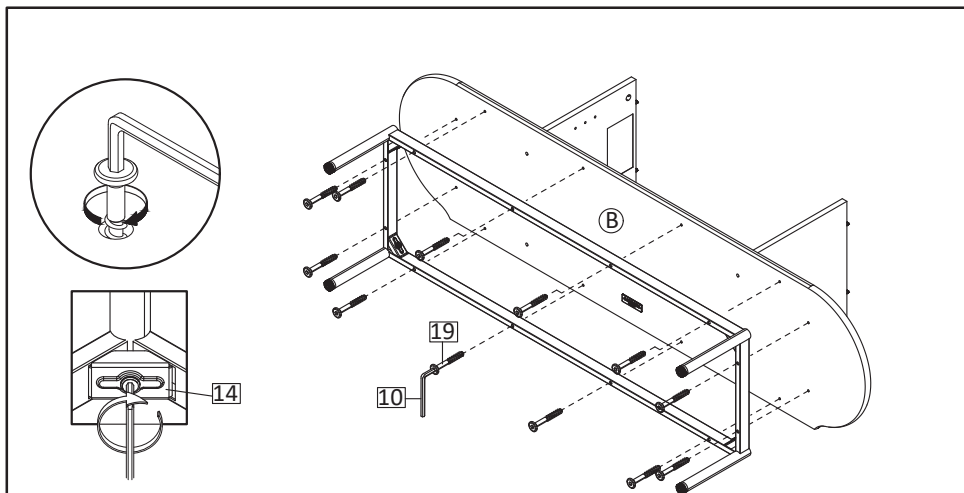

STEP7: Install assembled leg unit from Step 6 onto main assembled unit by inserting Screw (HW19). Tighten with Allen Key (HW10). Then tighten all the Screw on all Corner Brace (HW14).

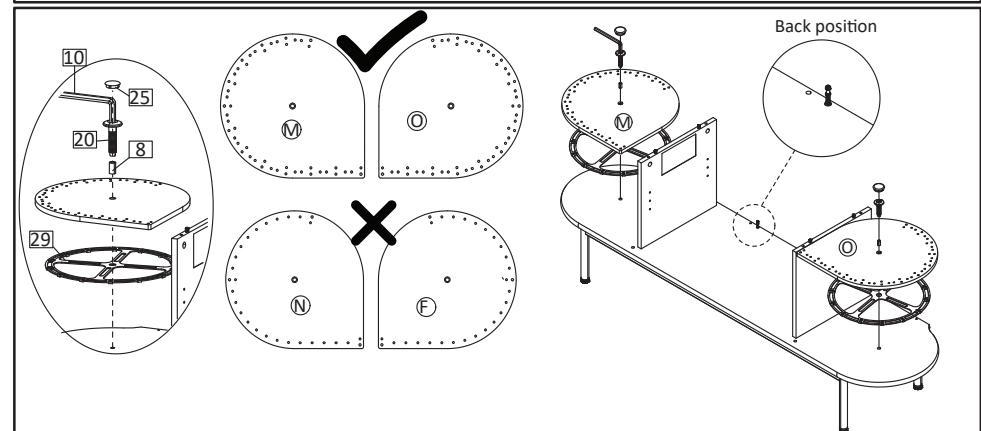

STEP8: Bring the product to upright position. Distinguish Bottom Swivel Board (M&O) from Top Swivel Board (F&N), put aside F&N first. Place the Swivel part (HW29) on Bottom Board (B) and Bottom Swivel Board on it. Align the center holes position. Insert screw M6x25mm into Small Pipe (HW8) then place both to secure the Bottom Swivel Board, tighten using Allen Key (HW10). Place the Screw Cap (HW25) over the screw.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

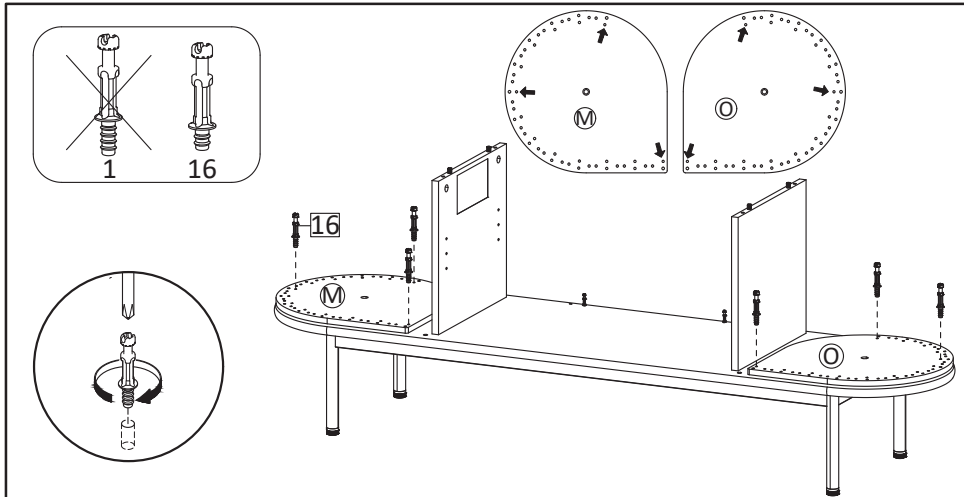


STEP9: Insert Cambolt Short (HW16) into Bottom Swivel Boards (M&O). Carefully see the position shown with arrow.

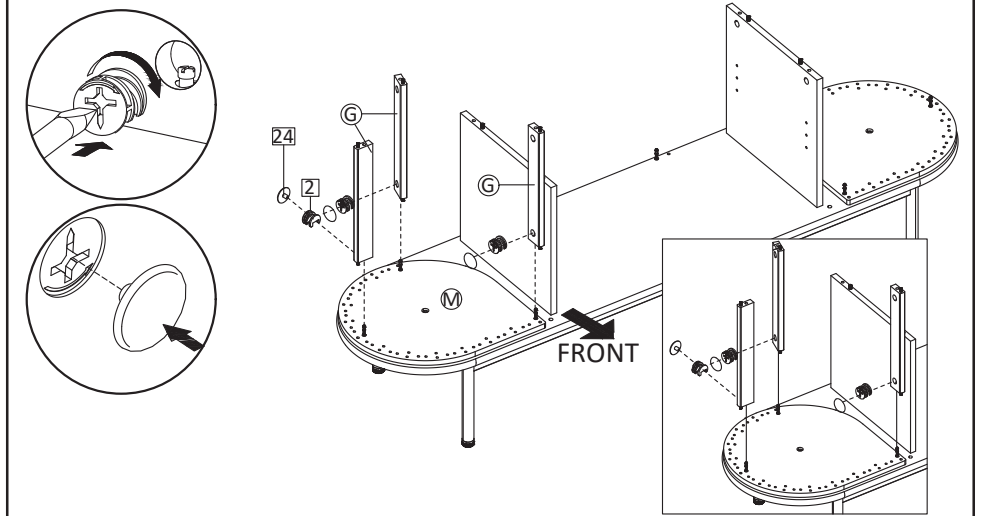

STEP10: Now let's build the left hand swivel case. Insert Bar Side 1 (G) into Bottom Swivel Board 1 (M). Insert the Camlock Big (HW2) then tighten using a screwdriver place the Screw Cap (HW24) over the camlock.

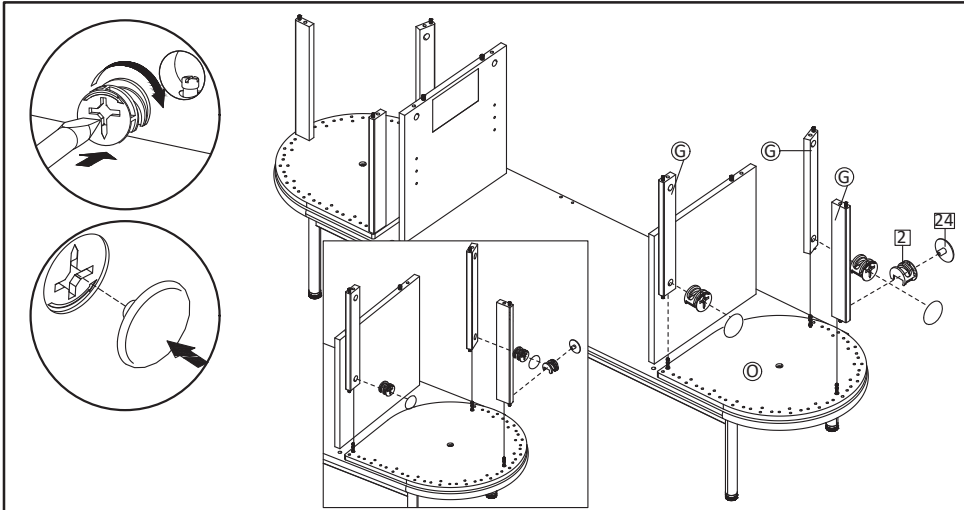

STEP11: Connue to build the right hand swivel part. Insert Bar Side 1 (G) into Bottom Swivel Board 2 (O). Insert the Camlock Big (HW2) then tighten using a screwdriver place the Screw Cap(HW24) over the camlock as figure.

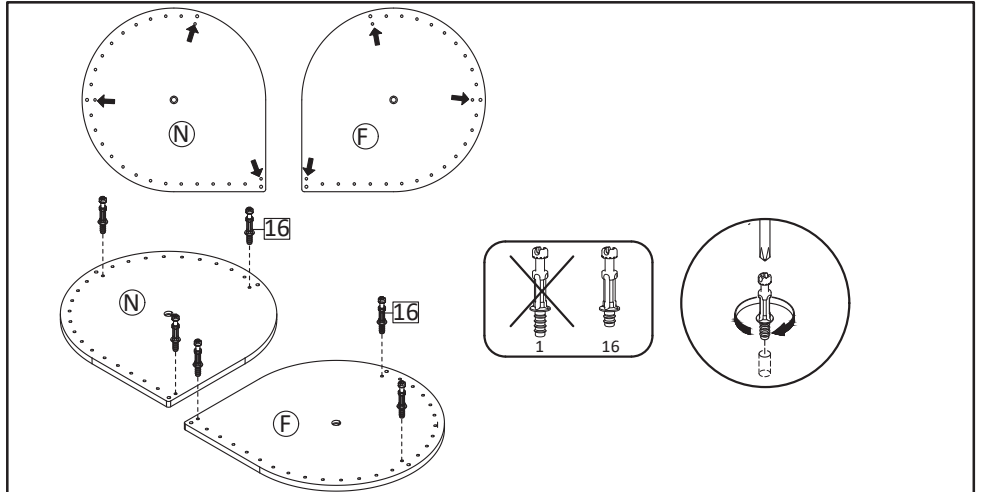

STEP12: Insert Cambolt Short (HW16) into Top Swivels (F&N) as figure.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

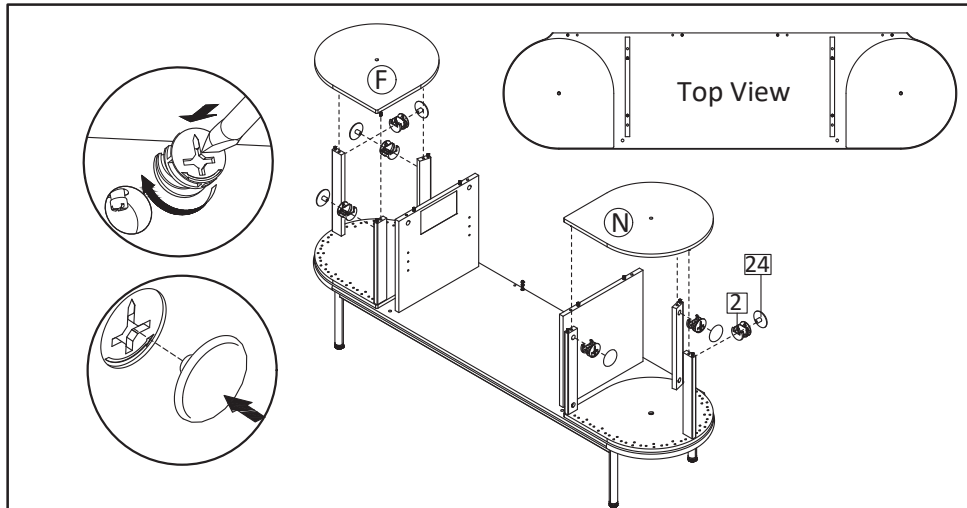


STEP13: Attach Top Swivels (F&N) into assembled body Carefully see position. Insert the Camlock Big (HW2) then tighten using a screwdriver place the Screw Cap (HW24) over the screws as figure.

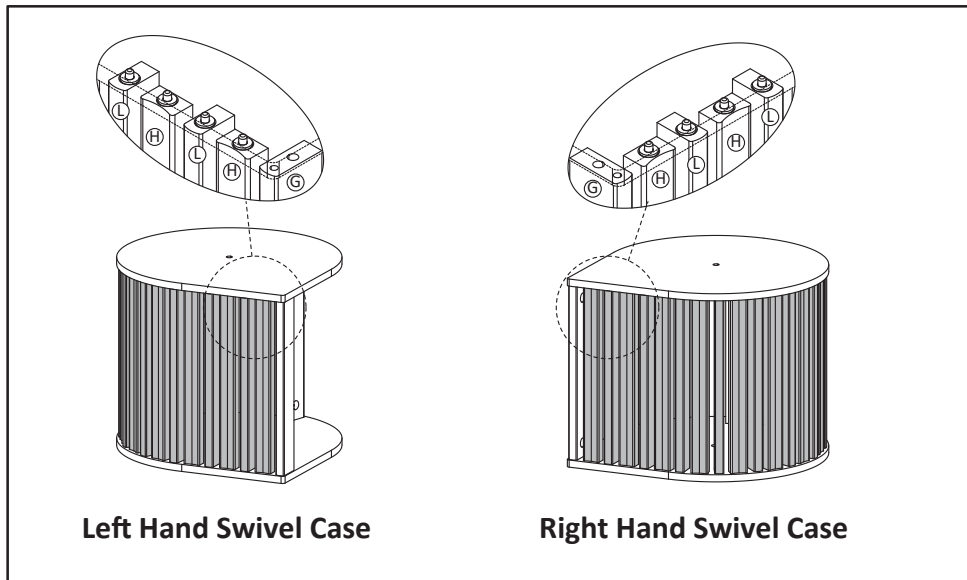

Left Hand Swivel Case

Right Hand Swivel Case

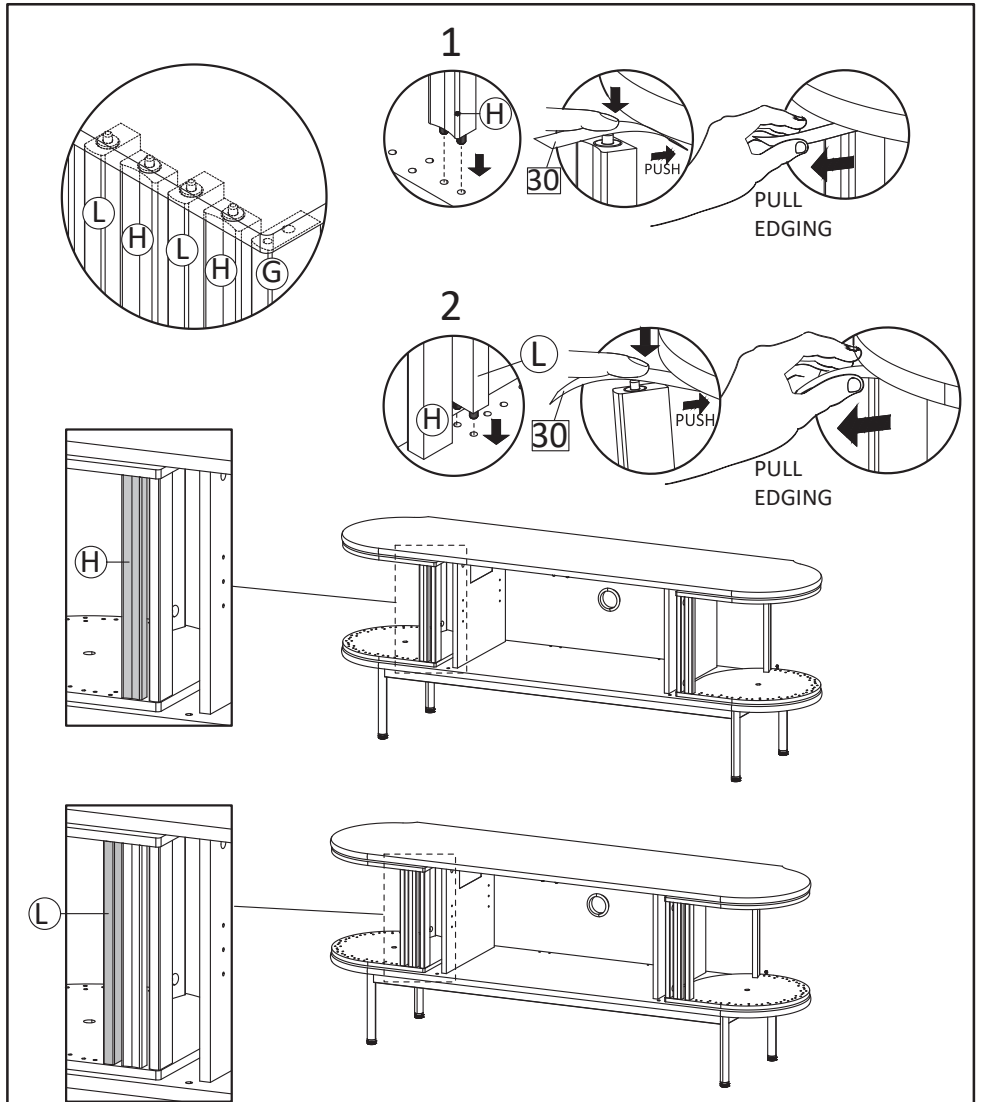

STEP14: Install Bar Sides 2&3 (H&L) in alternating sequence. You can install the left swivel case first or the right swivel case first, follow the detailed images.

PREPARATION





*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

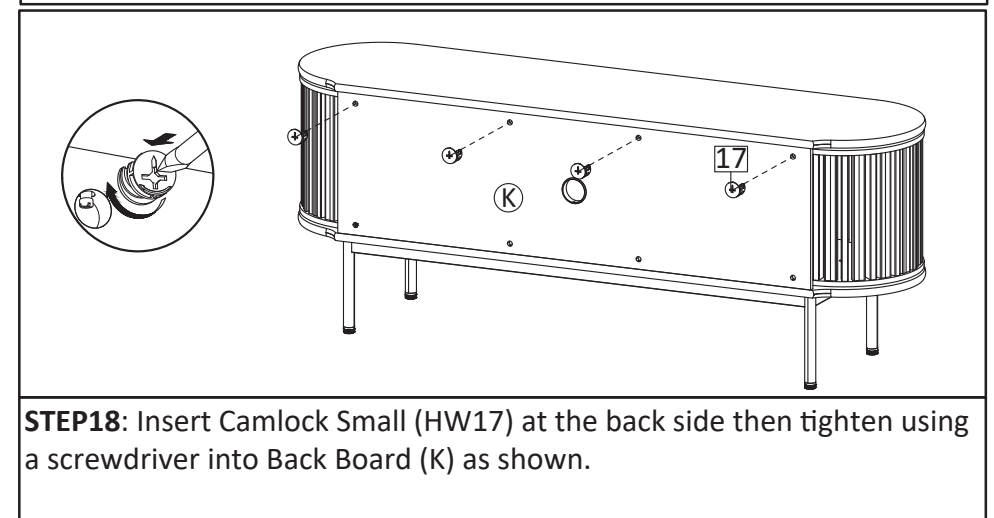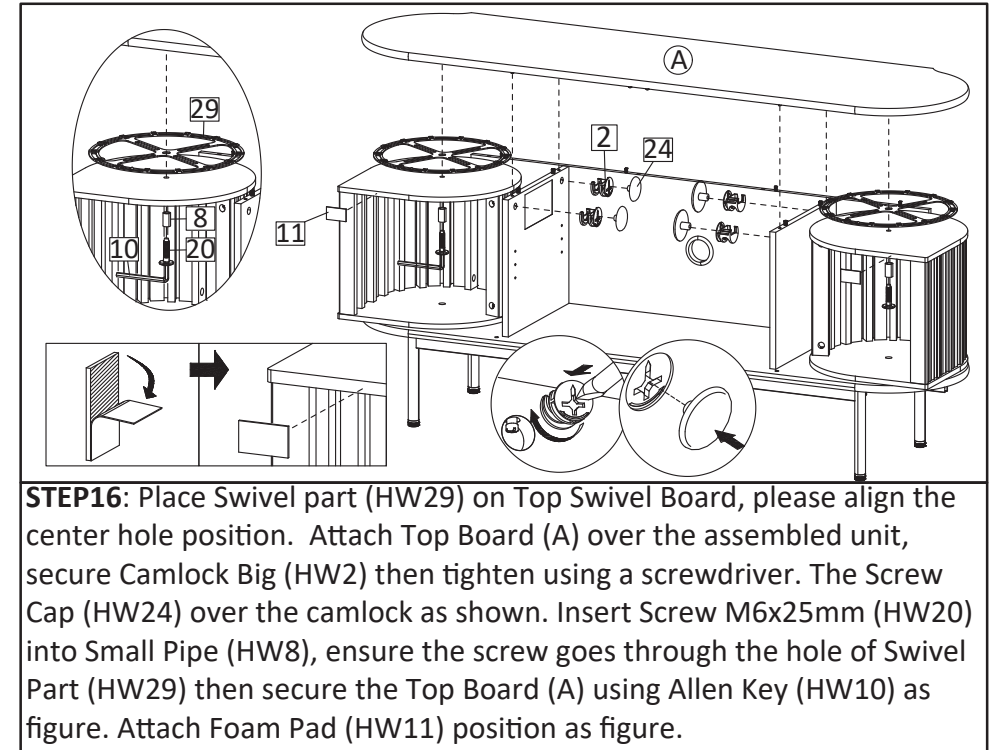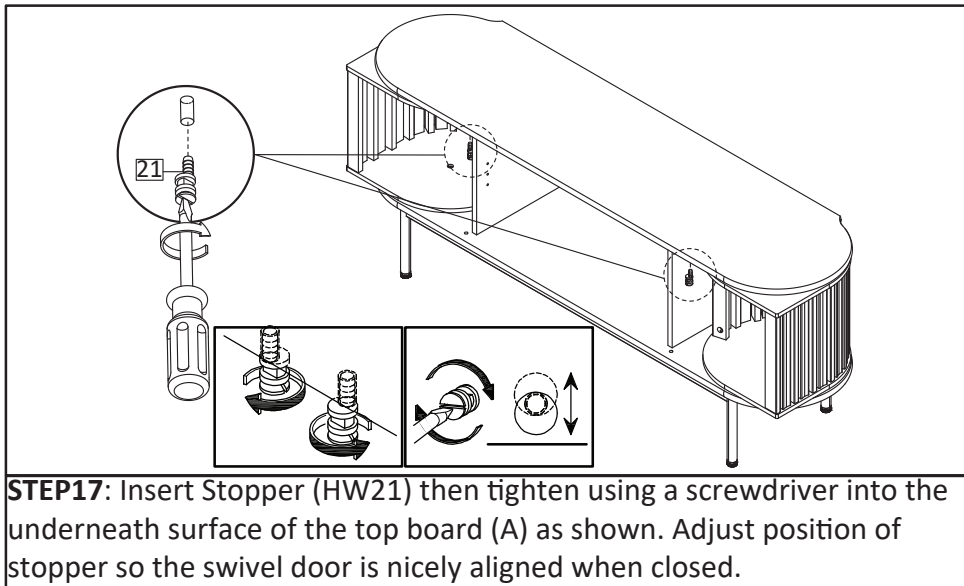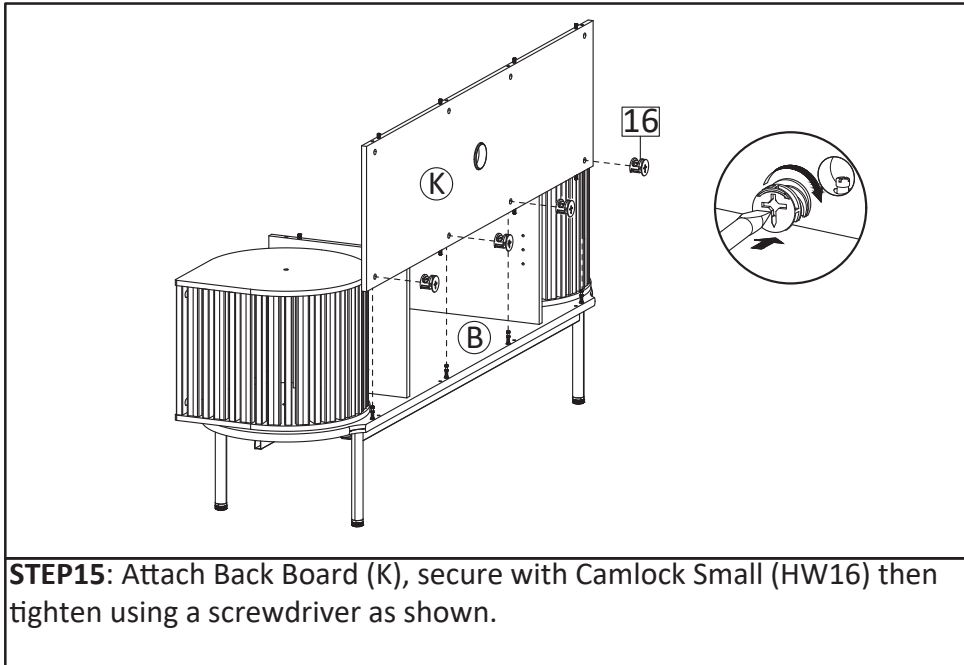

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 90 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

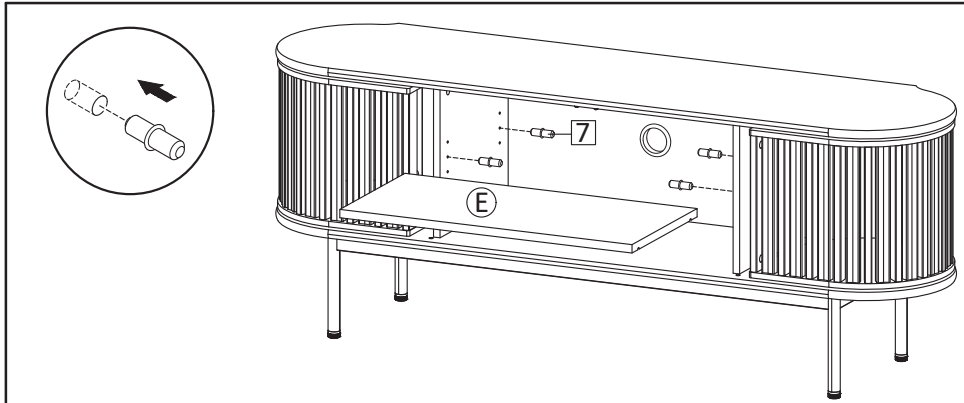


STEP19: Insert Shelf Pin (HW7) into the holes on Center Boards, on the desired level. Then place the Adjustable Shelf (E) by inserting the hole on the shelf into the shelf support.

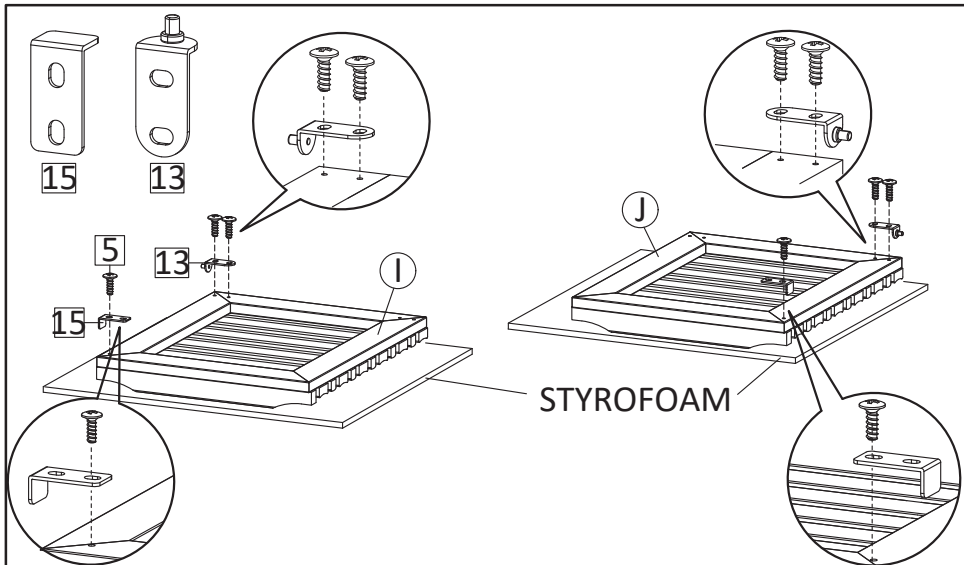

STEP21: Attach Pivot Hinge Top (HW13) and Plate for Push to Open Latch (HW15) secure with M4.5X12.5mm (HW5) to Door 1 (I) and Door 2 (J) as shown.

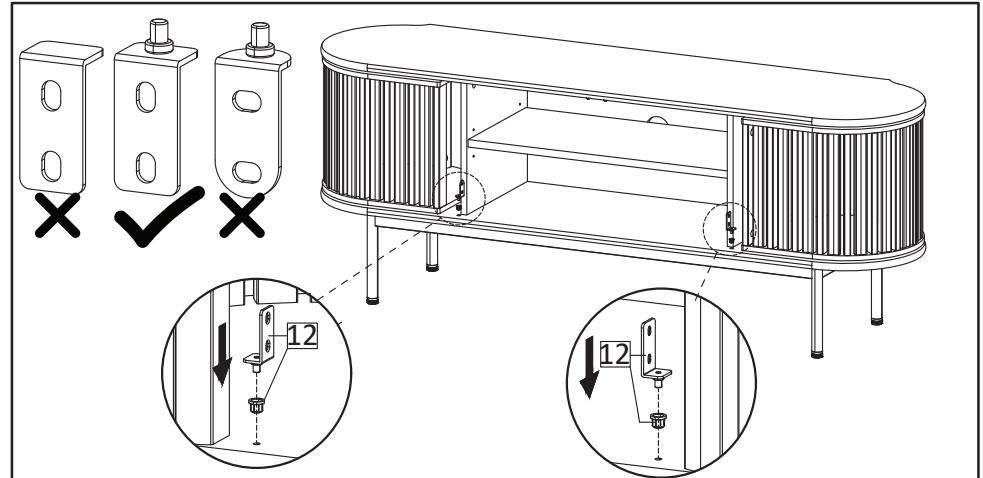


STEP20: Insert Pivot Hinge Bottom Set (HW12) into Bottom Board as shown. Place the housing to Bottom Board then insert the pivot Bottom Hinge pin into the plastic housing.

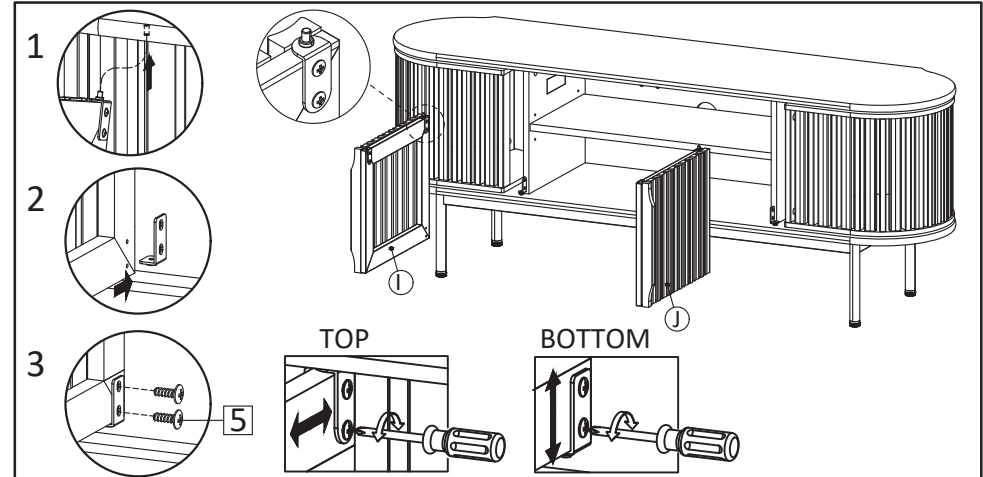

STEP22: Attach Door 1 (I) by inserting Top Pin into provided hole underneath surface of the Top Board (A). Place Bottom of the door to Pivot Hinge Bottom Set (HW12). Adjust the door gap the secure door to hinge with screw M4.5x12.5mm (HW5) using screwdriver.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 90 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

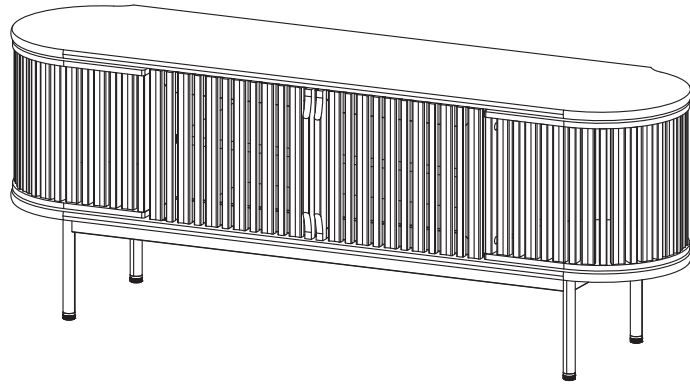

STEP23: Assembly is Complete.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

