













CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
The use of steam or water-based cleaners may cause excessive shrinking or staining.

NOTICE


- * Please make sure that you have all parts indicated before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	TOP PANEL		1X
B	LEFT PANEL		1X
C	RIGHT PANEL		1X
D	BOTTOM ASSEMBLY		1X
E	BACK PANEL		1X
F	LEG FRAME		2X
G	BASE FRAME		1X
H	DRAWER FRONT		1X
I	DRAWER LEFT		1X
J	DRAWER RIGHT		1X
K	DRAWER BACK		1X
L	DRAWER BASE		1X





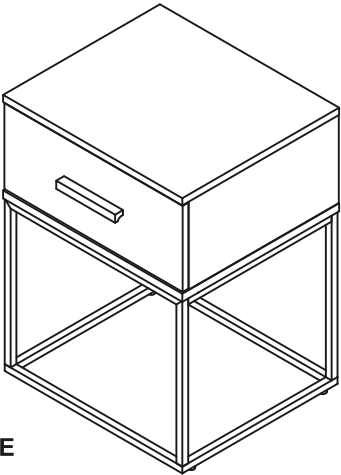









Model# NST5005A
Product Dimensions: 18"W x 16"D x 24"H




WEIGHT CAPACITY :
TOP : 110 LBS
DRAWER : 30 LBS

WARNING: DO NOT OVER TORQUE
BOLTS/SCREWS


PIECE	DESCRIPTION	PICTURE	QUANTITY
1	30 MM BOLT	M6x30mm 	12X
2	SPRING WASHER		8X
3	FLAT WASHER		8X
4	1 1/4" FLAT HEAD SCREW	M3x32mm 	8X
5	3/4" FLAT HEAD SCREW	M3x19mm 	2X
6	5/8" FLAT HEAD SCREW	M3x16mm 	6X
7	CAMBOLT		12X
8	CAMLOCK		12X
9	MACHINE SCREW	M4x25mm 	2X
10	HANDLE		1X
11	WOODEN DOWEL		8X
12	ALLEN KEY		1X
13	WEDGE		6X

PREPARATION

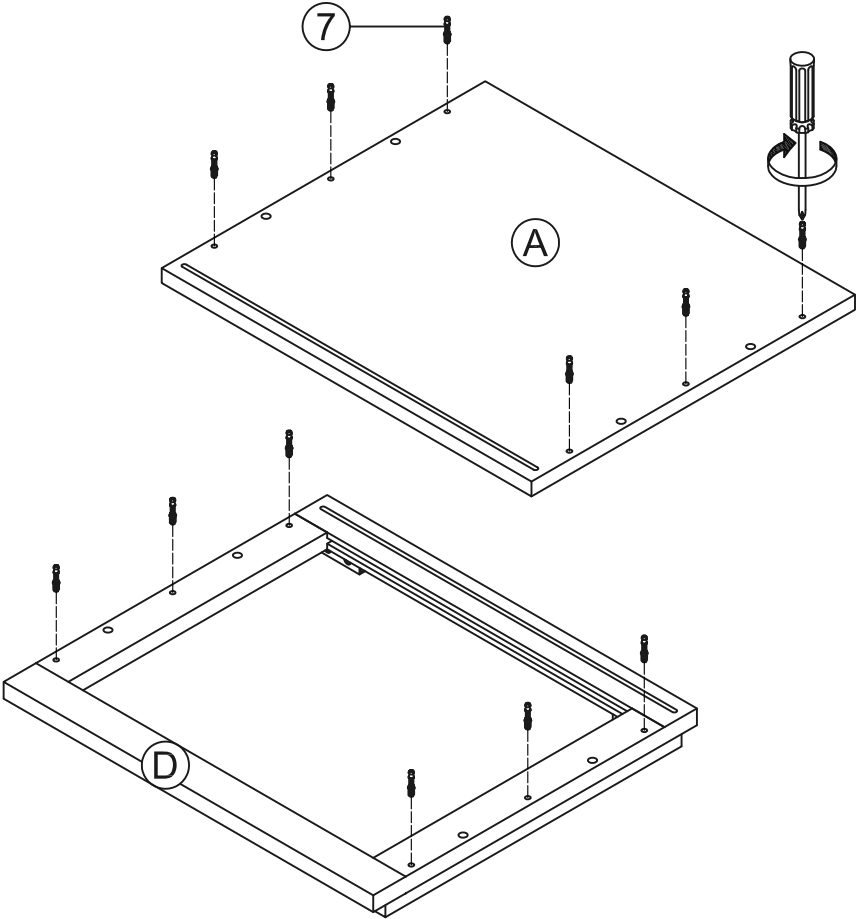Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver



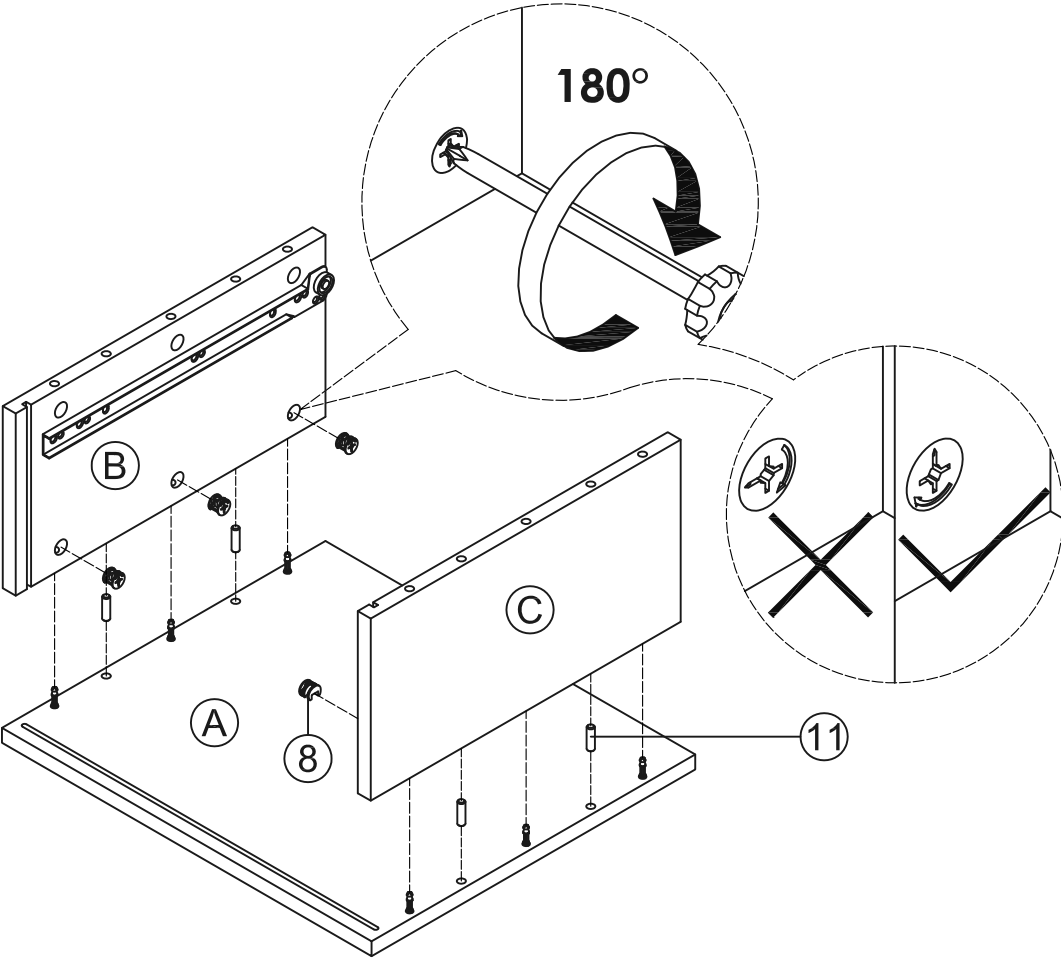
STEP 1 ATTACH CAMBOLTS TO TOP PANEL AND BOTTOM ASSEMBLY.




STEP 2 ATTACH LEFT AND RIGHT PANELS TO TOP PANEL USING CAMLOCKS AND WOODEN DOWELS.

PREPARATION

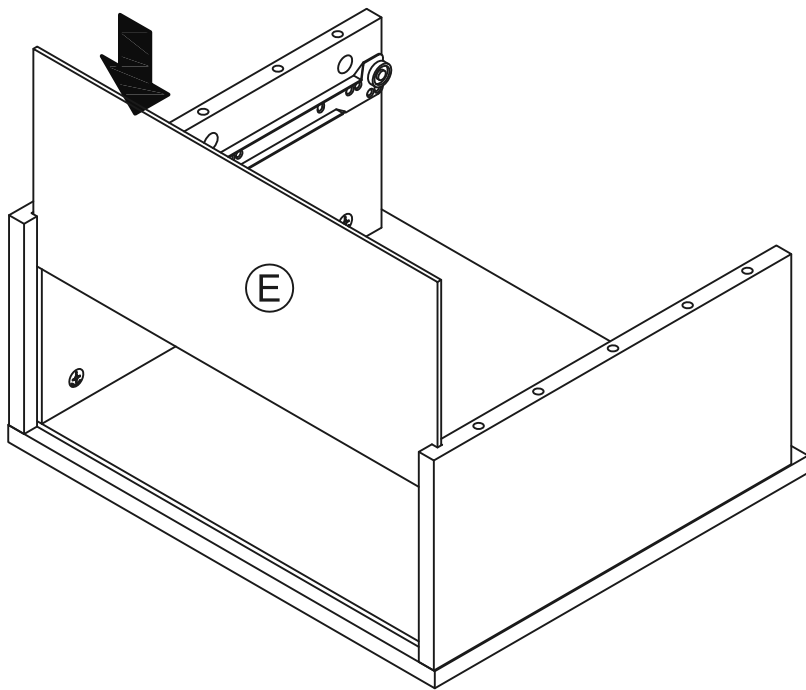Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver




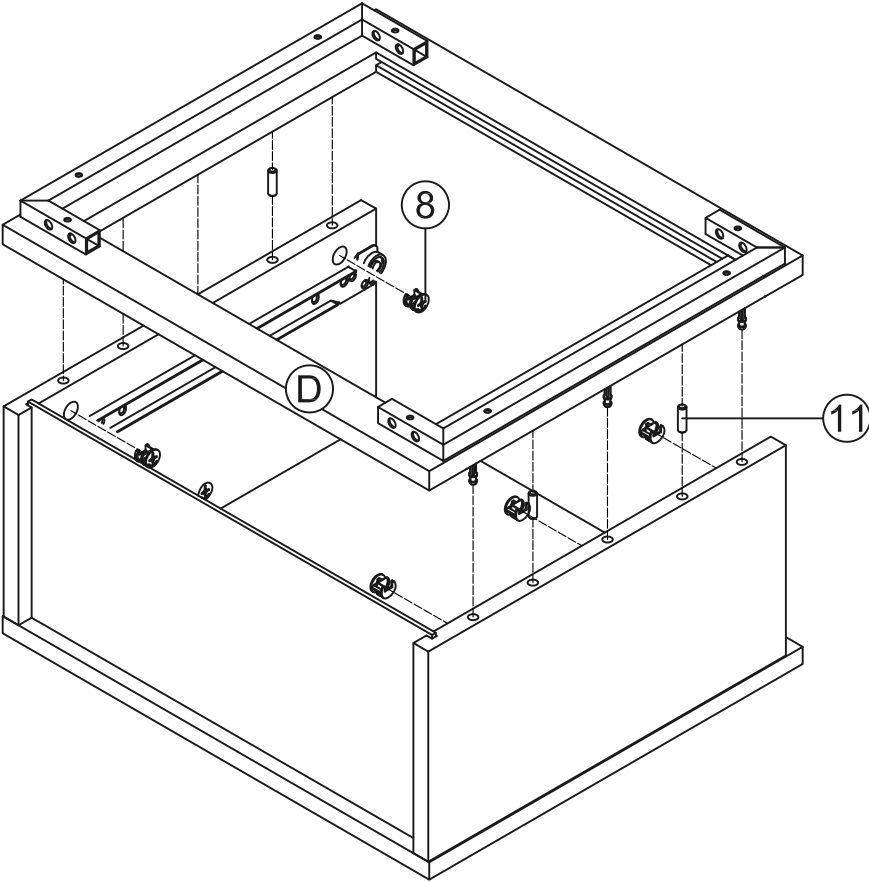
STEP 3 SLIDE BACK PANEL INTO THE GROOVE OF UNIT.



STEP 4 ATTACH BOTTOM ASSEMBLY TO UNIT USING CAMLOCKS AND WOODEN DOWELS.



PREPARATION

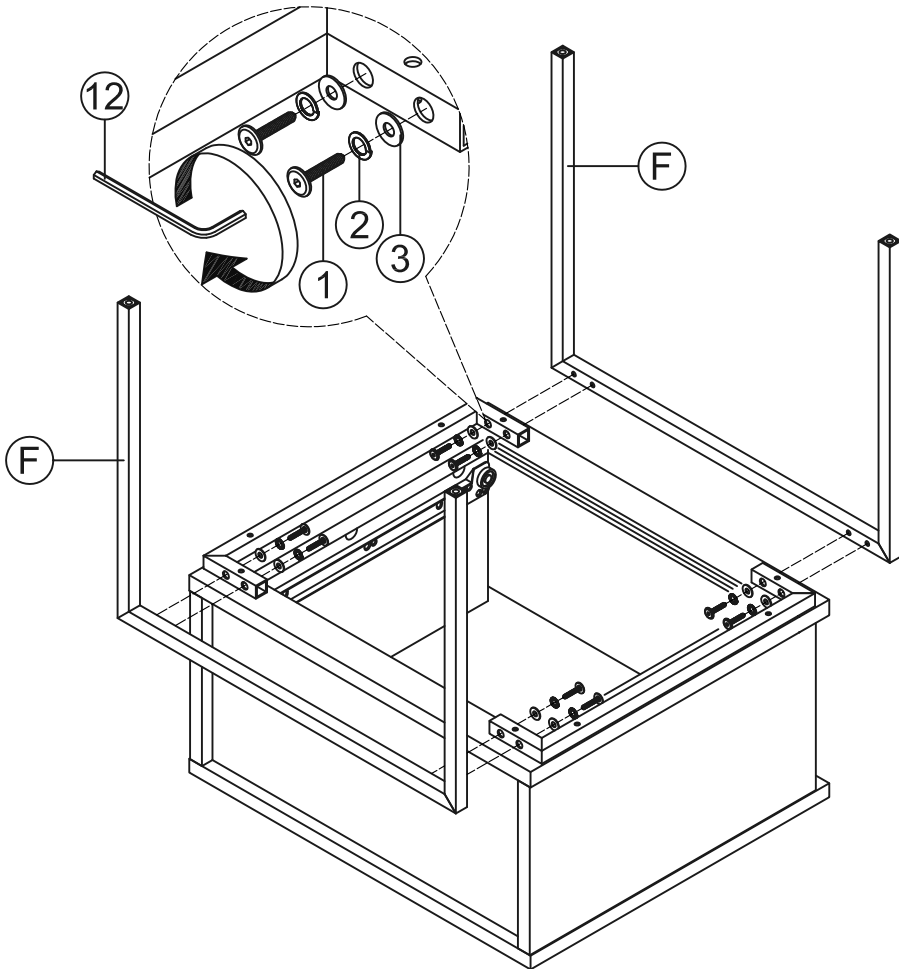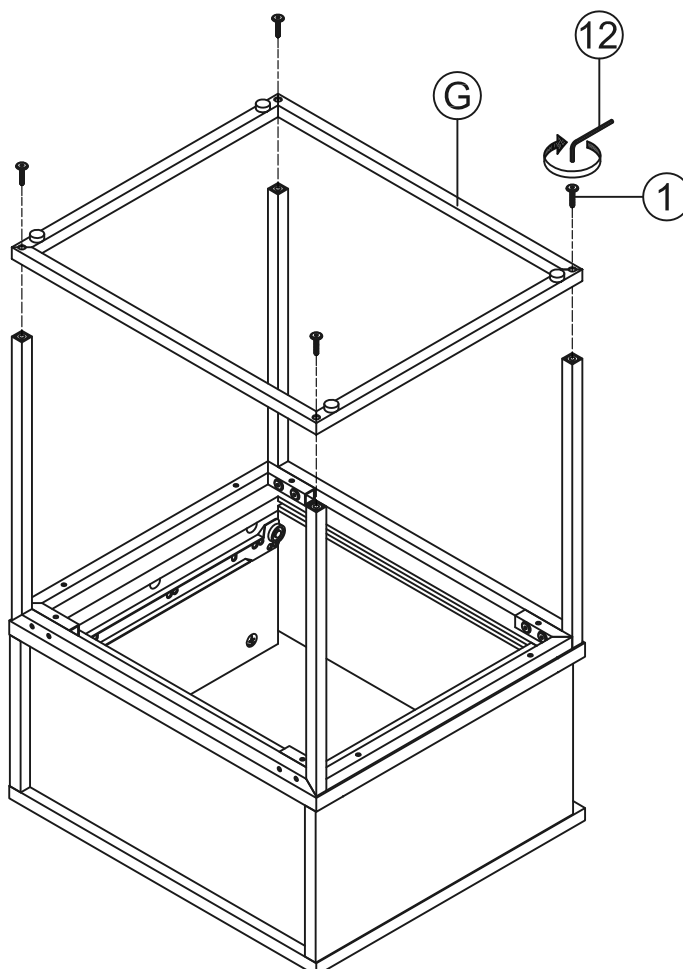Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

	
<p>STEP 5 ATTACH LEG FRAMES TO UNIT USING 30 MM BOLTS, SPRING WASHERS AND FLAT WASHERS. TURN BOLTS USING ALLEN KEY. NOTE : DO NOT OVER TIGHTEN THE BOLTS.</p>	<p>STEP 6 ATTACH BASE FRAME TO UNIT USING 30 MM BOLTS. TIGHTEN BOLTS USING ALLEN KEY. NOTE : TIGHTEN ALL BOLTS COMPLETELY USING ALLEN KEY FROM STEP 5.</p>





PREPARATION

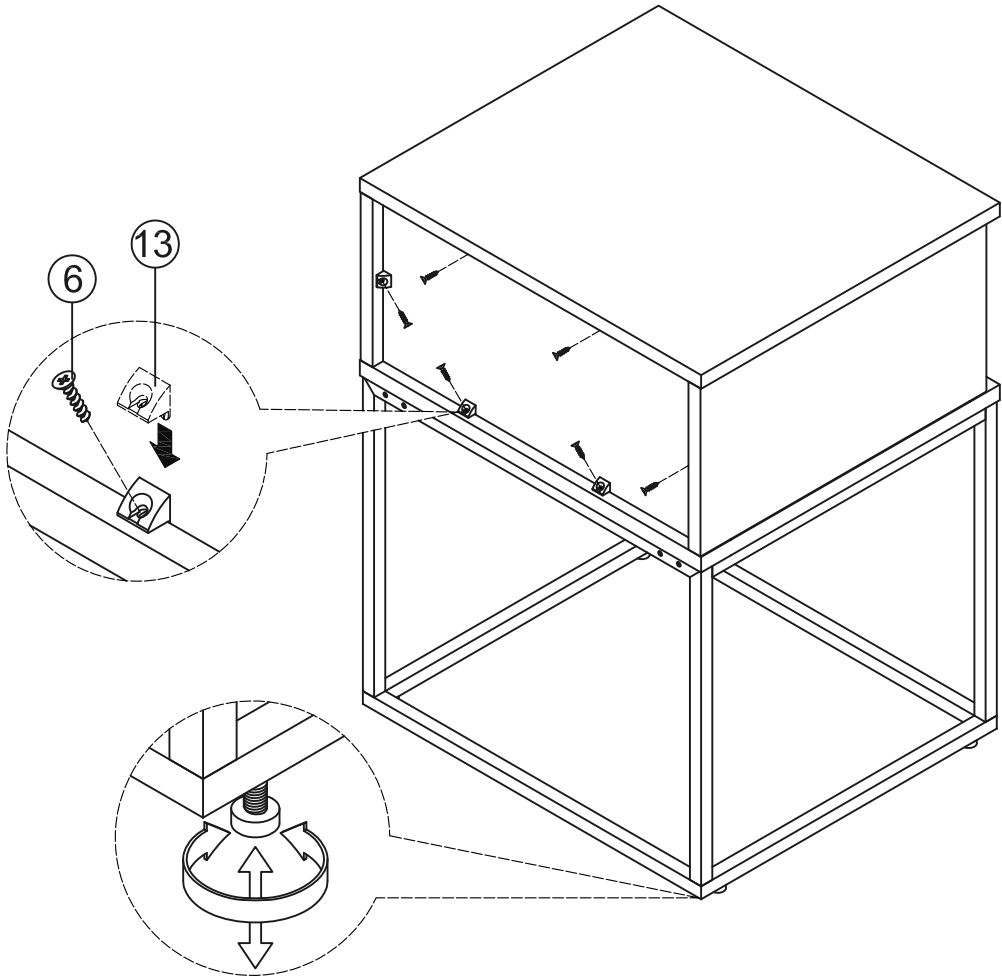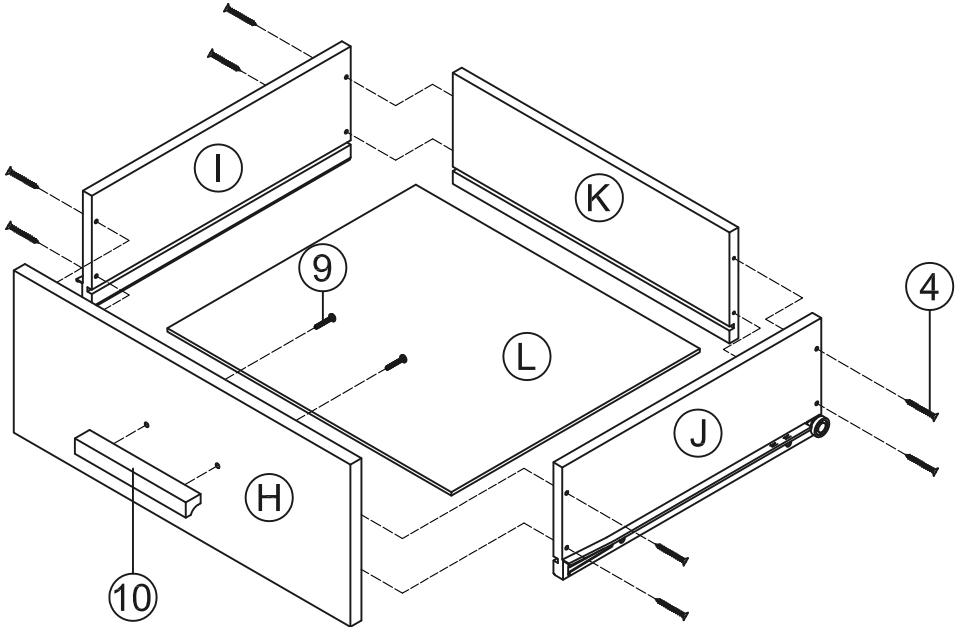Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

	
<p>STEP 7 ATTACH WEDGES TO UNIT USING 5/8" FLAT HEAD SCREWS. ADJUST THE ADJUSTER THAT HAS ALREADY BEEN ASSEMBLED TO THE LEGS TO STABILIZE YOUR UNIT.</p>	<p>STEP 8 ATTACH HANDLE TO DRAWER FRONT USING MACHINE SCREWS. ATTACH DRAWER LEFT AND RIGHT TO DRAWER BACK USING 1 1/4" FLAT HEAD SCREWS. SLIDE DRAWER BASE INTO THE GROOVE. ATTACH DRAWER FRONT TO DRAWER LEFT AND RIGHT USING 1 1/4" FLAT HEAD SCREWS.</p>

PREPARATION

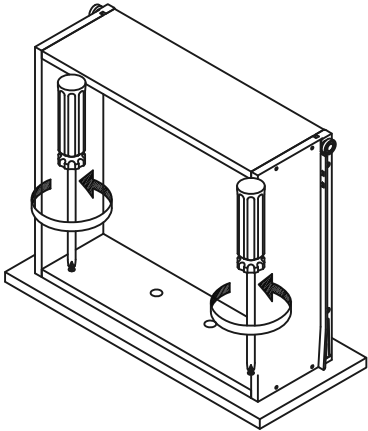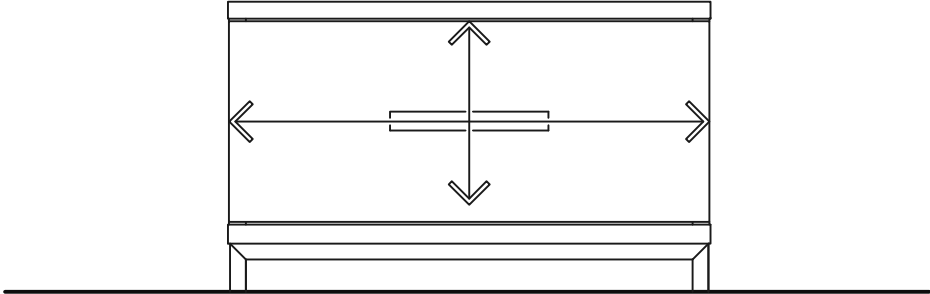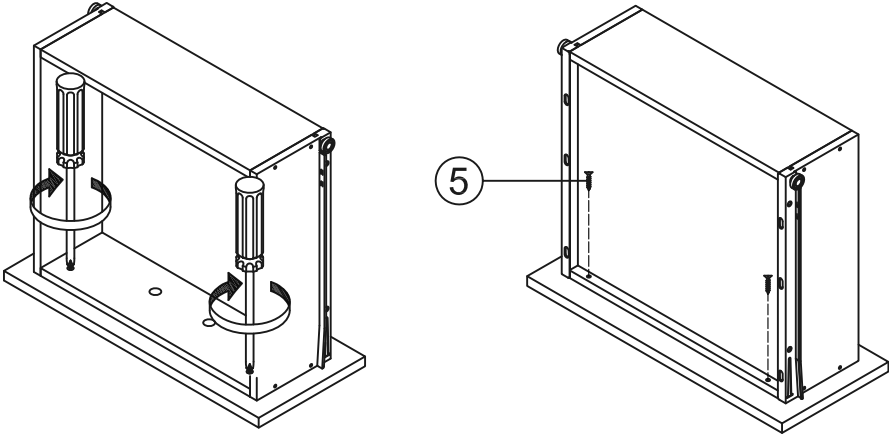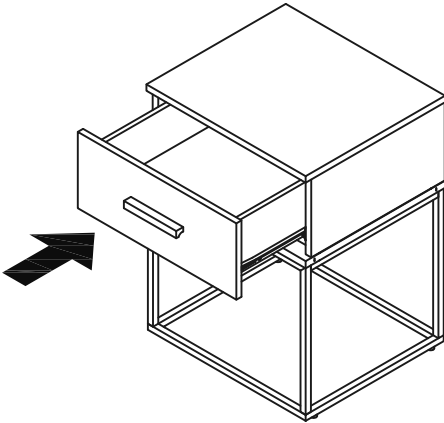Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.
Tools Required for Assembly : Phillips Screwdriver

	
<p>STEP 9 LOOSEN SLIGHTLY THE SCREWS PRE-INSTALLED ON THE BACK OF THE DRAWER FRONTS.</p>	<p>STEP 10 INSERT THE DRAWER INTO THE UNIT, THEN ADJUST THE DRAWER FRONT PANEL LEFT OR RIGHT AND UP OR DOWN UNTIL THE DRAWER GAPS LOOK PROPORTIONAL.</p>
	
<p>STEP 11 PULL THE DRAWER OPEN SLOWLY AND RE-TIGHTEN THE SCREWS FROM STEP 9. MAKE SURE THE FRONT PANEL DOES NOT MOVE AND LOCK THE DRAWER FRONT PANEL INTO POSITION WITH 3/4" FLAT HEAD SCREWS.</p>	<p>STEP 12 SLIDE THE DRAWERS INTO UNIT.</p>