

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

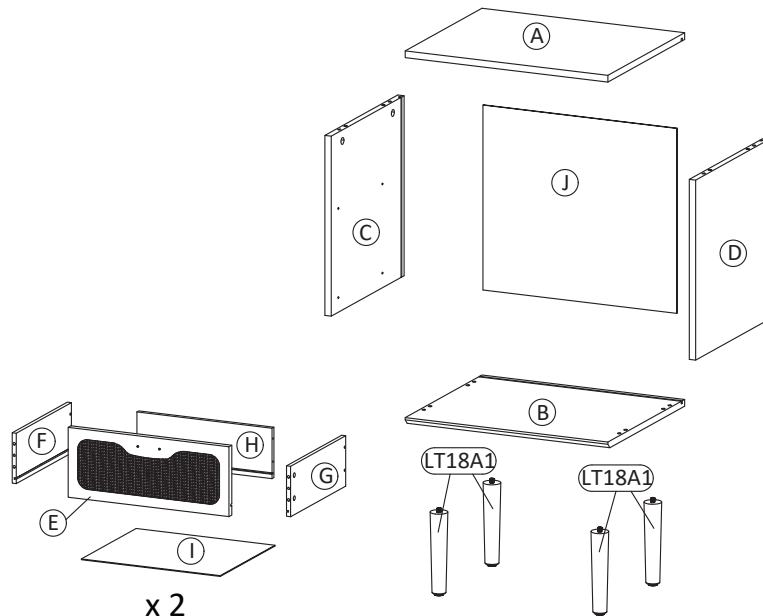

 **SAFAVIEH**
FURNITURE

Model# NST9602

Product Dimensions: 19"Wx16"Dx24"H

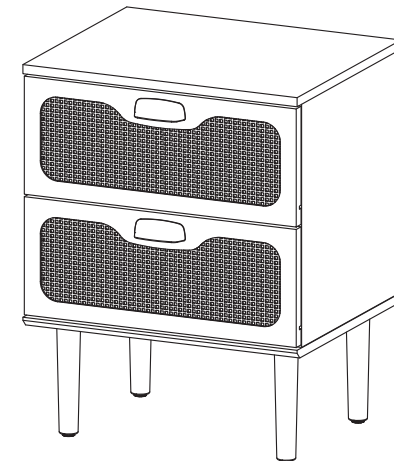

 **WARNING :**






WEIGHT CAPACITY: 26.4 LBS.

DRAWER LOAD CAPACITY 22 LBS.

Warning : Do not stand on chest.

Warning : Do not over torque bolts.

Hardware List

HW1x12  $\varnothing$ 6 x 35 mm	HW2x4  $\varnothing$ 15 mm	HW3x8  $\varnothing$ 12 mm	HW4x8  $\varnothing$ 8 x 30 mm	HW5x4  $\varnothing$ 6 x 30 mm	HW6x4  M 7 x 50 mm
HW7x1  L 4	HW8x8  M 8 x 39 mm	HW9x12  M 3.5 x 13 mm	HW10x8  M 6 x 10.5 mm	HW11x2  	HW12x4  M 4 x 25 mm
HW13x16  M 3.5 x 15.5 mm	HW14x16  M 4.5 x 12.5 mm	HW15x16  	HW RM35Ax2  	HW PM2x4  	

Part List & HW For Multi-Box Items

Piece	Description	Qty
A	Top Board	1
B	Bottom Board	1
C	Side Board Left	1
D	Side Board Right	1
E	Front Drawer	2
F	Side Drawer Left	2
G	Side Drawer Right	2
H	Back Drawer	2
I	Bottom Drawer	2
J	Back Board	1
LT18A1	Leg	4

Piece	Description	Qty
HW1	Cambolt	12
HW2	CamLock Big	4
HW3	CamLock Small	8
HW4	Dowel Big	8
HW5	Dowel Small	4
HW6	Screw M 7 x 50 mm	4
HW7	Allen Key	1
HW8	Screw M 8 x 39 mm	8
HW9	Screw M 3.5 x 13 mm	12
HW10	Screw M 6 x 10.5 mm	8
HW11	Handle	2
HW12	Screw M 4 x 25 mm	4
HW13	Screw M 3.5 x 15.5 mm	16
HW14	Screw M 4.5 x 12.5 mm	16
HW15	Wedge	16
HW RM35A	Rail	2
HW PM2	Mounting Plate	4

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

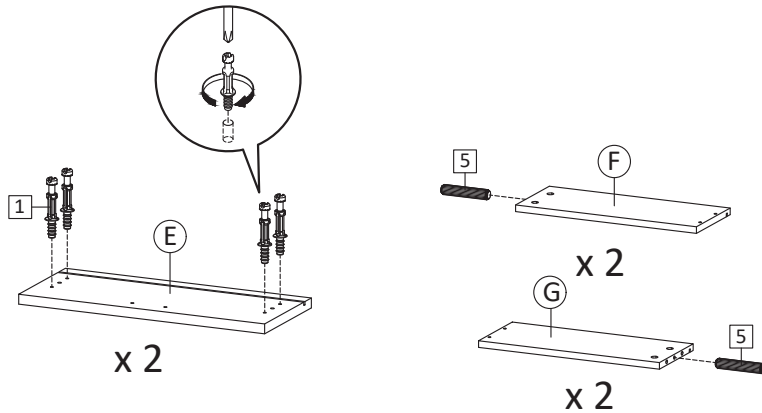


STEP1: Insert Cambolt (HW1) into Front Drawer (E). Insert Dowel Small (HW5) into Side Drawers (F & G)

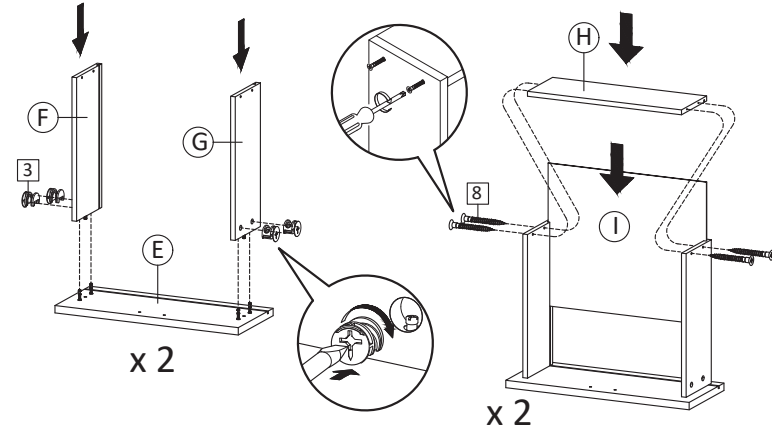

STEP2: Attach Side Drawers (F & G) to Front Drawer (E) then tighten camlock (HW3) using screwdriver. Insert Bottom Drawer (I) with laminated face facing upward then put Back Drawer (H) and secure with Screw M8x39mm (HW8).

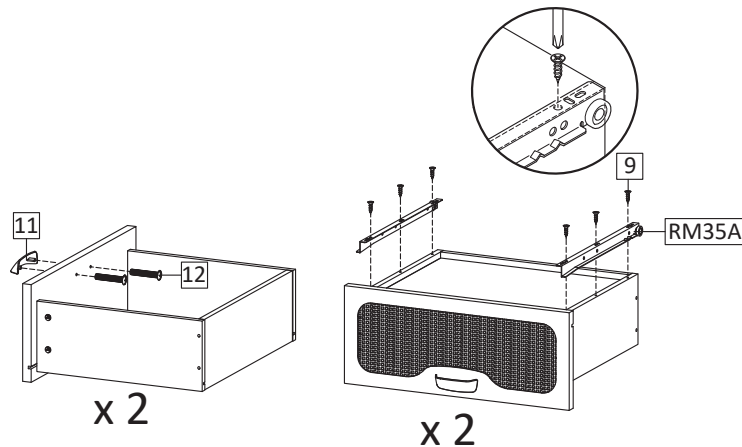

STEP3: Use Screw M4x25mm (HW12) to attach Handle (HW11) to the Front Drawer. Install the metal runner (HW RM35A) into position as shown in picture. Secure with screws M3.5x13mm (HW9)

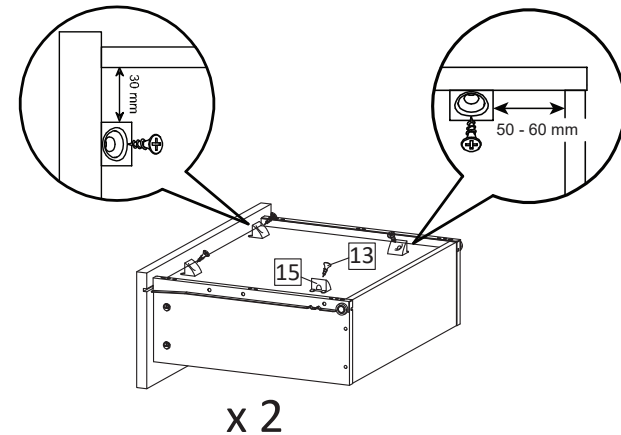

STEP4: Insert the Screw M3.5x15.5mm (HW13) and wedge (HW15) into the bottom of the drawer according to the picture.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

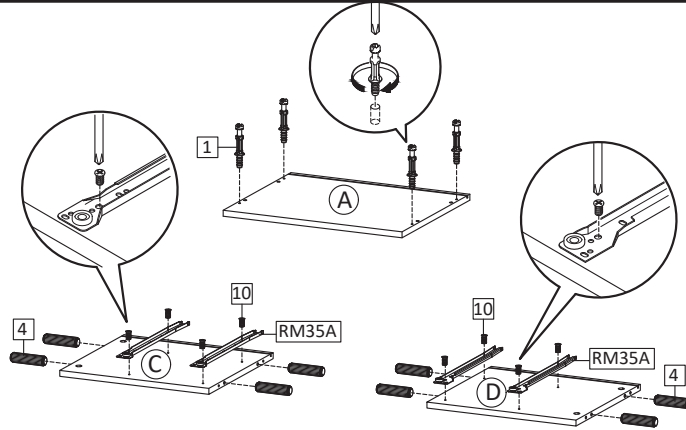


STEP5: Insert Cambolt (HW1) into Top Board.
Insert Dowel Big (HW4) into Side Board Left (C) and Side Board Right (D).
Continue with securing part of the metal runner (HW RM35A)
into position as the above image, using screw M6x10.5mm (HW10).

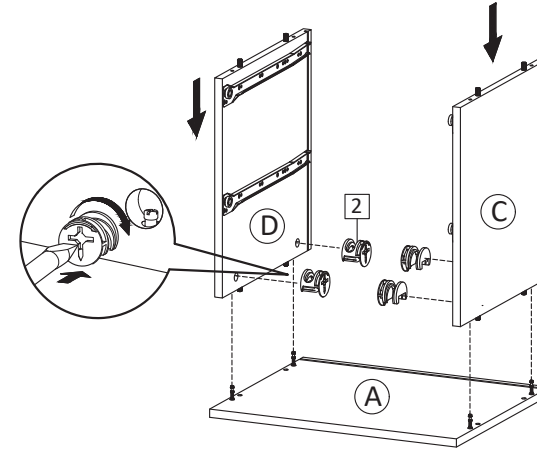

STEP6: Attach Side Board Left (C) and Side Board Right (D) into Top Board (A). Secure with Camlock Big (HW2) and tighten it using screwdriver.

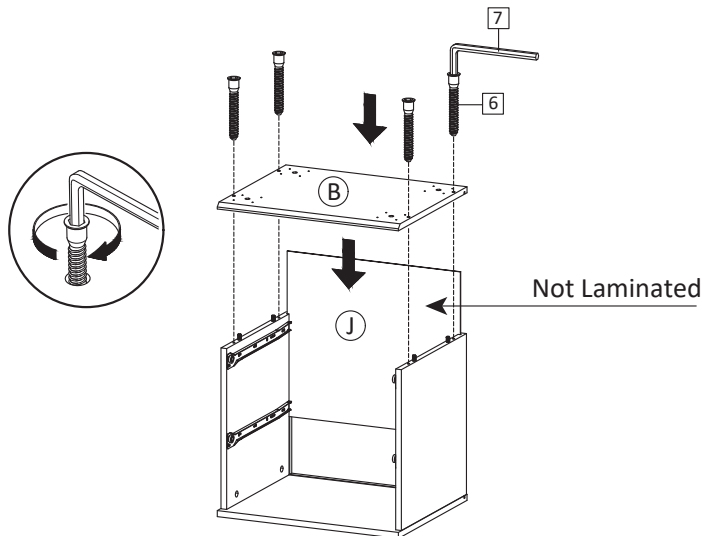

STEP7: Insert Back Board (J) then Bottom Board (B), secure with
Screw M7x50mm (HW6), tighten screws using Allen Key (HW7).

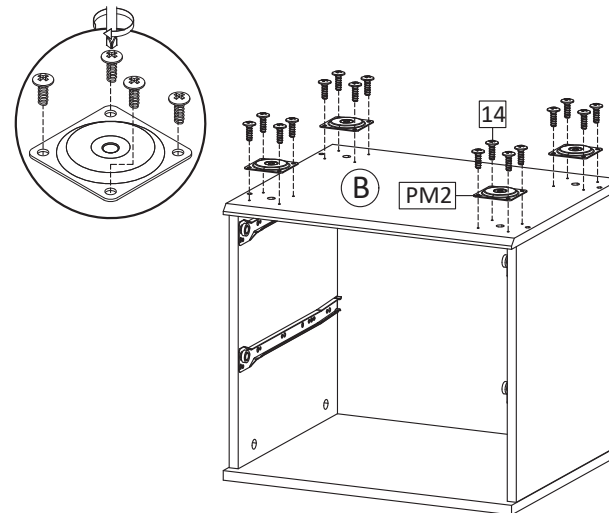

STEP8: Install Mounting Plate (PM2) and secure with
screw M4.5x12.5mm (HW14) on Bottom Board.

PREPARATION


*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

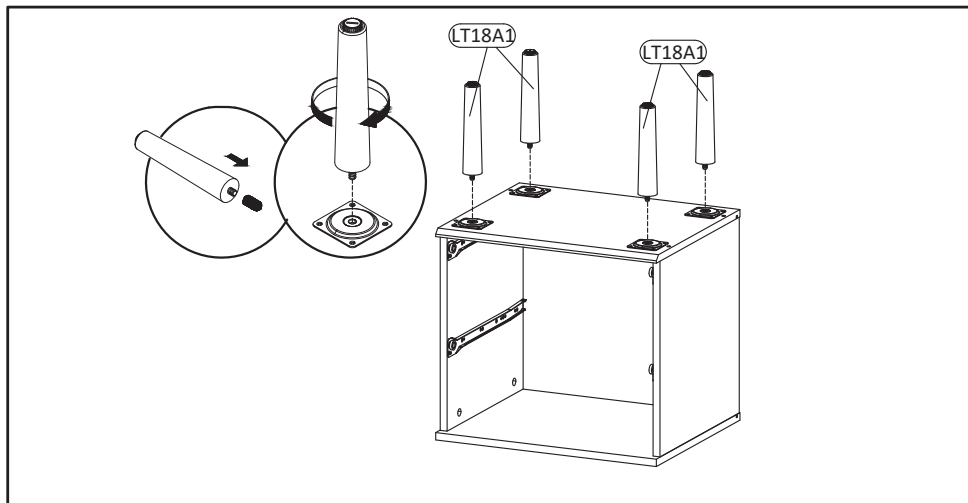


STEP9: Insert Leg (LT18A1) into Mounting Plate, tighten by rotating . the leg clockwise.

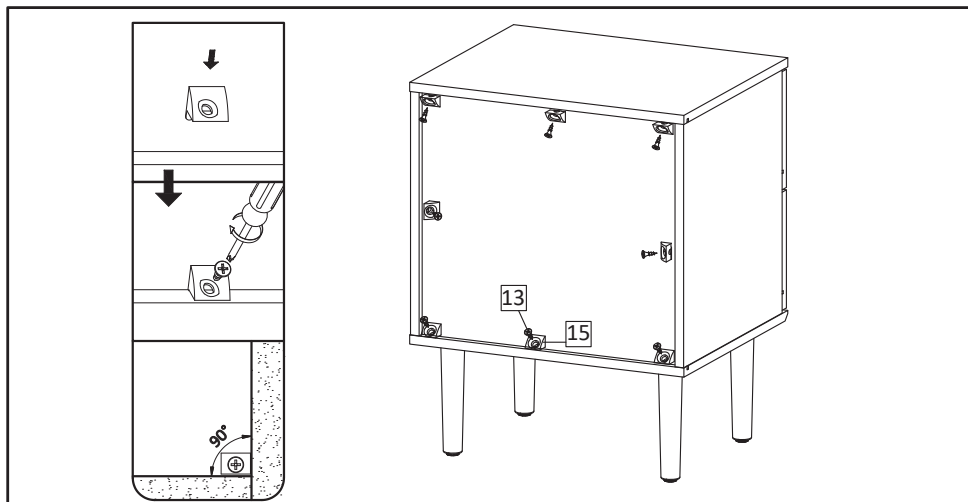

STEP11: Use Wedge (HW15), Screw M 3.5 x15.5 (HW13) to tighten the back of night stand by using screwdriver. Please align the top board and bottom board at a 90° angle against the side board, before securing the wedges (HW15).

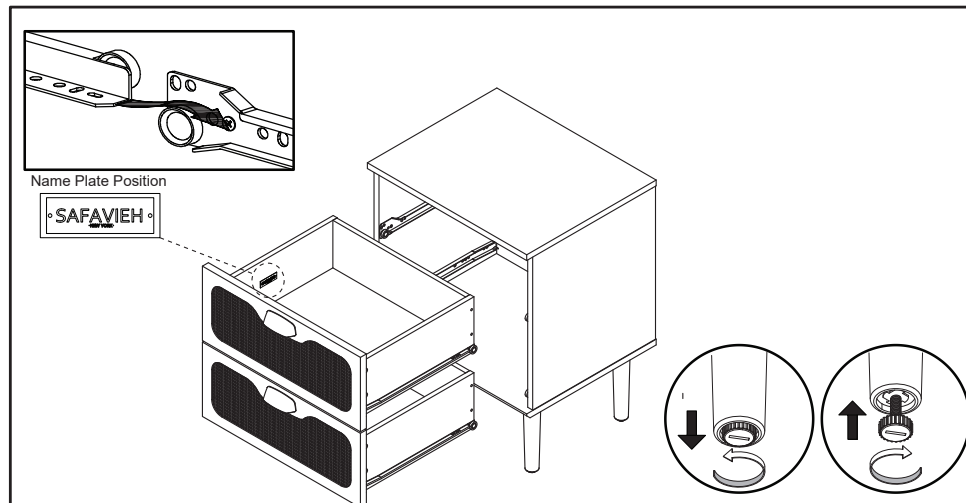

STEP10: Hold the sides of drawer, position the wheel of rail at drawer back and the wheel of rail at side boards, according to the image. Slide in the drawers one by one into the night stand. Place your furniture on level floor. The legs come with adjustable leveller, adjust it as needed until your furniture sit steady on the floor.

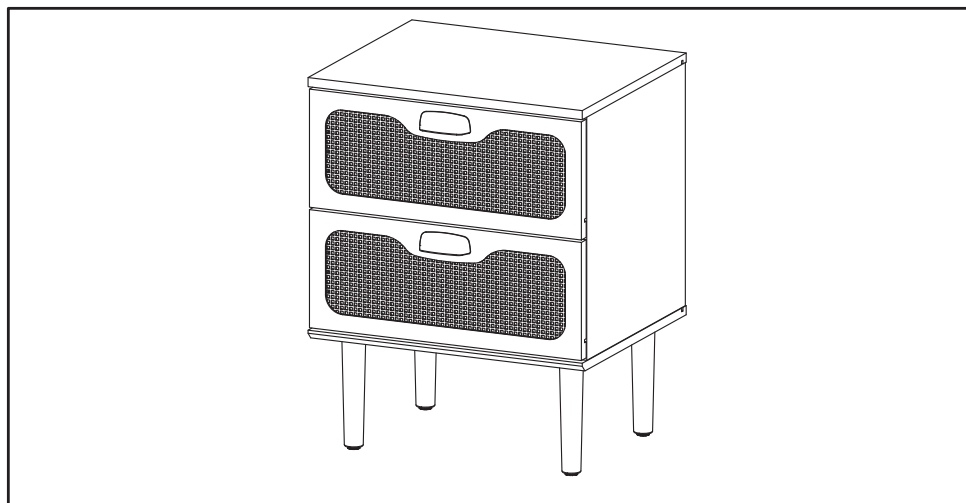

STEP12: Assembly is complete

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

