

## **Assembly Instruction**

CAUTION: Read instruction carefully and turn electricity off at main circuit breaker panel before beginning installation.

ITEM#:PND4070A

## **Care and Cleaning**

To clean the outside of the fixture, use a dry or slightly dampened clean cloth(use clean water, never a solvent) to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth(use clean water, never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time:20 minutes

#### **Part List and Hardware List**

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
А	mounting bracket		1X	I	6" rod		2X
В	machine screw	K mmm	2X	J	12" rod		2X
С	ground screw		1X	К	socket		1X
D	machine screw	K)mmm	2X	L	matel ring		1X
Е	wire connector		3X	M	glass shade		1X
F	canopy		1X	N	socket ring		1X
G	screwed ball		2X	0	bulb		1X

#### Installation

#### Step 1

Put the lead wire through the rod(I)(J)and canopy (F),fasten these rods. Connect the lighting frame with rod. please adjust the rod quantity according to your roof height.

#### Step 2

Put metal ring(L) and glass shade(M) on socket(K), then secure it by socket ring(N)


#### Step 3

Fix the mounting bracket(A) to the outlet box with machine screw(B).

## Step 4 Wire connection

Make wire connections, with wire connectors(E), following the reference chart listed below.

Connect,Hot,Black or Red outlet Supply Wire to:	Connect, Neutral, White Outlet Supply Wire to:		
Black	White		
*Parallel Cord(round&smooth)	*Parallel Cord(square&ridged)		
Clear, Brown, Gold or Black without Tracer(colored stripes)	Clear,Brwn,Gold or Black without Tracer(colored stripes)		
Insulated Wire(not green)with copper metal conductor	Insulated Wire(not green)with Silver metal conductor		



\*Note: When parallel wire(SPTI&SPTII)is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth.(See illustration on left)



#### Grounding Instructions:


- a) For installation in the United States: Wrap ground wire from outlet box around green ground screw on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector.
- b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting bracket. Tighten ground screw.

#### Step 5

Insert the bulb (O) into the sockets

# PLEASE USE TYPE"A" BULB MAX 60-WATT OR CFL BULB MAX 13-WATT OR LED BULB MAX 9-WATT

THERE IS 1PC LED 4-WATT BULB IN THE BOX

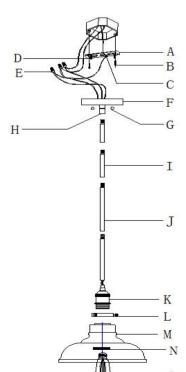

#### Step 6

Consult a qualified electrician to ensure correct branch circuit conductor.

