
A SAFAVIEH

LIGHTING

Assembly Instruction

CAUTION: Read instruction carefully and turn electricity off at main circuit breaker panel before beginning installation.

ITEM #:SCN4017A Size:8"L X 6"W X 11"H

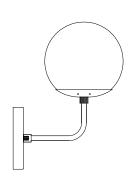

Care and Cleaning

To clean the outside fo the fixture, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the surface of the fixture.

To clear the inside of the fixture, first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box. Next, use a dry or slightly dampened clean cloth (use clean water, never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical, solvents or harsh abrasives. Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time: 30 minutes


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
Α	Mounting		1X	С	Ball nut		2X
	bracket			D	hex nut	п	1X
A1	Mounting screw	<u>ш</u>	2X				
	C	<u></u>		E	hex wrench		1X
В	Fixture body		1X	F	Bulb		1X
B1	Wire Nut		3X	G	glass shade		1X

Installation

Step 1


- 1. Place the bulb (F) to the socket.
- 2. Install the glass shade (G) to the fixture body (B), between plate (H2) and (H3), secure with ball nut (H1).
- 3. Fix the ball nut (H1) by hex nut (D) and hex wrench (E).

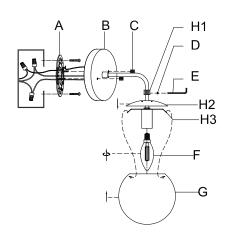

Note:PLEASE USE ON/OFF TYPE"B" BULB MAX 40-WATT OR CFL BULB MAX 13-WATT OR LED BULB MAX 9-WATT THERE IS 1PC LED 4-WATT BULB IN THE BOX

Step 2 Wire Connetion

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:	
Black	White	
* Parallel Cord(round & smooth)	* Parallel Cord(square& ridged)	
Clear,Brown,Gold or Black without Tracer(colored stripes)	Clear,Brown,Gold or Black without Tracer(colored stripes)	
Insulated Wire(not green) with copper metal conductor	Insulated Wire(not green) with Silver metal conductor	




*Note: When parallel wire(SPTI & SPT II) is used. The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth. (See illustration on left.)



a) For installation in the United States: Wrap ground wire from outlet box around green ground screw on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector. b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting bracket. Tighten ground screw.

Step 3

Attach the mounting bracket (A) to the junction box with mounting screw (A1), secure the fixture body(B) with ball nut(C).

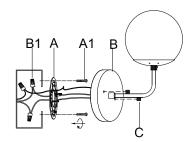

Step 4

Consult a qualified electrician to ensure correct branch circuit conductor



ENJOY YOUR LAMP