

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com



PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly : Hex Wrench (included), Phillips screwdriver (not included)

CARE AND MAINTENANCE


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish.

Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QTY	CARTON CALL
A	HEADBOARD		1X	1 OF 2
B	LEFT LEG		1X	1 OF 2
C	RIGHT LEG		1X	1 OF 2
D	STRETCHER		1X	1 OF 2
E	FOOTBOARD		1X	1 OF 2
F	SIDE RAIL		2X	2 OF 2
G	SLAT		4X	2 OF 2
H	CENTER LEG		8X	2 OF 2
HW1	THREADED ROD 5/16" x 0.06" x 2 3/8"		12X	1 OF 2
HW2	SQUARE WASHER		12X	1 OF 2
HW3	HEX NUT		12X	1 OF 2
HW4	HEX WRENCH		1X	1 OF 2
HW5	ROUND HEAD SCREW 4 x 1 x 25 MM		16X	1 OF 2
HW6	FLAT HEAD SCREW 4 x 1 x 19 MM		16X	1 OF 2
HW7	CONNECTOR PLATE		2X	1 OF 2
HW8	DOWEL		8X	1 OF 2

SAFAVIEH
C O U T U R E

Model# SFV1301-K
Product Dimensions: 80 1/4"W x 85 1/8"D x 53"H

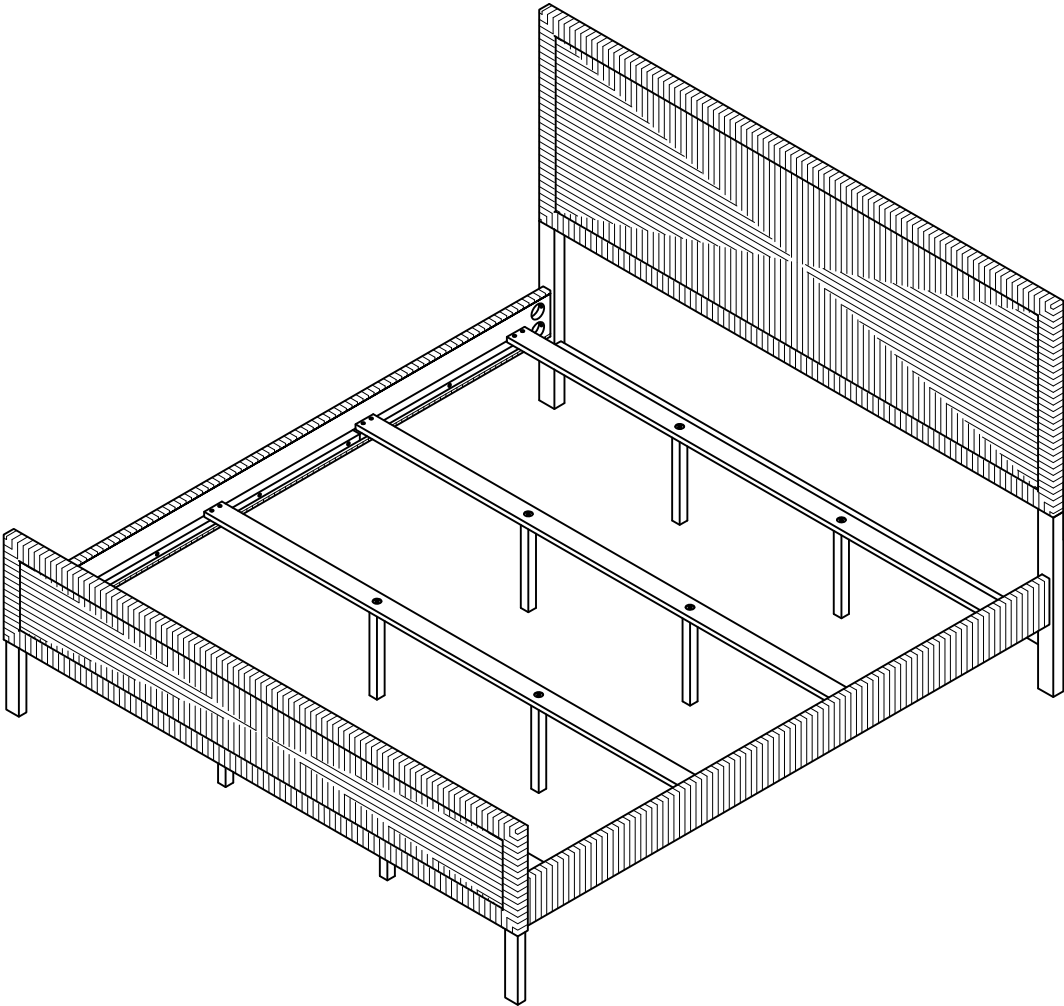

WARNING




WEIGHT CAPACITY: 400 LBS
WARNING: DO NOT STAND ON THE BED
WARNING: DO NOT OVER TORQUE NUTS/SCREWS


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 60 minutes.
- * Tools Required for Assembly : Hex Wrench (included), Phillips screwdriver (not included)
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


The diagram shows a rectangular headboard (A) with four threaded rods (HW1) being inserted into its corners. A circular inset provides a close-up view of a rod (HW1) being tightened into a hole in the headboard. Below the headboard, two legs (B and C) are shown. Leg C is being attached to the headboard, and leg B is being attached to the stretcher (D). A circular inset shows a rod (HW1) being inserted into a hole in leg B. The stretcher (D) is a long horizontal bar with four holes for rods (HW8) at each end.	The diagram shows the stretcher (D) with four dowels (HW8) being inserted into its holes. A circular inset shows a close-up of a dowel (HW8) being inserted into a hole in the stretcher. Below the stretcher, two legs (B and C) are shown. Leg C is being attached to the headboard, and leg B is being attached to the stretcher (D). A circular inset shows a rod (HW1) being inserted into a hole in leg B. The stretcher (D) is a long horizontal bar with four holes for rods (HW8) at each end.
STEP 1 SCREW IN THREADED RODS (HW1) TO THE HEADBOARD (A). SCREW IN A THREADED ROD (HW1) TO THE LEFT HEADBOARD LEG AND THE RIGHT HEADBOARD LEG (B AND C). THEN TIGHTEN THE RODS (HW1).	STEP 2 ATTACH LEFT AND RIGHT LEGS (B AND C) TO THE STRETCHER (D) BY PLACING DOWELS (HW8) INTO THE HOLES. USE THE SQUARE WASHERS (HW2) AND HEX NUTS (HW3) TO HOLD THE DOWELS IN PLACE. TIGHTEN NUTS (HW3) BY USING HEX WRENCH (HW4).

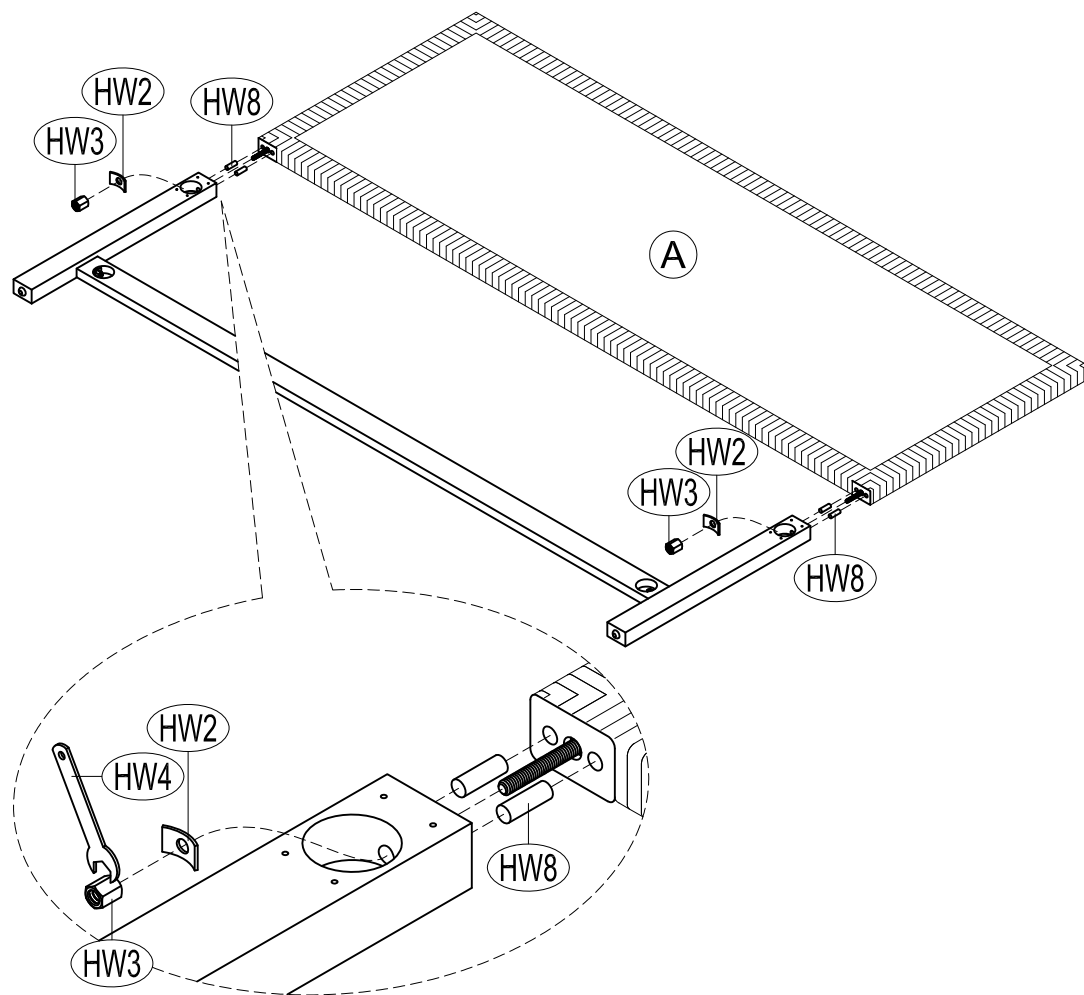


STEP 3 ATTACH THE HEADBOARD TO THE LEGS BY PLACING DOWELS (HW8) INTO THE HOLES. USE THE SQUARE WASHERS (HW2) AND HEX NUTS (HW3) TO HOLD THE DOWELS IN PLACE. TIGHTEN THE NUTS (HW3) USING THE HEX WRENCH (HW4). **NOTE: MAKE SURE THE NUT CONSTRUCTION IS REALLY TIGHT BEFORE DOING STEP 4.**

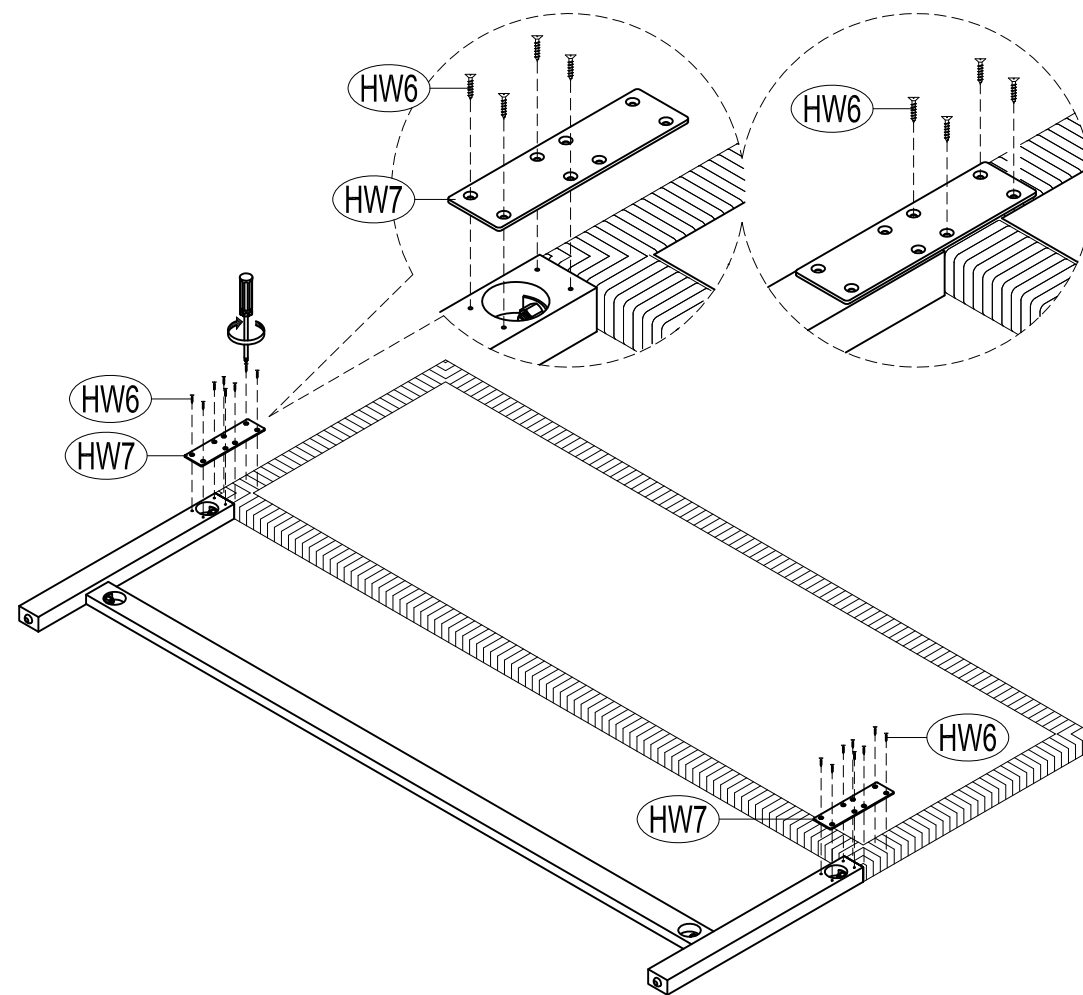


STEP 4 ATTACH THE CONNECTOR PLATES (HW7) TO THE HEADBOARD BY USING 3/4" FLAT HEAD SCREWS (HW6).

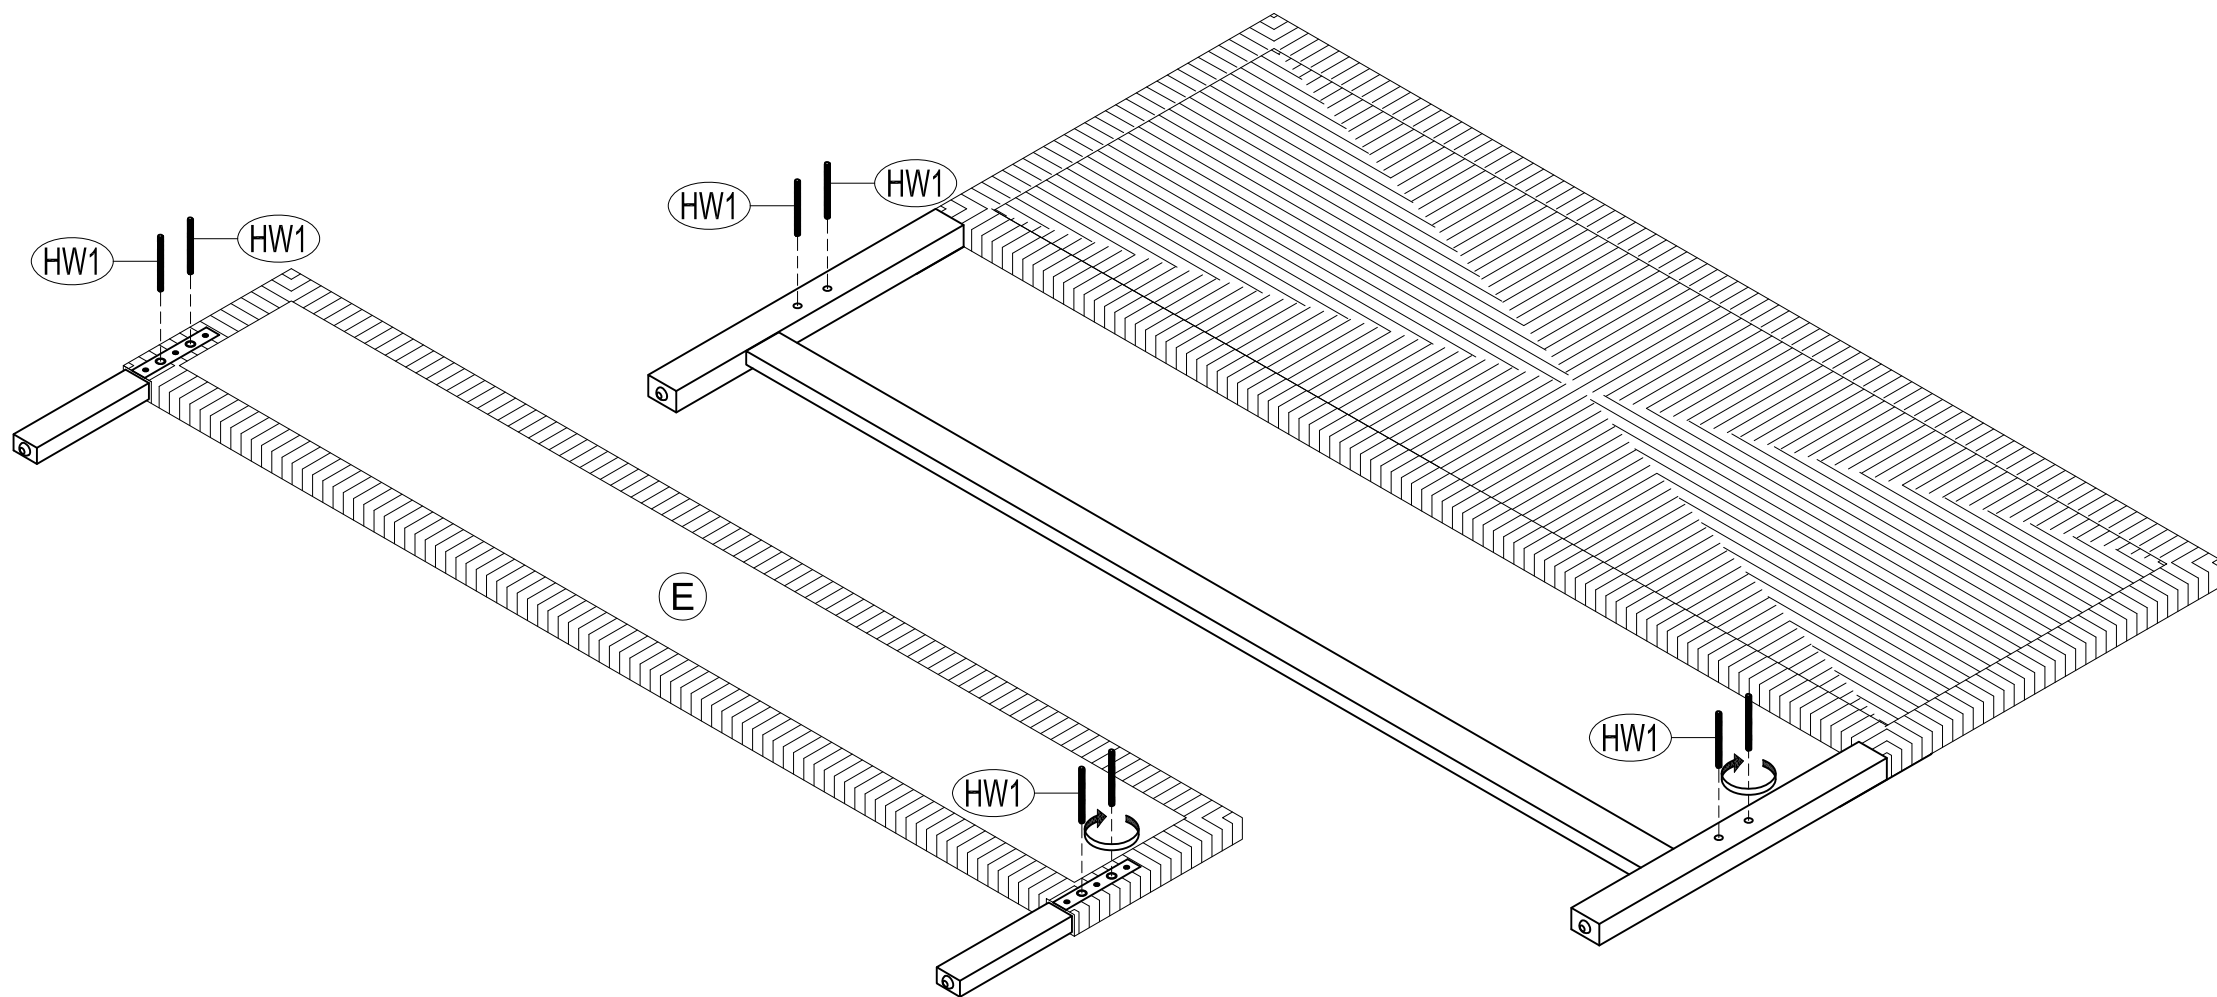

STEP 5 ATTACH THREADED RODS (HW1) TO THE HEADBOARD LEGS AND FOOTBOARD (E). TIGHTEN THE RODS.

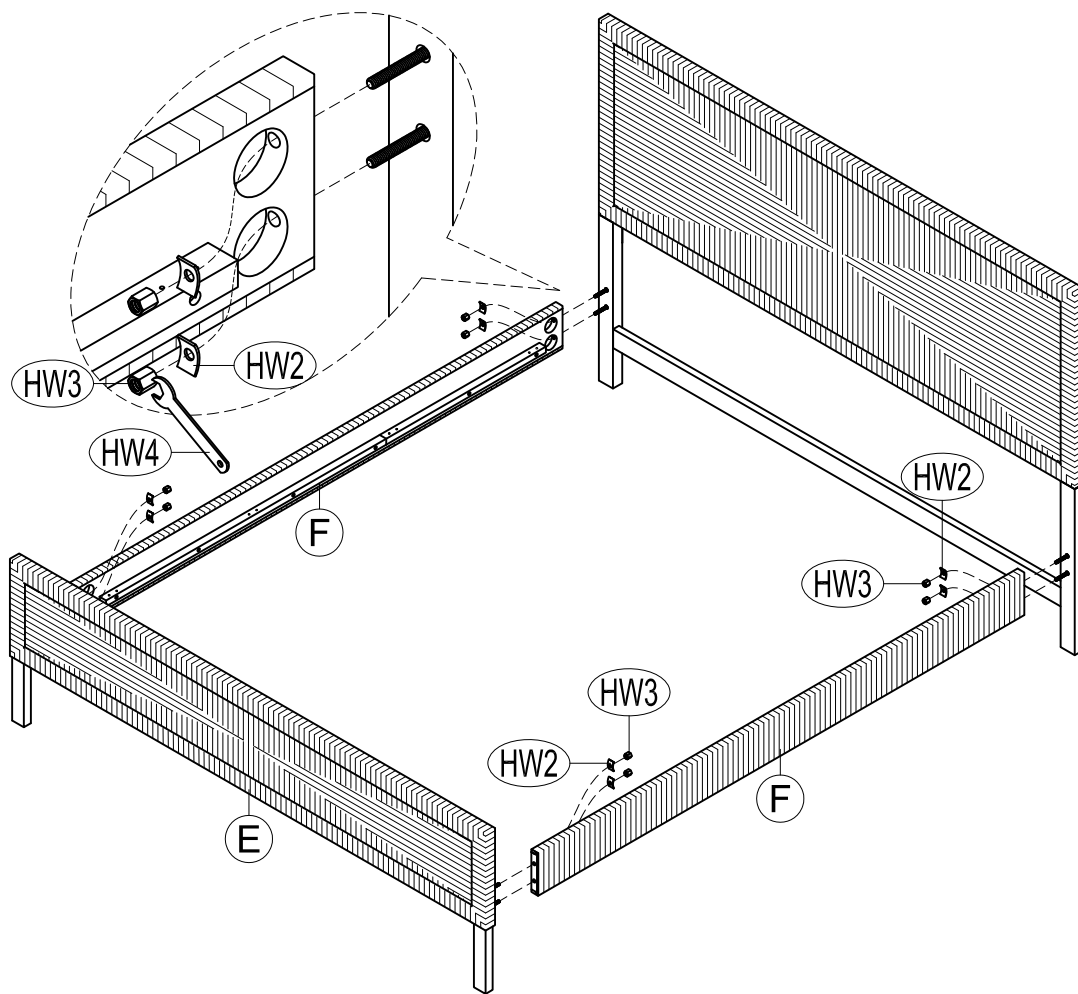


STEP 6 ATTACH SIDE RAILS (F) TO THE HEADBOARD AND FOOTBOARD (E) BY USING SQUARE WASHERS (HW2) AND HEX NUTS (HW3). TIGHTEN NUTS USING THE HEX WRENCH (HW4).

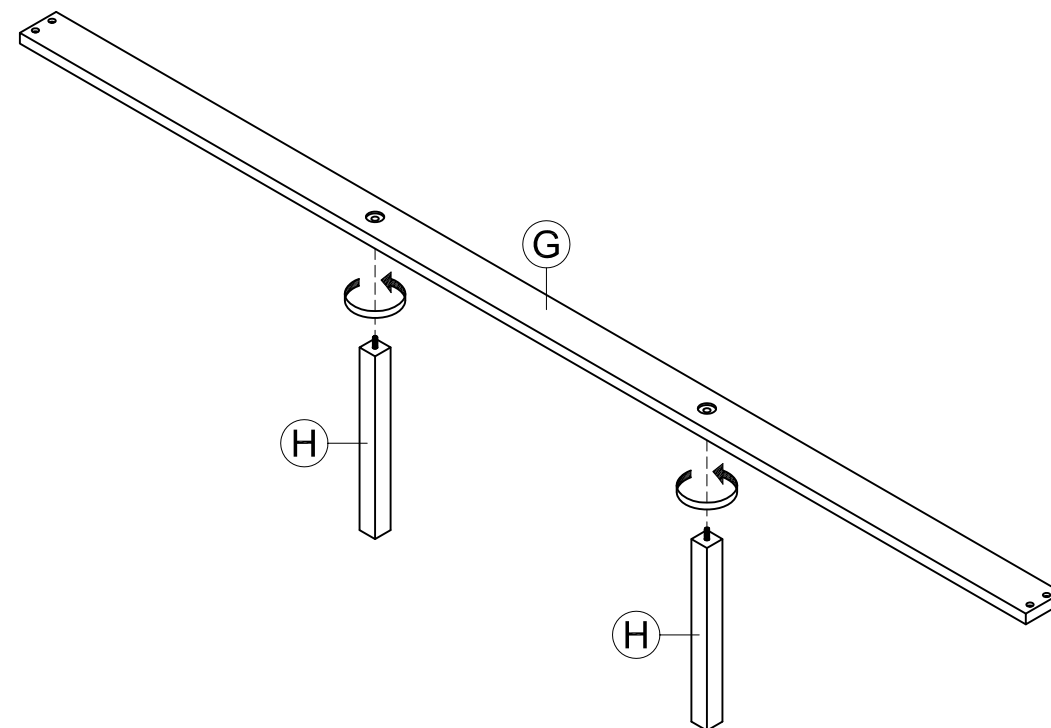


STEP 7 SCREW IN CENTER LEGS (H) TO SLATS (G).

4X

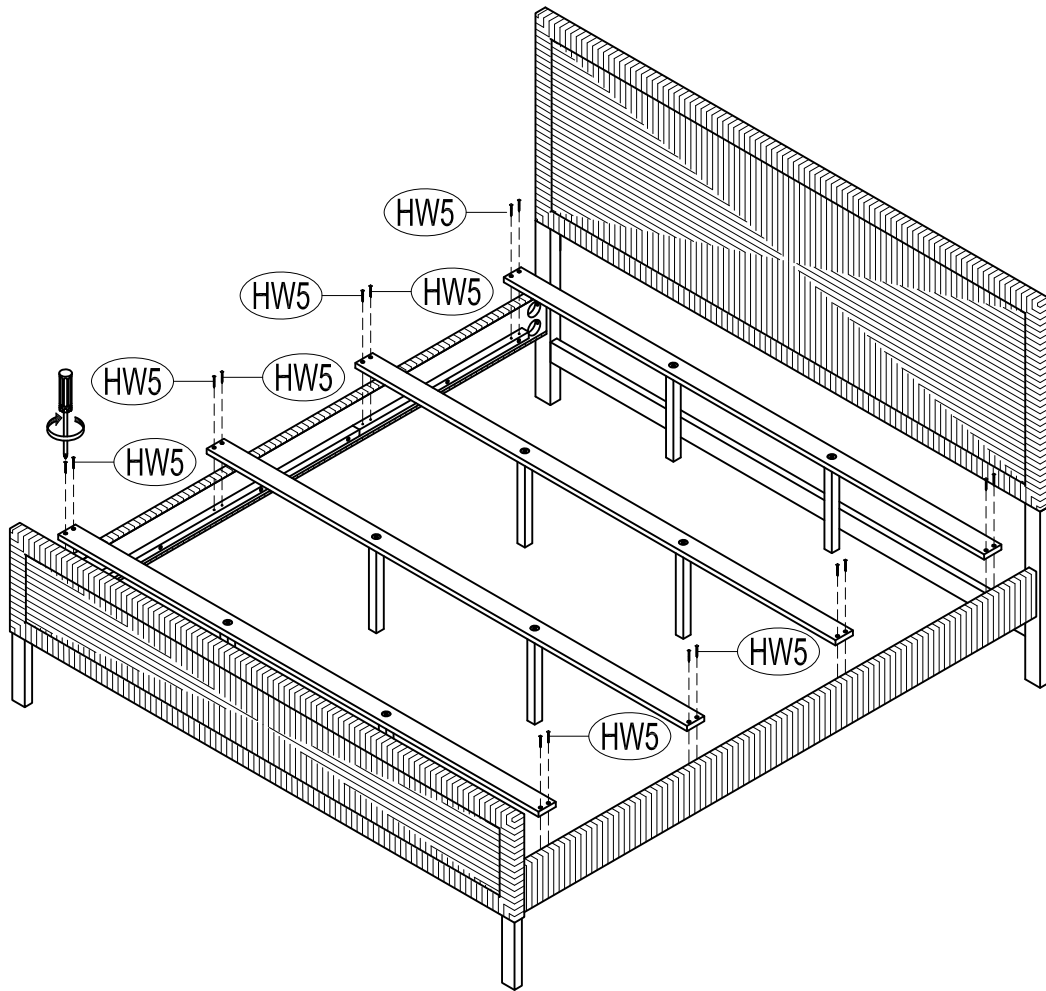

STEP 8 ATTACH THE SLATS TO THE SIDEBOARDS BY SCREWING IN 1" ROUND HEAD SCREWS (HW5).

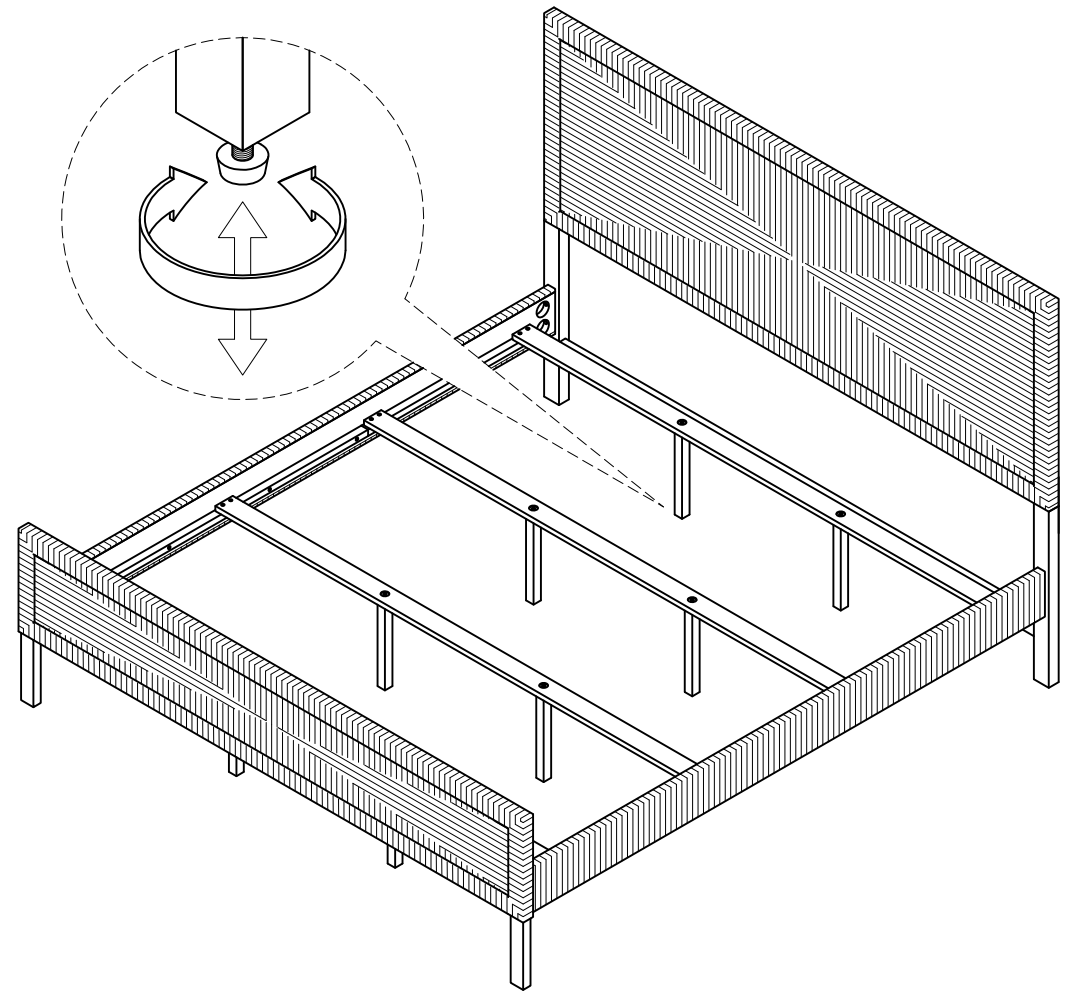

STEP 9 LEVEL THE BED BY ADJUSTING THE ADJUSTABLE LEVELERS ON THE BOTTOM OF THE CENTER LEGS.