## CARE AND MAINTENANCE

Wipe clean with a soft, dry cloth. Test the cleaning method on a hidden area before using them over the entire area.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item.
- \* This item should be assembled on a soft surface to prevent scratching the finished product during assembly.
- \* This item may require periodic tightening.
- \* Do not tighten bolts until completely assembled.




Model# SFV2122

Product Dimensions: 23-3/4"W x 16"D x 20-1/4"H

## **Part List and Hardware List**

PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Seat Cushion		1x
В	Side Frame		2x
С	Square Connecting Tube	63	2x
D	Circular Connecting Tube		1x
HW1	Hex Socket Bolt	⑥))))))))) 1/4"-20 x 5/8"	12x
HW2	Wood Screw	€‱	4x
HW3	Allen Key	€ M4	1x





Weight capacity: 275 lbs


WARNING: DO NOT STAND ON THE PRODUCT WARNING: DO NOT OVER TORQUE BOLTS


## **PREPARATION**


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 15 minutes.

Tools Required for Assembly (included): Allen Key(included) and Philips head screwdriver (not included).

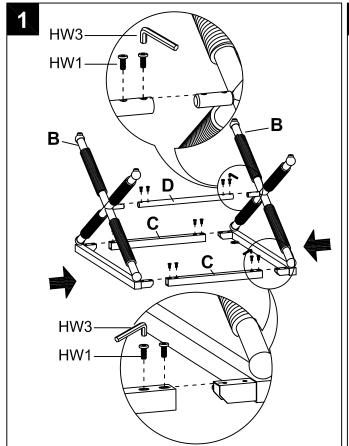

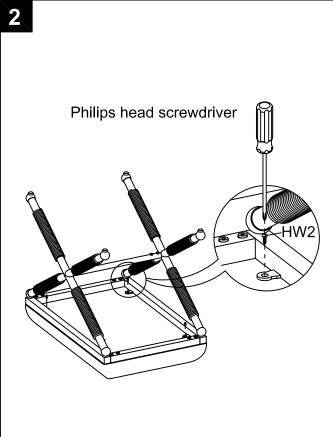

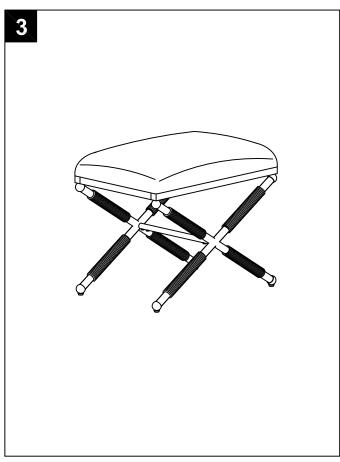

Step 1

Insert the protrusion part on the 2\*Side frames (B) into 2\*Square Connecting Tube (C) and 1\*Circular Connecting Tube (D). Align the holes in the protrusions and tubes, Then use the Allen Key (HW3) to lock with 12\*Hex Socket Bolts (HW1).

Caution: the correct direction of tubes, Please refer to the assembly diagram above.

Step 2

Attach underneath of Seat Cushion (A) in the corresponding position on the assembled base (as step 1), And using Philips head screwdriver (tool is not included) to lock with 4\*Wood screws (HW2) on bottom of seat cushion (A) by through the hole in the protruding.

Step 3

Straighten up the assembled product, Assembly is completed.