

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help.

Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

- * Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
- * The use of steam or water-based cleaners may cause excessive shrinking or staining.

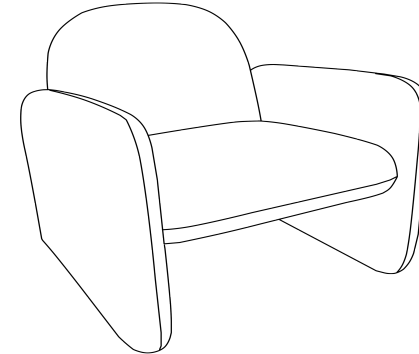
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat		1X
B	Arm		2X
C	Back		1X
HW1	Split Lock Washer(M8)		8X
HW2	Flat Washer(M8)		8X
HW3	Socket Screws 8*1.25*65MM		8X
HW4	Allen Key		1X

SAFAVIEH COUTURE

Model#: SFV4829

Dimensions: 29.0"W*29.0"D*30.3"H



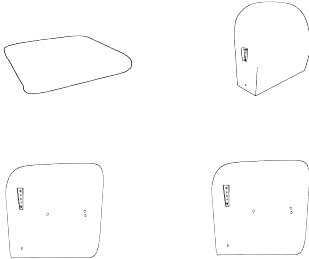
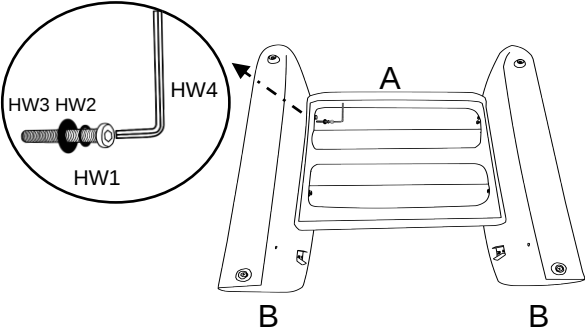
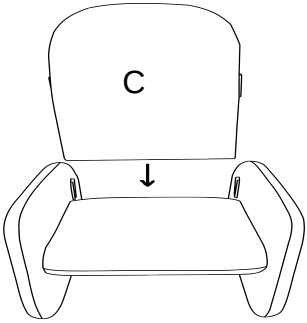
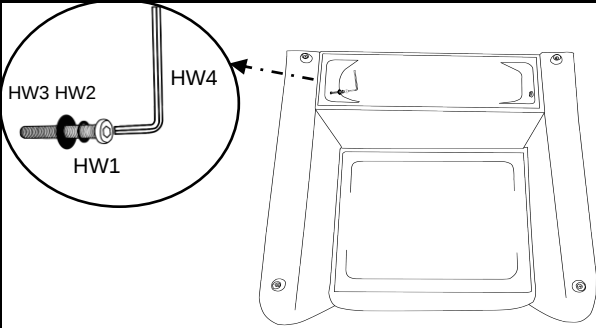
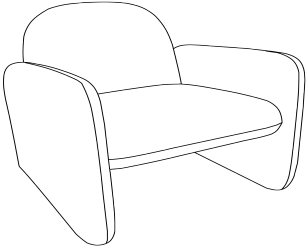
Weight Capacity: 275 lbs

WARNING: DO NOT STAND ON CHAIR

WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

		
STEP1 OPEN THE CARTON TO TAKE OUT SEAT, ARM AND BACK.	STEP2 INSERT THE ARM AND SCREW IN THE SCREWS.	STEP3 PUT THE HARDWARE ON THE ARM INTO THE HARDWARE ON THE BACK. IT WILL CONNECT FIRMLY WITH A LITTLE FORCE.
		
STEP4 INSERT THE BACK AND SCREW IN THE SCREWS.	STEP5 PUT THE CHAIR UPRIGHT, THE ASSEMBLY IS FINISHED.	