

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

- * Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
- * The use of steam or water-based cleaners may cause excessive shrinking or staining.

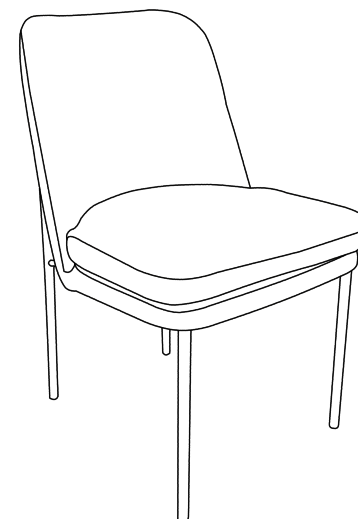
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat		1X
B	Front Parts of Base		1X
C	Back Parts of Base		1X
HW1	Split Lock Washer(M6)		5X
HW2	Flat Washer(M6)		5X
HW3	Socket Screws 6*1.25*25MM		5X
HW4	Allen Key		1X

SAFAVIEH COUTURE

Model#: SFV4835

Dimensions:19.3"WX22.6"DX31.1"H



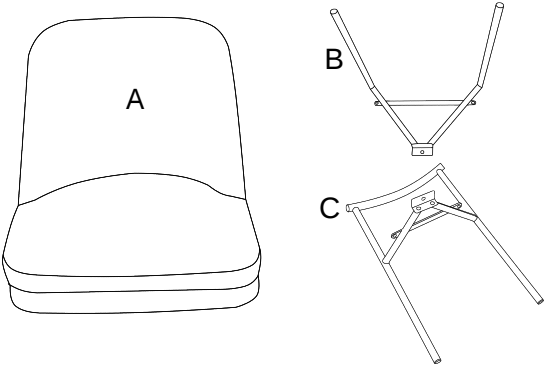
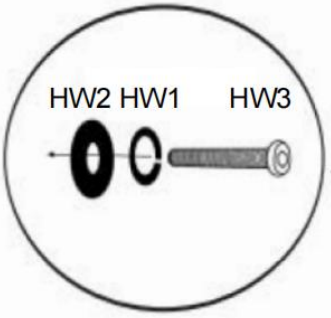
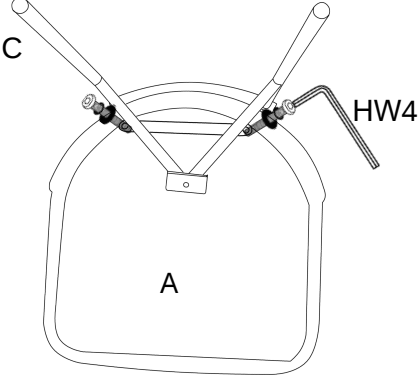
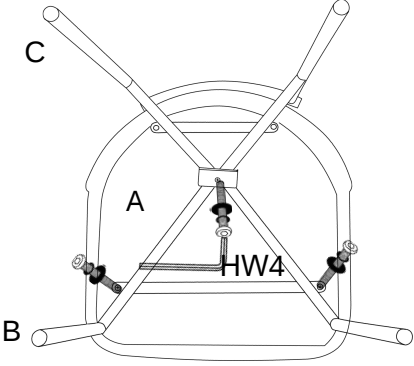
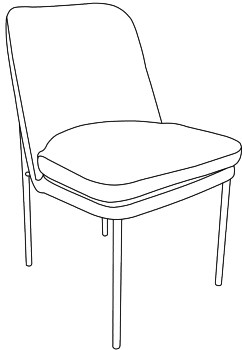
Weight Capacity: 275 lbs

WARNING:DON'T STAND ON CHAIR

WARNING:DON'T OVER TORQUE BOLTS/SCREWS

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

		
STEP 1: Open the box and take out the seat (A), base (B & C), and Hardware (HW1-HW4).	STEP 2: Place the Split Lock Washer (HW1) and Flat Washer (HW2) on the Socket Screws (HW3) as shown in the picture.	STEP 3: Attach the back part of the base (C) to the seat (A) by using the Allen Key (HW4) to screw in the screws and washers from step 2. Don't fully tighten them.
		
STEP 4: Attach the front part of the base (B) to the seat (A) by using the Allen Key (HW4) to screw in the screws and washers from step 2. Don't fully tighten them.	STEP 5: Turn the chair upright. Make sure all legs are level and then fully tighten all the screws. If the chair is wobbly, you can adjust the levelers on the bottom of the legs.	