

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

- * Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
- * The use of steam or water-based cleaners may cause excessive shrinking or staining.

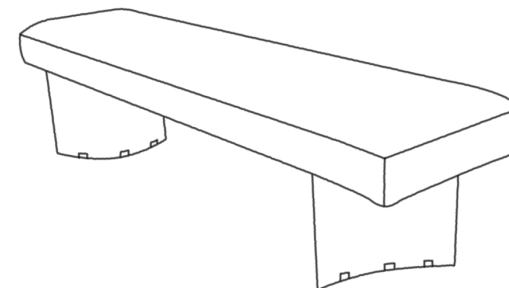
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat		1X
B	Base		2X
HW1	Split Lock Washer (M6)		6X
HW2	Flat Washer(M6)		6X
HW3	Socket Screws 6*1.05*30MM		6X
HW4	Allen Key		1X
HW5	Foot Protector		6X

SAFAVIEH COUTURE

Model#: SFV4844

Dimension: 62.6"WX16.1"Dx16.1"H



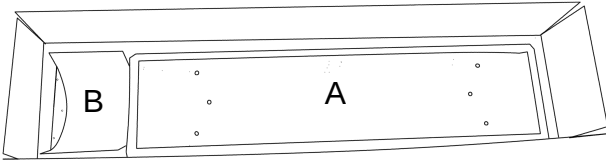
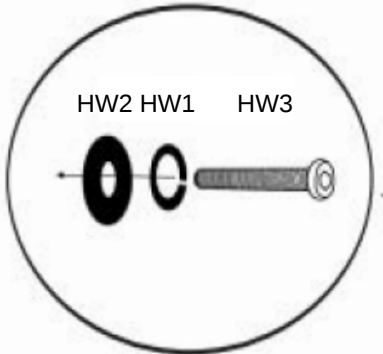
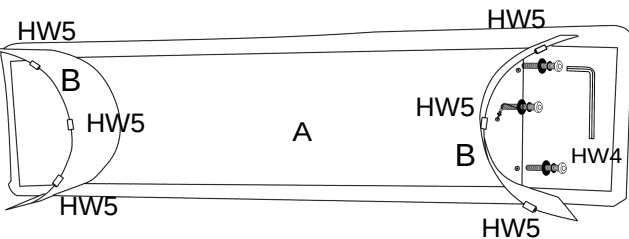
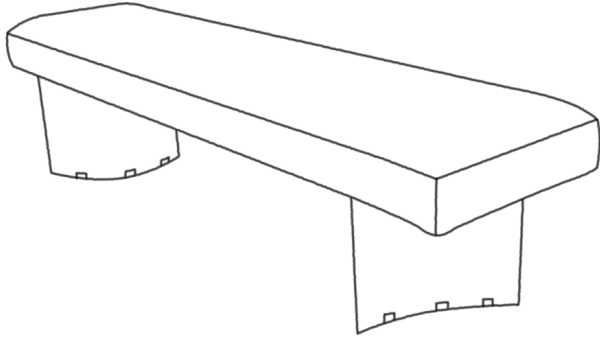
Weight Capacity: 550 lbs

WARNING: DO NOT STAND ON BENCH

WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

	
STEP1 OPEN THE CARTON TO TAKE OUT THE BODY AND BASE.	STEP2 PUT THE WASHERS ON THE SCREW IN THE ORDER SHOWN IN THE PICTURE
	
STEP3 INSERT THE BASE AND SCREW IN THE BOLTS .	STEP4 PUT THE BENCH UPRIGHT,THE BENCH IS READY TO USE.NOTE TO ADD THE FOOT PROTECTOR(HW5) IF NEEDED.