

NOTICE

- *Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- *This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- *This item may require periodic tightening.
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION


- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 15 minutes.
- *Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

The use of steam or water-based cleaners may cause excessive shrinking or staining.

Parts List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Leg		2X
B	Seat		1X
HW1	Bolt M8 x 40MM		4X
HW2	Spring Washer 8.5 mm		4X
HW3	Flat Washer 9 mm		4X
HW4	Allen Key		1X

SAFAVIEH

C O U T U R E

Model# SFV5086

Product Dimensions: 52.00" W x 19.70" D x 16.50" H

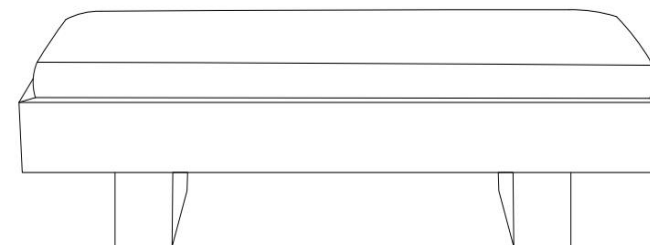

Weight Capacity: 550 lbs

WARNING: DO NOT STAND ON BENCH

WARNING: DO NOT OVER TORQUE BOLTS

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.


*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 15 minutes.

*Tools Required for Assembly (included): Allen Key


*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

1

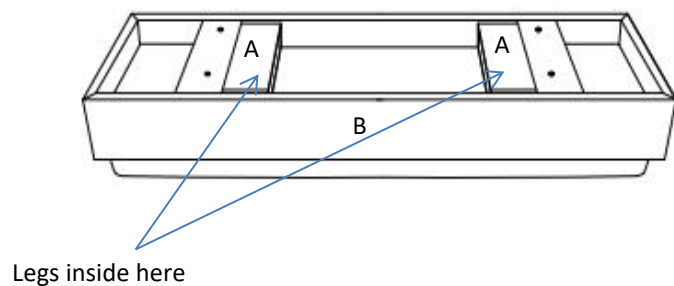


STEP 1: PLEASE SCREW OUT THE LEGS WITH ALLEN KEY.

2

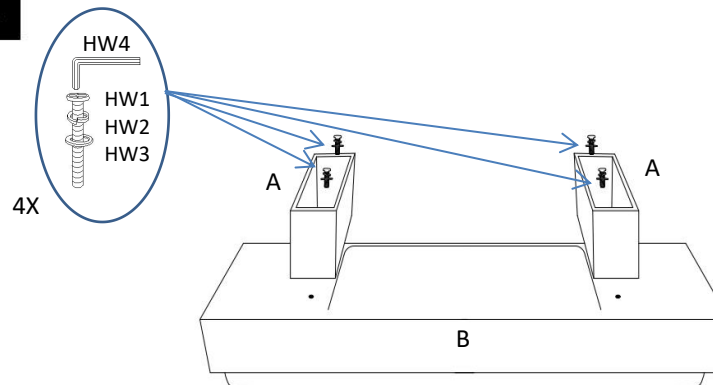


STEP 2: PUT THE WASHERS ON THE SCREW IN THE ORDER SHOWN IN THE PICTURE, INSERT THE LEGS AND SCREW IN THE SCREWS BUT DON'T TIGHTEN COMPLETELY. REPEAT THE SAME STEPS FOR THE OTHER LEG.

3

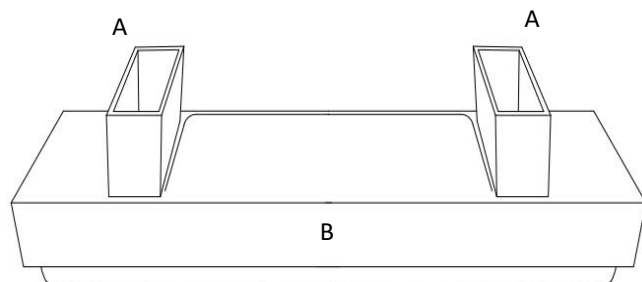

STEP 3: FIRMLY TIGHTEN BOLTS WITH ALLEN KEY.

4

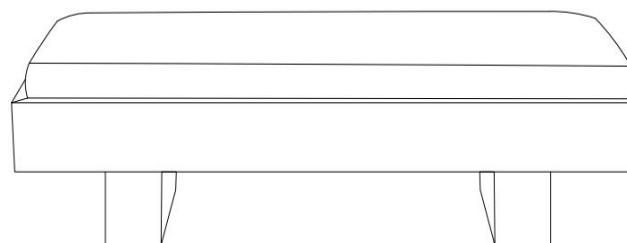

STEP 4: PUT THE BENCH UPRIGHT AND MAKE SURE ALL LEGS ARE LEVEL, AS PICTURED ABOVE.