

NOTICE

- *Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- *This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- *This item may require periodic tightening.
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 15 minutes.
- *Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
The use of steam or water-based cleaners may cause excessive shrinking or staining.

Parts List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Seat		1X
B	Legs		4X
HW1	Bolt M8 x 25MM		16X
HW2	Metal Plate Sheet		4X
HW3	Allen Key		1X

SAFAVIEH

C O U T U R E

Model# SFV5110

Product Dimensions: 60.00" W x 24.00" D x 16.90" H

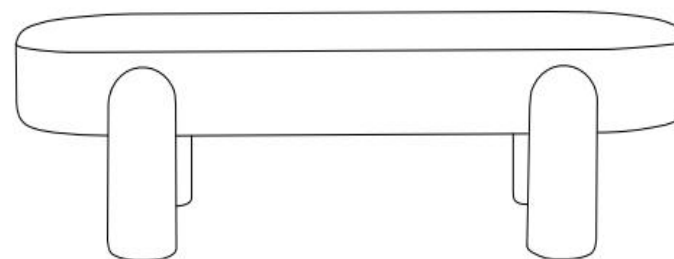

Weight Capacity: 550 lbs

WARNING: DO NOT STAND ON BENCH

WARNING: DO NOT OVER TORQUE BOLTS

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 15 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


1



Legs inside here.


STEP 1: OPEN THE ZIPPER ON THE BOTTOM OF THE SEAT AND TAKE OUT LEGS AND HARDWARE.

2

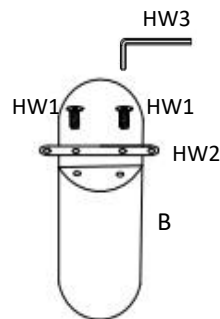


STEP 2: PLEASE ASSEMBLE THE METAL PLATE SHEET AND LEG IN THE ORDER SHOW IN THE PICTURE.

3

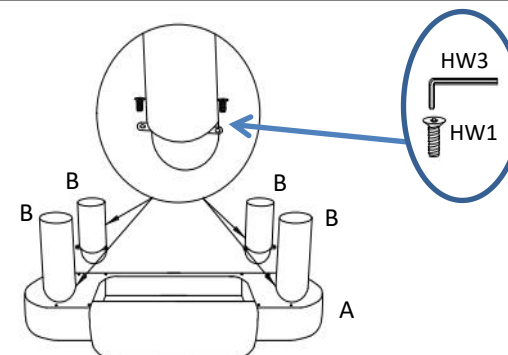


STEP 3: PUT THE SCREW IN THE ORDER SHOWN IN THE PICTURE, SCREW IN THE SCREWS BUT DON'T TIGHTEN COMPLETELY. REPEAT THE SAME STEPS FOR THE OTHER THREE LEGS.

4

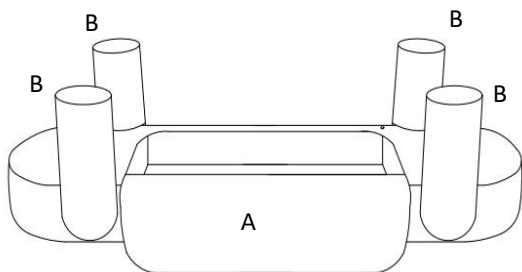

STEP 4: CLOSE THE ZIPPER ON THE BOTTOM OF THE SEAT.

5

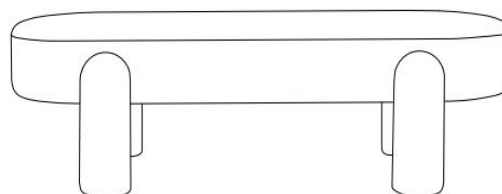

STEP 5: PUT THE BENCH UPRIGHT AND MAKE SURE ALL LEGS ARE LEVEL, THEN FIRMLY TIGHTEN BOLTS WITH ALLEN KEY WHILE THE BENCH IS UPRIGHT AS PICTURED ABOVE.

A