
HILDABRYNA WOOD CURVED BACK DINING CHAIR

DESIGN # SFV6702

Assembly Instructions

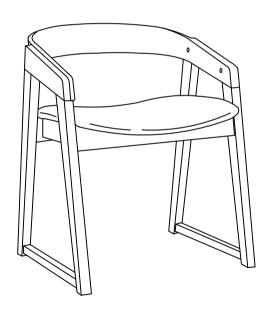

Need help?

Feel free to contact us via email or call if you have any specific questions! contact us: cs@safavieh.com 8664229070



Thanks for bringing Safavieh Couture into your home


Everything we make is incredibly simple to set up, including your new dining table. You won't need any additional tools.

Parts List Hardware List A x 1 HW1 x 4 SIDE FRAME JCBC M6 x 70mm + S/W M6 + F/W M6 x 13mm LEFT HW2 x 4 B x 1 JCBC M6 x 20mm SIDE FRAME RIGHT HW3 x 4 C x 1 L Bracket **BOX FRAME** HW4 x 8 D x 1 PH CB Screw M4 x 12mm TOP REST HW5 x 2 E x 1 Dowel M8 x 25mm **CUSHION SEAT** HW6 x 1

Allen Key M4 (Ball Shape)


1

Insert the pre-installed dowels on the Box Seat (C) into the holes on the Right Side Frame (B). Attach them together by using the Allen Key (HW6) to screw in the M6x70MM bolts (HW1). Do not fully tighten the bolts.

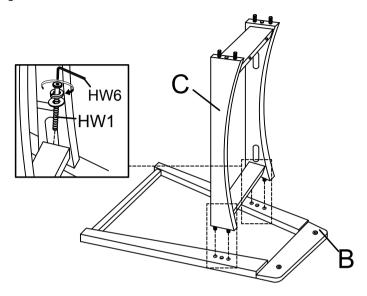


2

Insert the pre-installed dowels on the Box Seat (C) into the holes on the Left Side Frame (A). Attach them together by using the Allen Key (HW6) to screw in the M6x70MM bolts (HW1). Do not fully tighten the bolts.

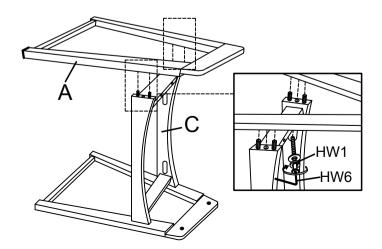


Insert the dowels (HW5) into the holes shown below on the left side of the Box Seat (C).

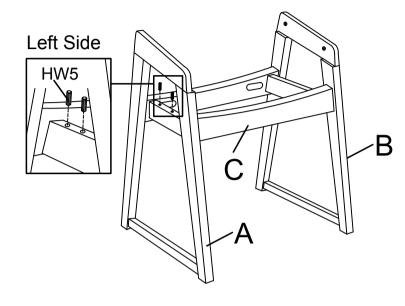


4

Insert the other end of the dowels (HW5) into the holes on the cushion seat (E). Align the holes on the L Brackets (HW3) to the holes on the cushion seat (E) and the side frames (A & B) as shown. Attach them by using a Philips Head Screwdriver (not provided) to screw in the screws (HW4).

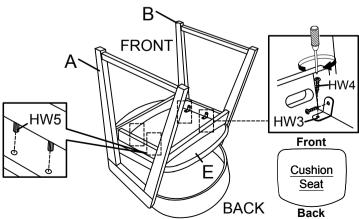

Align the screw holes on the Top Rest (D) to the holes on the assembled base. Use the Allen Key (HW6) to screw in the M6x20MM bolts (HW2). Fully tighten the bolts, but don't overtighten them.

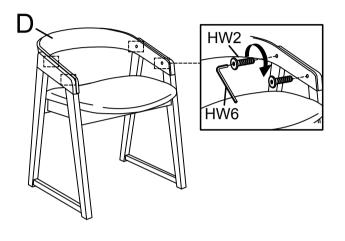

6

Place the dining chair in the position where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

