


LEROUX WOOD LADDER BACK DINING CHAIR

DESIGN # SFV6704

Assembly Instructions

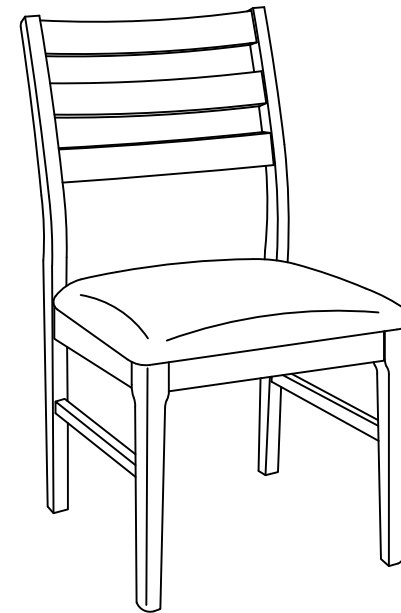

Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com

8664229070


SAFAVIEH
C O U T U R E

Thanks for bringing Safavieh Couture into your home

Everything we make is incredibly simple to set up, including your new dining table. You won't need any additional tools.

Parts List


A x 1
BACK REST




B x 1
BOX SEAT




C x 1
FRONT LEG
(LEFT)



D x 1
FRONT LEG
(RIGHT)



E x 2
SIDE RAIL
(RIGHT / LEFT)




Hardware List


HW1 x 4
JCBC M6 x 80mm + S/W M6 +
F/W M6 x 19mm



HW2 x 4
JCBC M6 x 60mm + S/W M6 +
F/W M6 x 19mm




HW3 x 2
JCBC M6 x 35mm + S/W M6 +
F/W M6 x 19mm



HW4 x 1
Allen Key M4 (Ball Shape)




HW5 x 4
PH CB Screw M4 x 32mm




1

- 1a. Insert the pre-installed dowels on the back of the box seat (B) into the back rest (A) as shown.
- 1b. Attach the box seat (B) to the back rest (A) by using the Allen key (HW4) to screw in the M6x35MM bolts (HW3) as shown.
- 1c. Insert the M6x80MM bolts (HW1) into the corner blocks and use the Allen Key (HW4) to screw them in.

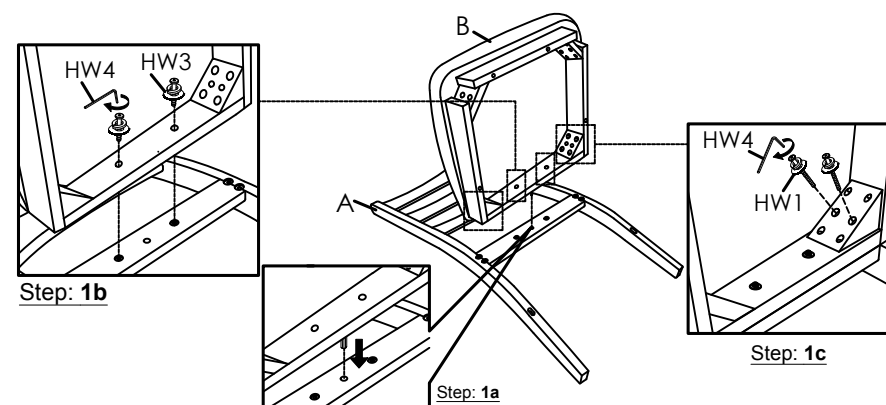


2

Insert the Right Side Rails (E) into the legs of the Back Rest (A). Align the Right Front Leg (D) and the Left Front Leg (C) with the holes on both Side Rails (E & F). Then, attach both Front Legs (C & D) to the corner blocks in the Box Seat (B) by using the Allen Key (HW4) to screw in the Bolts (HW2).

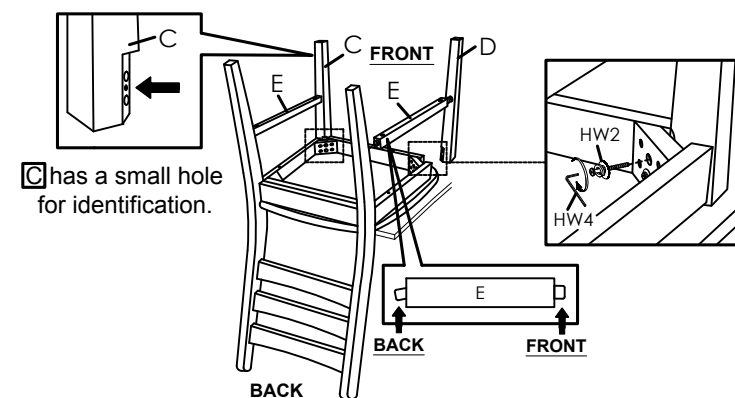

3

Attach the Side Rails (E) to the legs by using a Philips Head Screwdriver (not included) to screw in the screws (HW5).

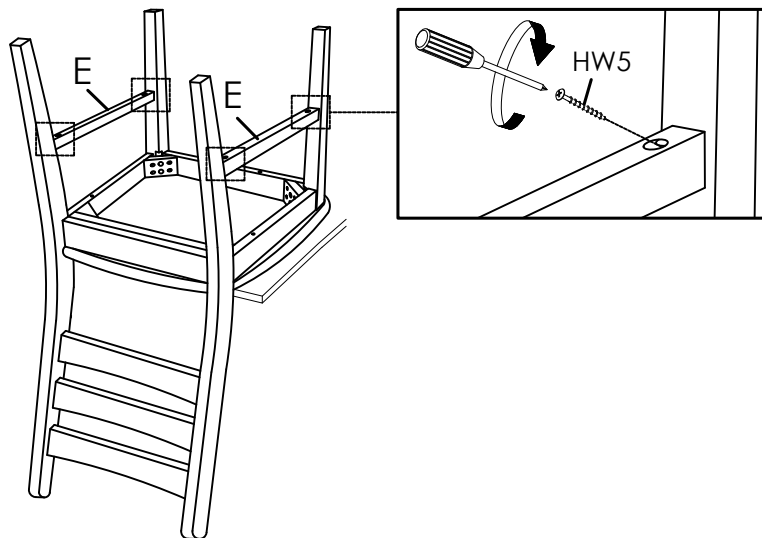

4

Place the dining chair in the position where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

