
MADINA WOOD MID-CENTURY DINING CHAIR

DESIGN # SFV6706

Assembly Instructions

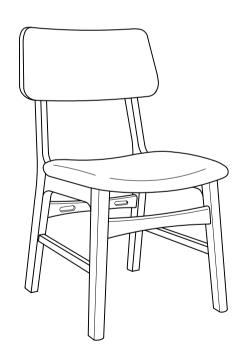



Need help?

Feel free to contact us via email or call if you have any specific questions! contact us: cs@safavieh.com 8664229070

Thanks for bringing Safavieh Couture into your home


Everything we make is incredibly simple to set up, including your new dining table. You won't need any additional tools.

Parts List Hardware List A x 1 HW1 x 4 RIGHT SIDE JCBC M6 x 30mm + S/W M6 + FRAME F/W M6 x 13mm B x 1 HW2 x 4 LEFT SIDE JCBC M6 x 50mm + S/W M6 + FRAME F/W M6 x 13mm C x 2 HW3 x 1 FRONT & BACK Allen Key M4 (Ball Shape) STRETCHER HW4 x 4 Dx1 L Bracket TOP REST HW5 x 8 $\angle LLLL(X)$ E x 1 PH CB Screw M4 x 12mm **CUSHION SEAT** HW6 x 2

Dowel M8 x 25mm


1

Insert the Pre-installed dowels on the front & back stretcher (C) into the holes in the right and left Side Frames (A & B).

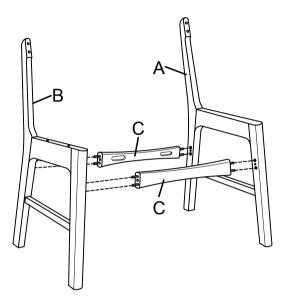


2

Attach them by using the Allen Key (HW3) to screw in the M6x50MM bolts (HW2) as shown. Do not fully tighten the bolts.

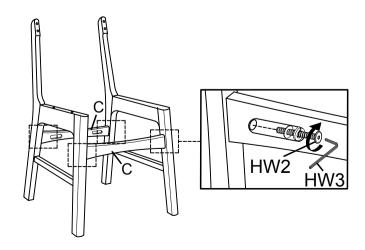


Align the holes on the Top Rest (D) to the holes on the assembled chair frame. Attach them by using the Allen Key (HW3) to screw in the M6x30MM bolts (HW1) as shown. Fully tighten the bolts, but don't overtighten.

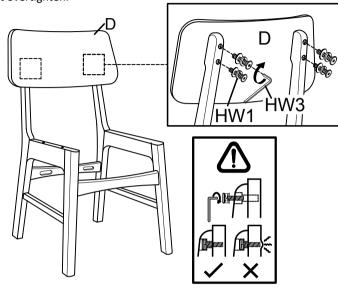


4

Fully tighten all the bolts, but don't overtighten.

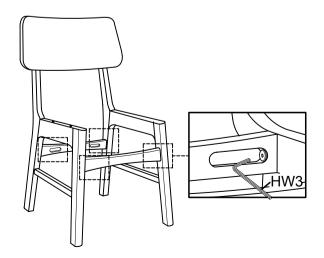


Insert the Dowels (HW6) into the designated holes on the Right Side Frame (B) as shown below.

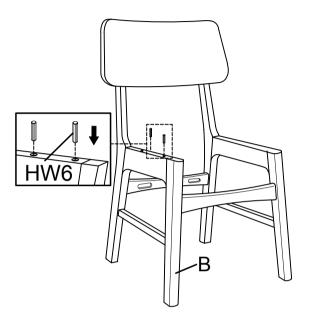

6

Insert the other end of the dowels (HW6) into the Cushion Seat (E). Align the L Bracket (HW4) to the screw holes on the bottom of the Cushion Seat (E). Attach them by using a screwdriver (not provided) to screw in the screws (HW5). Fully tighten the screws, but don't overtighten.

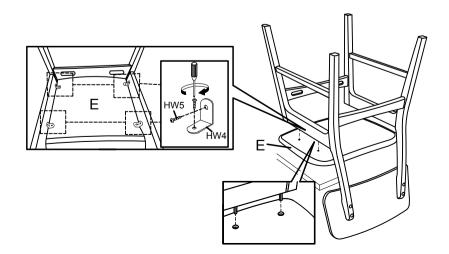

Place the dining chair in the position where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

