


RHONDA WOOD MID-CENTURY DINING CHAIR

DESIGN # SFV6708

Assembly Instructions

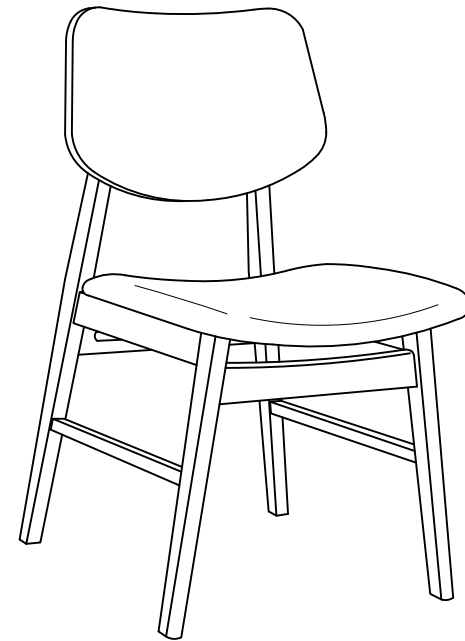

Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com

8664229070

SAFAVIEH
C O U T U R E

Thanks for bringing
Safavieh Couture into
your home

Everything we make is incredibly
simple to set up, including your new
dining table. You won't need any
additional tools.

Parts List

A x 1
LEFT SIDE
FRAME



B x 1
RIGHT SIDE
FRAME



C x 2
FRONT & BACK
STRETCHER



D x 1
TOP REST



E x 1
CUSHION SEAT



Hardware List

HW1 x 4
JCBC M6 x 30mm + S/W M6 +
F/W M6 x 13mm



HW2 x 4
JCBC M6 x 50mm + S/W M6 +
F/W M6 x 13mm



HW3 x 1
Allen Key M4 (Ball Shape)



HW4 x 4
L Bracket



HW5 x 8
PH CB Screw M4 x 12mm




HW6 x 2
Dowel M8 x 25mm




1

Insert the Pre-installed dowels on the front & back stretcher (C) into the holes in the left and right Side Frames (A & B).

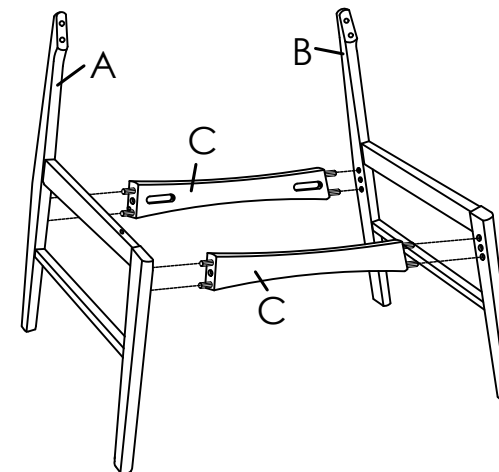


2

Attach them by using the Allen Key (HW3) to screw in the M6x50MM bolts (HW2) as shown.
Do not fully tighten the bolts.

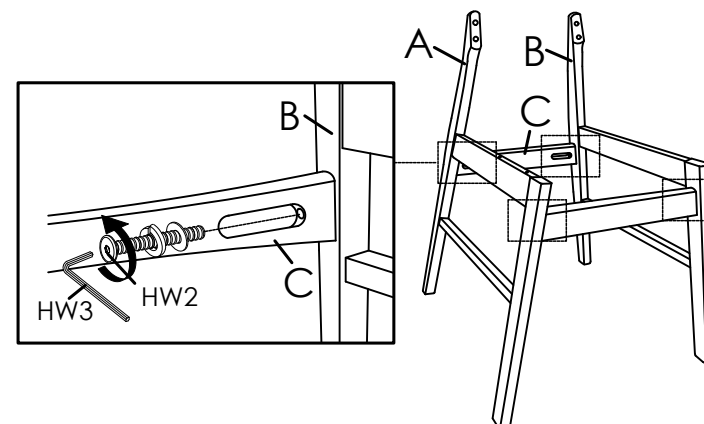


3

Align the holes on the Top Rest (D) to the holes on the assembled chair frame. Attach them by using the Allen Key (HW3) to screw in the M6x30MM bolts (HW1) as shown. Fully tighten the bolts, but don't overtighten.

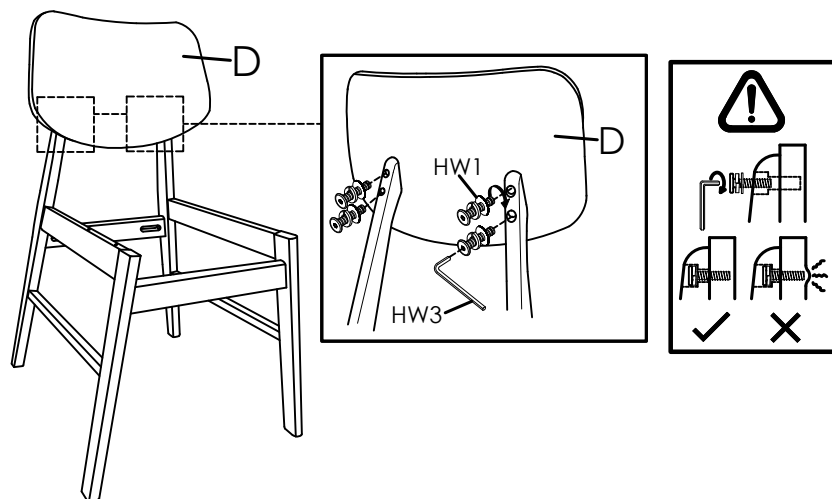


4

Fully tighten all the bolts, but don't overtighten.

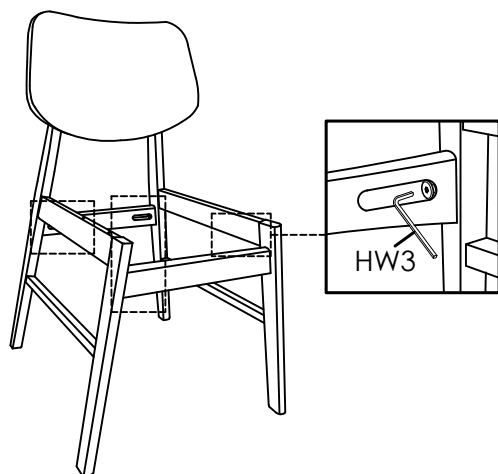


5

Insert the Dowels (HW6) into the designated holes on the Right Side Frame (A) as shown below.

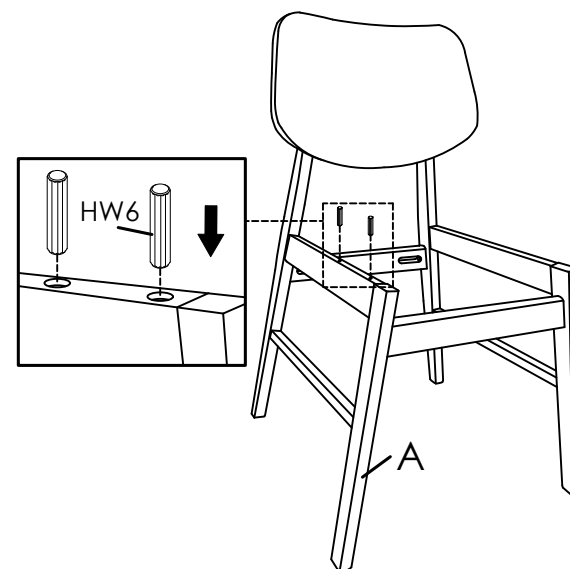

6

Insert the other end of the dowels (HW6) into the Cushion Seat (E). Align the L Bracket (HW4) to the screw holes on the bottom of the Cushion Seat (E). Attach them by using a screwdriver (not provided) to screw in the screws (HW5). Fully tighten the screws, but don't overtighten.

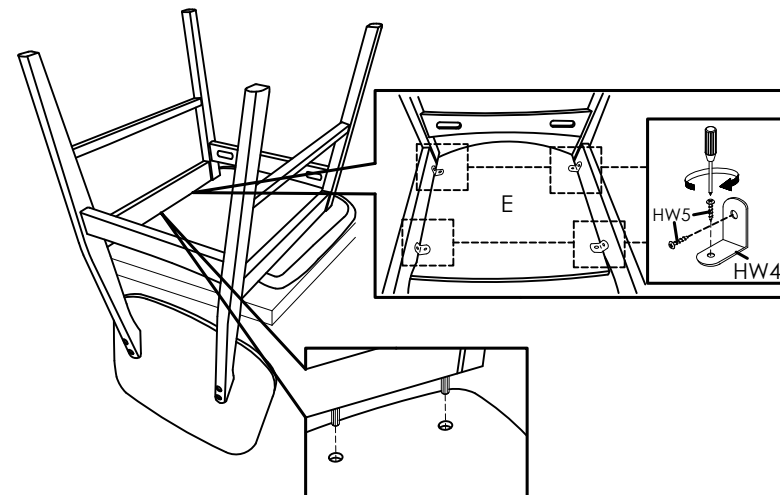

Place the dining chair in the position where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

@safavieh

