

3/16 Intermediate Post Installation


Viewrail Intermediate Posts are not designed to offer structural support to the handrail; they are solely for the purpose of reducing cable deflection.

LEVEL CABLE RUN INSTALLATION

1. Measure from bottom of handrail to the mounting surface.
2. Cut Intermediate Post to the measurement from the previous step with any device appropriate for cutting stainless steel. Remove any burrs with a file.
- Helpful Tip:** At this point, you can use this Intermediate Post as a drilling guide for your wood posts. This will ensure that all of your cable holes line up.
3. Slide the Foot Cover then the Intermediate Post Mounting Bracket onto the cut end of the Intermediate Post.
4. Mount the top end of the Intermediate Post into the handrail with the provided screws.
5. Make sure the post is vertical, then screw the Intermediate Post Mounting Bracket into the mounting surface with the provided screws.
6. Slide the Foot Cover over the Intermediate Post Mounting Bracket.



3/16 Intermediate Post

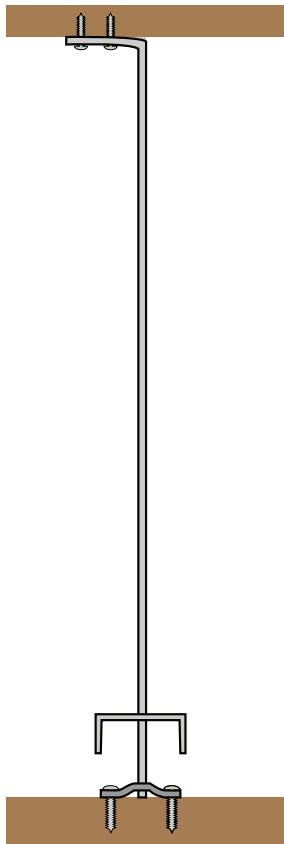

Foot Cover




Intermediate Post Mounting Bracket

SEE NEXT PAGE FOR ANGLED CABLE RUN INSTALLATION


3/16 Intermediate Post Installation

Viewrail Intermediate Posts are not designed to offer structural support to the handrail; they are solely for the purpose of reducing cable deflection.


ANGLED CABLE RUN INSTALLATION

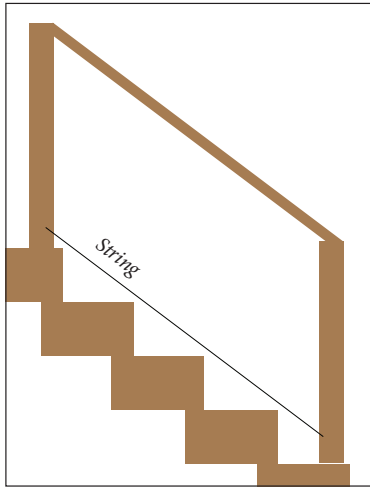


1. Run string to simulate the bottom cable of your angled run.

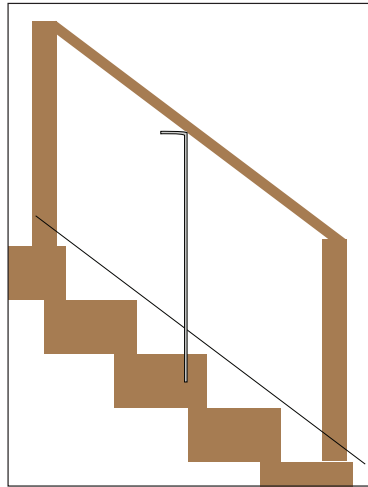


2. Hold the Intermediate Post up to the bottom of the handrail with the bottom hanging off the side of the stair.

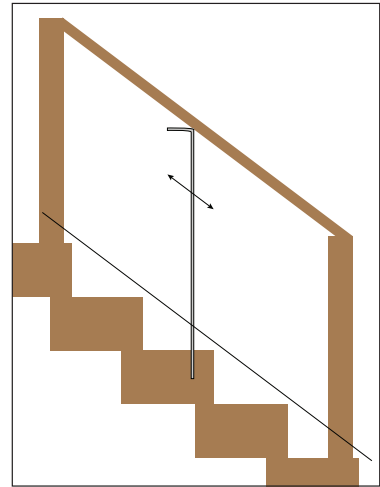

3. Slide post to find where a cable hole will line up with your bottom cable (string).

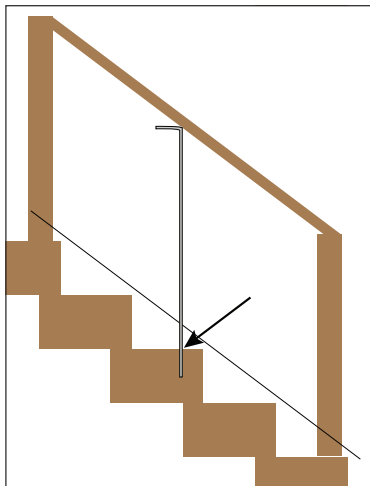

4. Once you've found the proper post location, mark the cut length for the post.

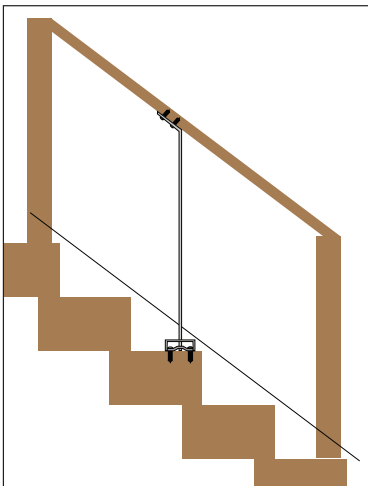

5. Cut Intermediate Post to the measurement from the previous step with any device appropriate for cutting stainless steel. Remove any burrs with a file.

6. Covering the post top with a rag to protect the finish, use pliers to bend the post top to the appropriate angle.

7. Slide the Foot Cover then the Intermediate Post Mounting Bracket onto the cut end of the Intermediate Post.

8. Mount the top end of the Intermediate Post into the handrail with the provided screws.

9. Make sure the post is vertical, then screw the Intermediate Post Mounting Bracket into the mounting surface with the provided screws.

10. Slide the Foot Cover over the Intermediate Post Mounting Bracket.
