




## C12936 ASSEMBLY INSTRUCTIONS

### PARTS:

(2) Side Piece

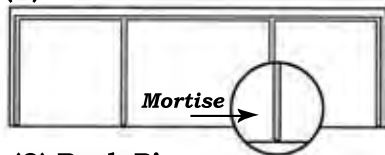

(3) Back Piece



(2) Top/Bottom Piece



(2) Shelf Piece (back groove both sides)



(16) Hex Screws




(1) Allen Wrench




**Notice - KEEP BACK GROOVES ALIGNED**


**Step 1:** Insert edge of **bottom** piece into mortise of **side** piece. Make sure back grooves are aligned. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

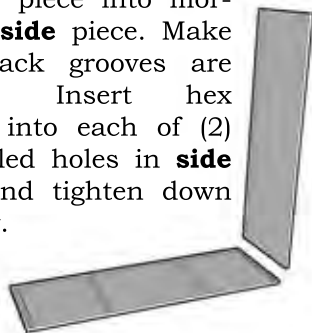


**Step 2:** Insert edge of **top** piece into opposite mortise of **side** piece making sure back grooves align. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

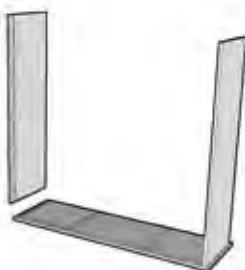

**Step 3:** Insert edge of one **shelf** piece into mortise of **side** piece, making sure to align back grooves. Insert hex screws in each of (2) pre-drilled holes in **side** piece and tighten down halfway.

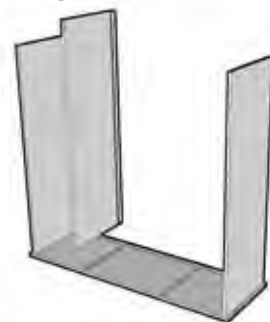


**Step 4:** Insert edge of remaining **shelf** piece into remaining mortise of **side** piece, making sure to align back grooves. Insert hex screws into each of (2) pre-drilled holes in **side** piece and tighten down halfway.

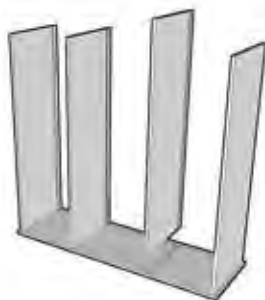


**Step 5:** Insert sides of one **back** piece into back grooves of **bottom** piece and **shelf** piece. Slide down until edge rests firmly in back groove of **side** piece.



**Step 6:** Insert sides of **other** back piece into back grooves of **top** piece and **shelf** piece. Slide down until edge rests firmly in back groove of **side** piece.

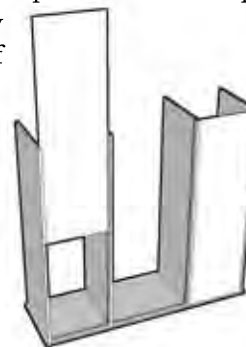

**Step 7:** Insert sides of **center back** piece into back grooves of **shelf** pieces. Slide down until edge rests firmly in back groove of **side** piece.

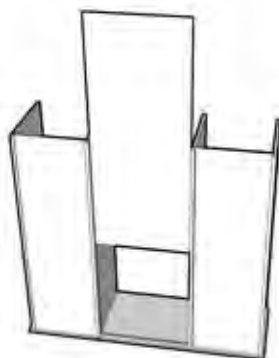

**Step 8:** Fit edges of assembled pieces into mortises and back grooves of remaining **side** piece. Insert hex screws into each of (8) pre-drilled holes in **side** piece and tighten down halfway.



**Step 9:** Tighten all screws snugly. **DO NOT OVER TIGHTEN. DO NOT DRILL.** Rotate unit so that it rests on **bottom** piece and edges of **side** pieces. **Assembly is now complete.**



**For assistance, call: 1-800-247-8465**  
**Email: [sales@wooddesigns.org](mailto:sales@wooddesigns.org)**