

QUIK-LOK® SHELVING


ASSEMBLY INSTRUCTIONS No. 3501 A

Assembly Instructions for New Style QUIK-LOK® Back

NOTICE: The one-piece, flush fitting backs provided on your QUIK-LOK shelving are easily installed and will give your shelving units a clean line appearance.

GENERAL ASSEMBLY INSTRUCTIONS:

The back must be positioned between the rear upright posts BEFORE rear shelf supports are installed.

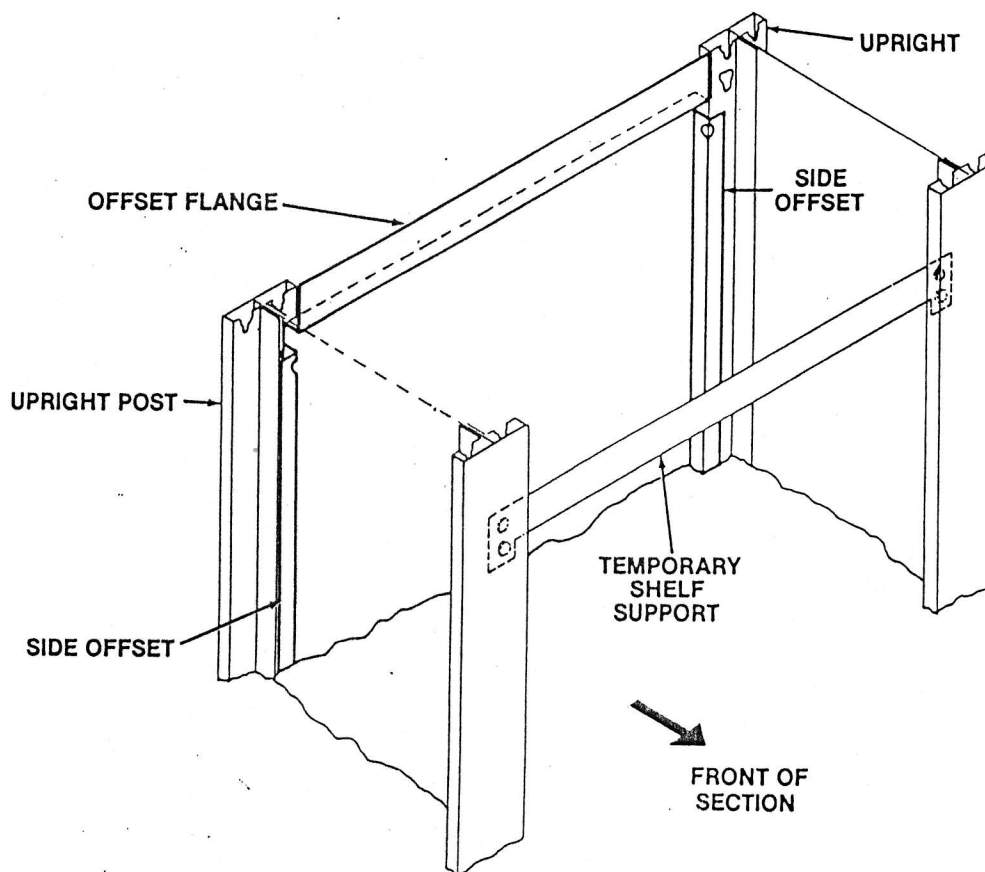

DETAILED ASSEMBLY INSTRUCTIONS:

1. Place two temporary shelf supports in front upright posts (one near the floor and the other above head level).
2. With offset flange at top of back and facing front, place the back between the rear upright posts then . . .
3. Install shelf supports in the rear upright posts near the top and bottom. This will lock the back into position between the upright posts.
4. Install the balance of shelf supports and shelves from the bottom up.