

CHEVROLET MOTORS CORP., TALLAHASSEE, FLORIDA
 GRAPHIC ILLUSTRATION
 ROOF TRIM PANELS - CAB

DATE
 8-15-66

MODEL A-11, A-11E BODY



SHEET NO. 305

DWG. - ORIGINAL
 CHK. RES 8-17-66
 APPROV. JH 8/22/66


ITEM	PART NO.	DESCRIPTION	QUANTITY	
			A-11	A-11E
1	634280	PANEL-FRT	1	1
2	634281	PANEL-CENTER	1	1
3	634282	PANEL-REAR	1	1
4	626628	CLIP ASSEM.	4	4
5	626273	CLIP-ROOF TRIM RETAIN	19	21
6	640230	CLIP-SUN VISOR	2	2
7	634065	MOLDING-FRONT	1	1
8	634066	MOLDING-REAR	1	1
9	626427	CLIP-ROOF TRIM	14	14
10	642405	PANEL-FRT	1	1

ROOF TRIM PANEL INSTALLATION PROCEDURE

1. FASTEN SUN VISOR CLIPS TO ROOF AS ILLUSTRATED.
2. FASTEN ROOF TRIM RETAINER CLIPS TO ROOF AS SHOWN.
3. INSTALL REAR PANEL FIRST, SLIDING HARD BOARD UNDER CLIPS AS ILLUSTRATED.
4. INSTALL FRONT PANEL IN SIMILAR MANNER.
5. LOCATE CENTER PANEL AND SECURE WITH CLIP ASSEM.
6. SECURE ALL PANELS WITH FRT. END REAR ROOF TRIM MOLDING - LOCATE CLIPS AS ILLUSTRATED.

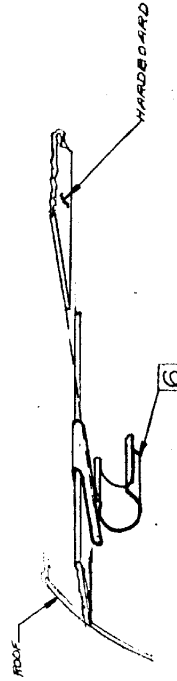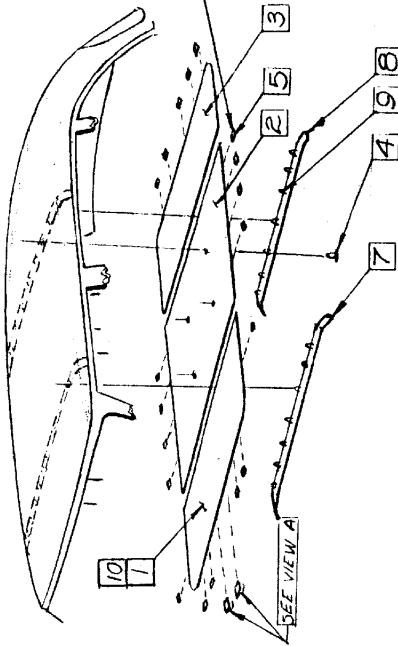

VIEW A

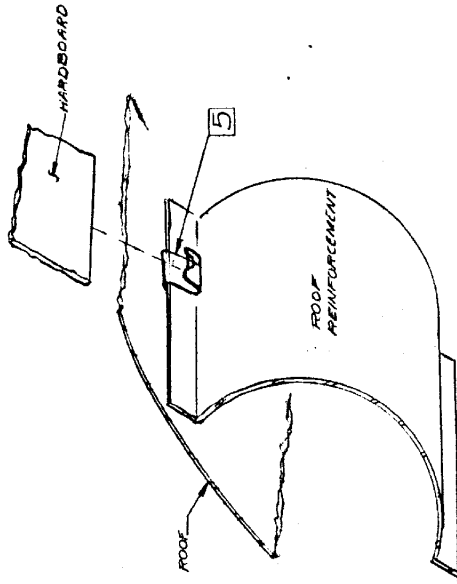

VIEW B