

EFFECTIVE JAN 1, 1968

CHEVROLET MOTORS CORP., MALDEN, MASS.

GRAPHIC ILLUSTRATION

ROOF TRIM PANELS - CAB

DATE

4-8-68

MODEL A-11A-11E BODY

SHEET NO.

682

DRAWN - DECKER




CHK BY 4-1-68

APPROVA

ITEM	PART NO.	DESCRIPTION	QUANTITY	
			A-11	A-11E
1	644387	PANEL-FRT	1	1
2	642092	PANEL-CENTER	1	1
3	644394	PANEL-REAR	1	1
4	626628	CLIP ASSEM.	4	4
5	626273	CLIP-ROOFTRIM RETAIN	20	22
6	644153	CLIP-SUN VISOR	2	2
7	634065	MOLDING-FRONT	1	1
8	634066	MOLDING-REAR	1	1
9	626427	CLIP-ROOF TRIM	14	14
10	642405	PANEL - FRT	1	1
11	626612	SCREW 8 1/8 OHCR.	2	2

ROOF TRIM PANEL INSTALLATION PROCEDURE

1. FASTEN SUN VISOR CLIPS TO ROOF AS ILLUSTRATED.
2. FASTEN ROOF TRIM RETAINER CLIPS TO ROOF AS SHOWN.
3. INSTALL REAR PANEL FIRST, SLIDING HARD BOARD UNDER CLIPS AS ILLUSTRATED.
4. INSTALL FRONT PANEL IN SIMILAR MANNER.
5. LOCATE CENTER PANEL AND SECURE WITH CLIP ASSEM.
6. SECURE ALL PANELS WITH FRT. END REAR ROOF TRIM MOLDING - LOCATE CLIPS AS ILLUSTRATED.

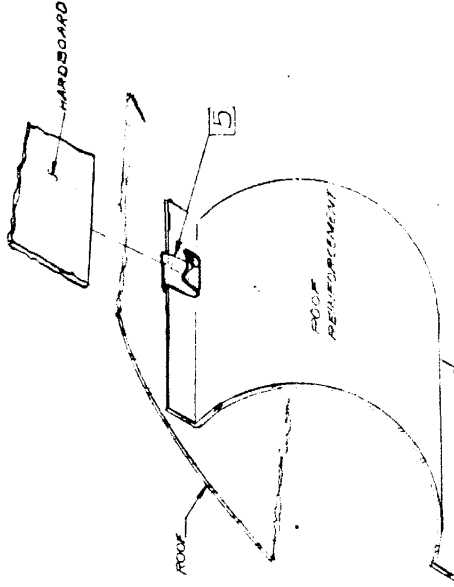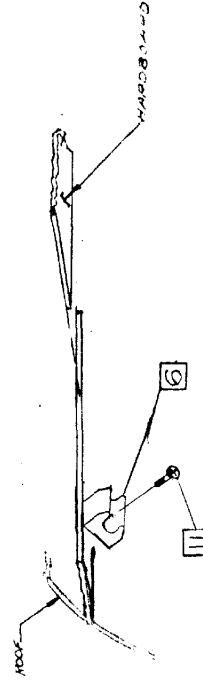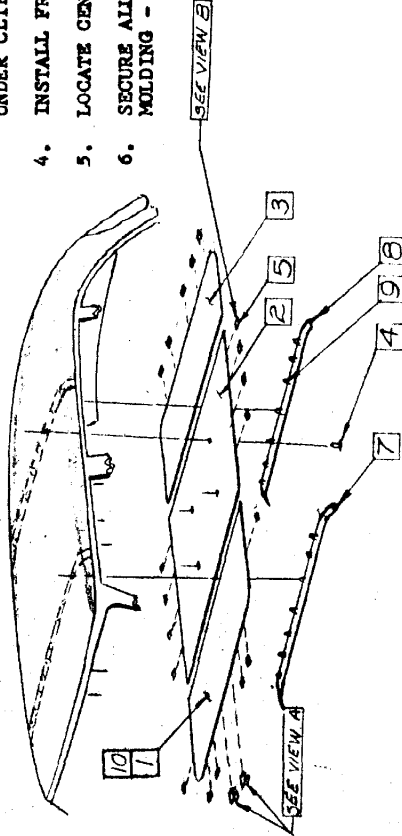

(1) ADD'L. COPY BODY ENGR.

6-17-68 642092 WAS 634261

CHANGES