

CHECKER MOTORS CORP. KALAMAZOO, MICH.

EFFECTIVE MODEL YEAR 1974

SHEET NO. 240 B-1

DWN. CHECKED  
CHK.  
APPVD.

GRAPHIC ILLUSTRATION

LAMPS - CLASS A TURN SIGNAL

DATE


11-12-73

A-12W8

- 1. 639680 LAMP ASM. - TURN SIGNAL REAR (2)
- 2. 639681 LAMP ASM. - TURN SIGNAL FRT. (2)
- 3. SEAL RUBBER (4) } FURNISHED
- 4. L.W. (4) }
- 5. NUT (4) }
- 6. MC-103 LOOM. (2 Pcs. 14" LG.)
- 7. MA-138 TAPE (24')
- 8. 80310 TERMINAL (2)
- 9. 80311 TERMINAL (2)
- 10. 640294 REINFORCEMENT (4)
- 11. 626886 CONNECTOR (2)
- 12. 651717 ADAPTER ASM. - BODY WIRING (2)
- 13. 626584 CONN. BODY (4)
- 14. REF. BODY WIRE HARNESS
- 15. REF. ENG. COMP. WIRING HARNESS
- 16. REF. TAIL LAMP ASM.
- 17. REF. PARKING LAMP ASM.

SEE G.I. 240 A-2 FOR REAR LAMP HOOK-UP

TO STOP LIGHT SWITCH WHEN CLASS 'A' COMMERCIAL TURN SIGNALS ARE USED.

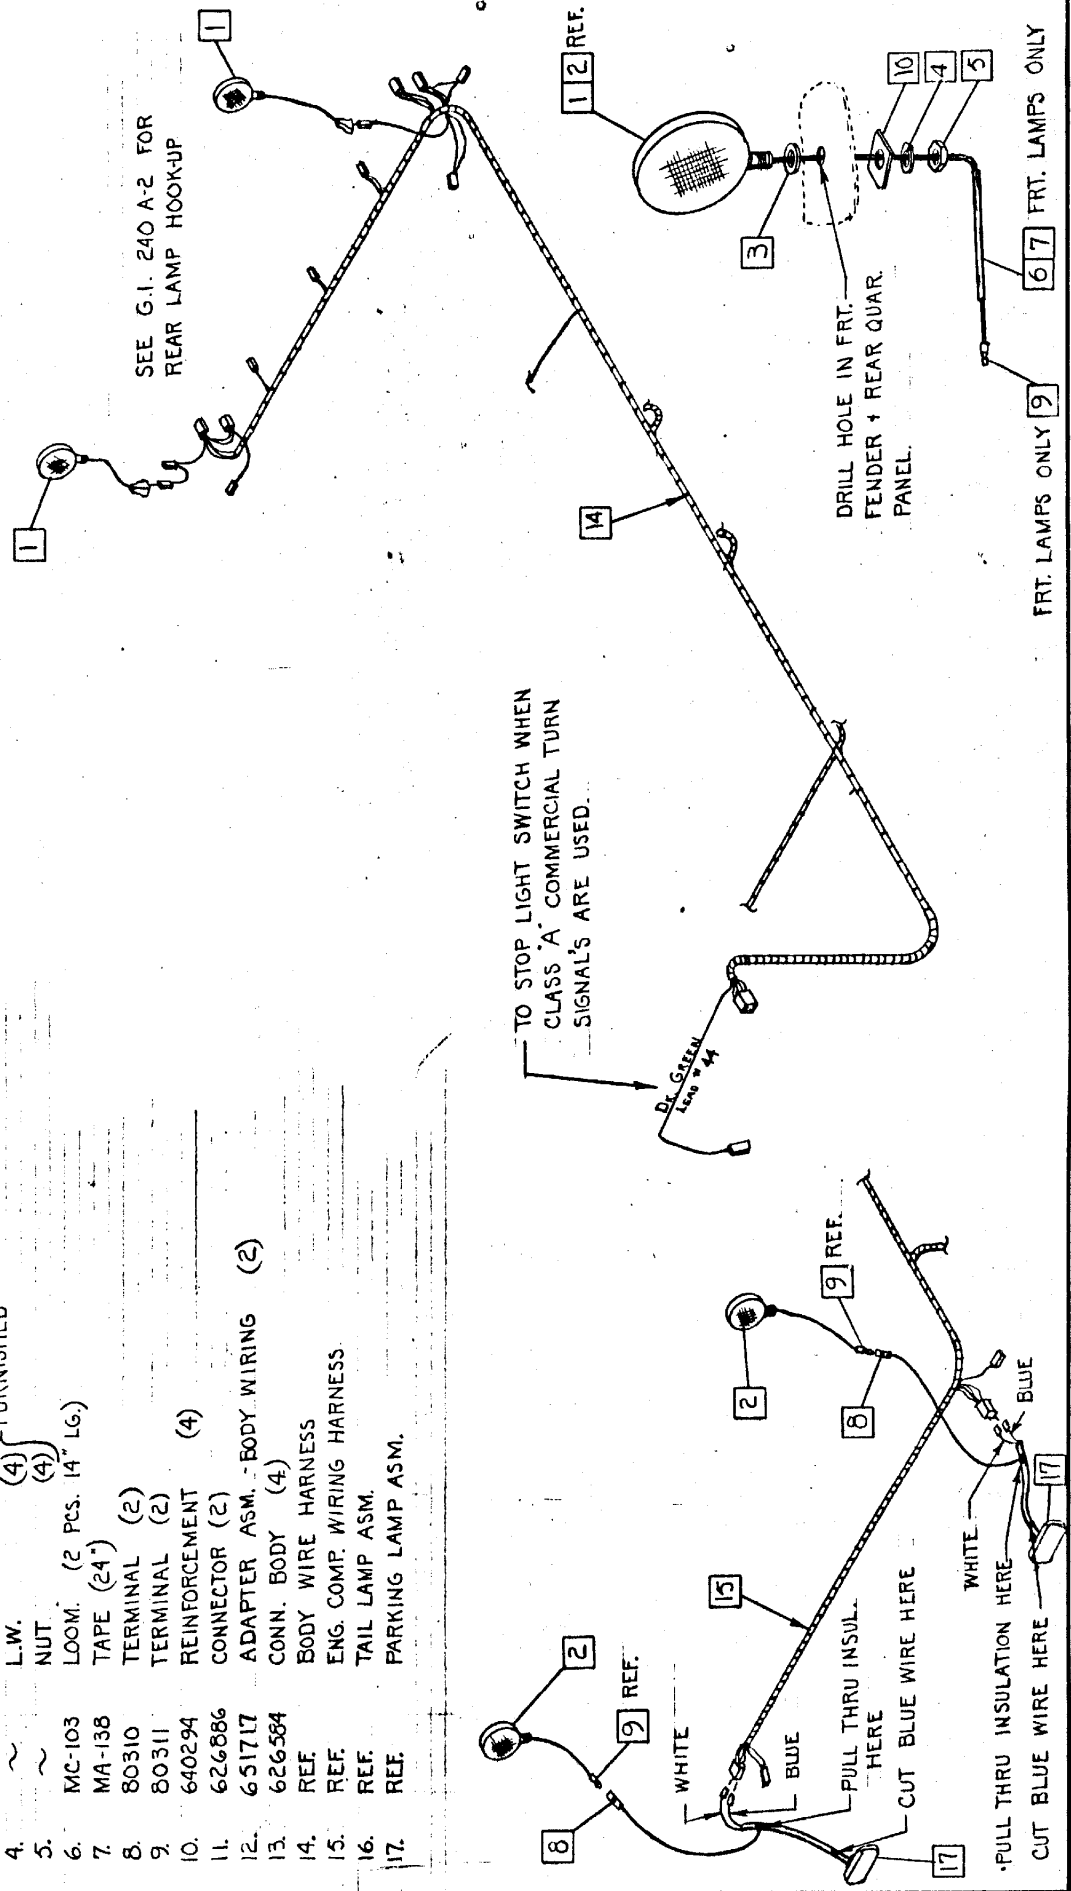

FRT. LAMPS ONLY [9]

WHITE  
BLUE  
PULL THRU INSULATION HERE  
CUT BLUE WIRE HERE

CHECKER MOTORS CORP., KALAMAZOO, MICH.

MODEL:	A-12WB	DATE:	11-12-73	DWN. LEKGER:	CHK.	SHEET NO.	240B-2
GRAPHIC ILLUSTRATION				APPVD.			
LAMPS - CLASS 'A' TURN SIGNAL - FEAR							

REAR CLASS 'A' TURN SIGNAL WIRING HOOKUP

1. REMOVE TAN WIRE (CIR. #22) FROM LEFT TAIL LAMP TWO WAY CONNECTOR, AND LT. GREEN WIRE (CIR. #23) FROM RIGHT TAIL LAMP TWO WAY CONNECTOR. ON TERMINALS REMOVED, ADD CONNECTOR BODY 626584.
2. REMOVE CONNECTOR BODY FROM THE DK. GREEN WIRE AND PLUG BLADE TERMINALS INTO SPACE LEFT BY TAN + LT. GREEN IN TWO WAY CONNECTOR
3. PLUG ONE TWO WAY CONNECTOR INTO ADAPTER ASM. (651717) ON EACH SIDE. INSTALL ADAPTER ASM. SOCKET INTO TAIL LAMP.
4. USING SPLICER # 626886, CONNECT CLASS 'A' TURN SIGNAL LAMP TO TAN WIRE ON LEFT SIDE AND LT. GREEN WIRE ON RIGHT SIDE.

