




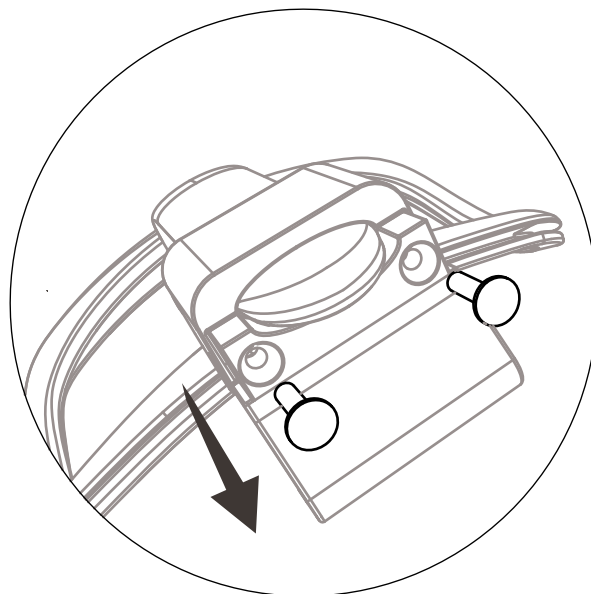


OfficeSource®
FURNITURE

OSTW8010

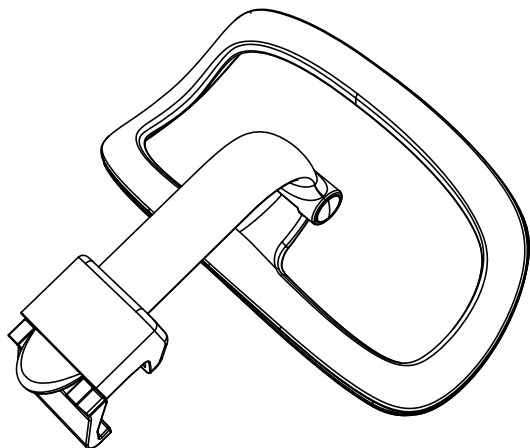

To assemble the headrest, first remove the mounting screws at the bottom to detach the fasteners from the main part.

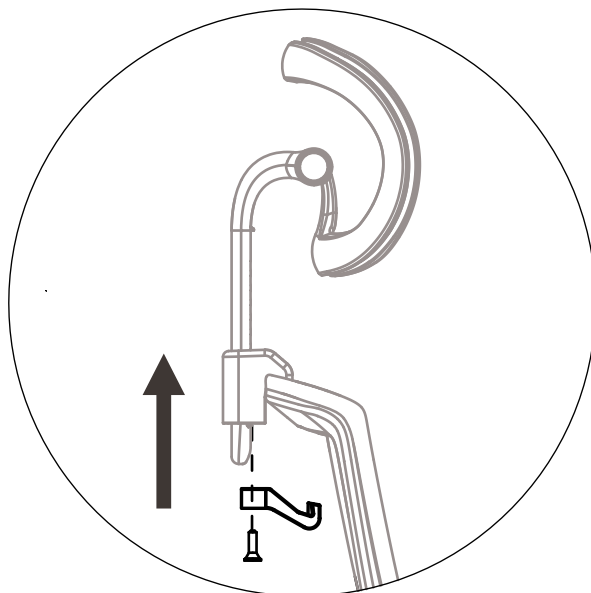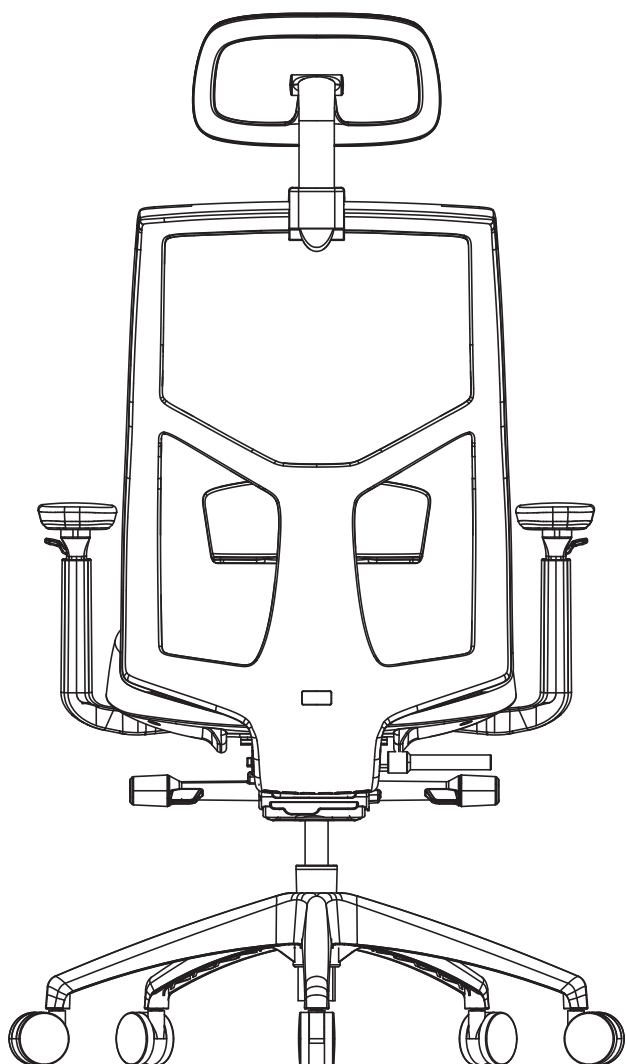

Next, pre-assemble the main part of the headrest onto the top of the backrest and secure it with the buckle. Finally, tighten it with screws.

Headrest installation instructions

