


OFFICE FURNITURE

IMPORTANT NOTICE: HARDWARE PACKAGE IS ATTACHED ON THE BOTTOM OF SEAT CUSHION.

(1)x1	(2)x1	(3)x1 (L)x1 (R)
	•••	
Back	Seat	Right & Left Arm
(4)x1	(5)x1	(6)x1
Mechanism	Gas Lift	Base
(7)x5		
Casters	(A)*8 (D) M6*18 ARM SCREW (B)*8 (D) ARM CAP (C)*4 (M8*22 MECHANISM SCREW)	

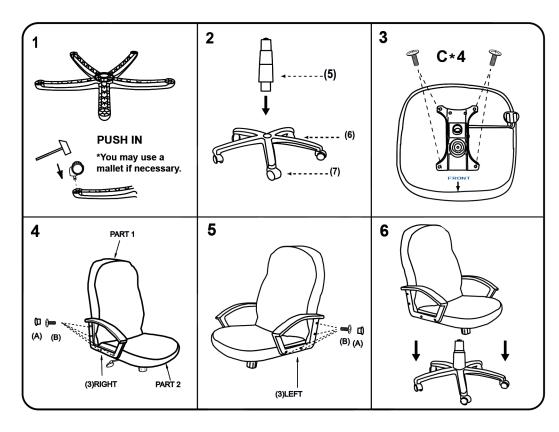

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.



