










Assembly HARDWARE					
S/N	PICTURE	NAME	TOTAL QTY		REMARK
A		CAM SCREW	20PCS		
B		KLIX CAM	20PCS		
C		CAM COVER STICKER	28PCS		use cam covers to cover any klix cam
F	 F1  F2	GLASS SPACERS SCREWS	5PCS		
G		CONNECTOR SCREW	4PCS		Use to connect to another desk
H		GROMMET	2PCS		
I		LEVELER	5PCS		



PART LIST


- ⑫ COUNTER TOP
- ⑯ DESK TOP
- ⑬⑭ COUNTER SUPPORTS
- ⑰⑱ DESK SIDES
- ⑳㉓ BASE SUPPORTS
- Double ⑮ COUNTER BACK
- Double ⑰ DESK BACK
- ⑳ BASE BACK
- ㉑ DESK BOTTOM
- ㉒ BASE BOTTOM
- Double ㉔ CENTER SUPPORT PANEL
- ㉗ CURVED GLASS COUNTER TOP

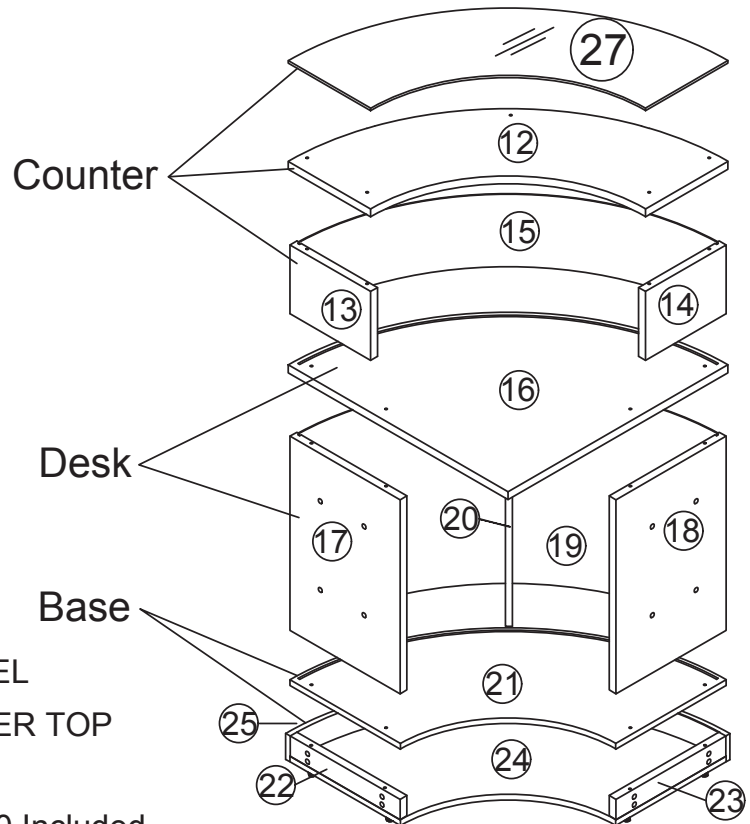

Note: Additional Parts 15, 19, and 20 Included


Bottom Parts 21, 22, 23, 24, and 25 come Pre-Assembled.

1. INSTALL "I" LEVELERS ON THE BOTTOM OF ㉒
1(5x)

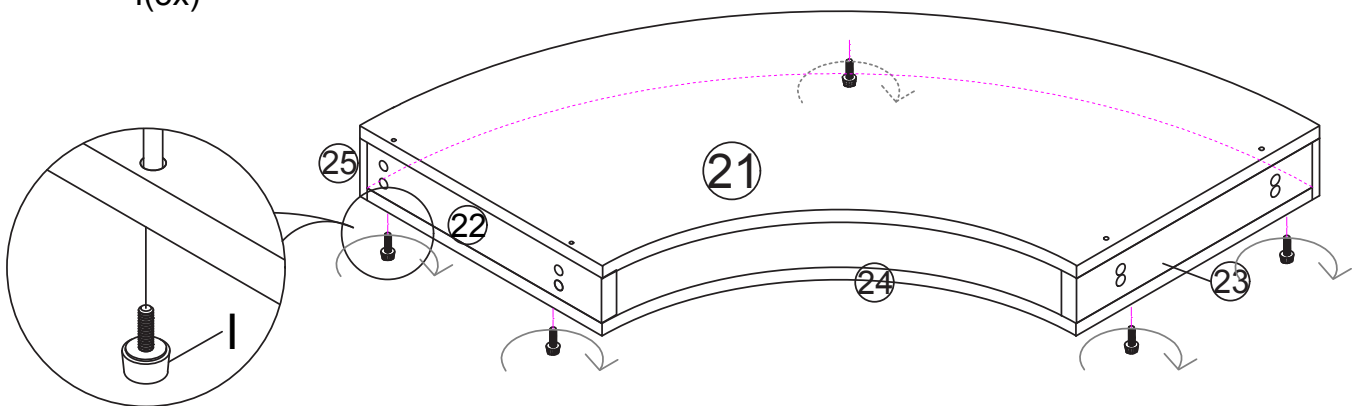



2. INSTALL "H" GROMMETS ON SIDE PANELS 17 & 18.
H(2X)


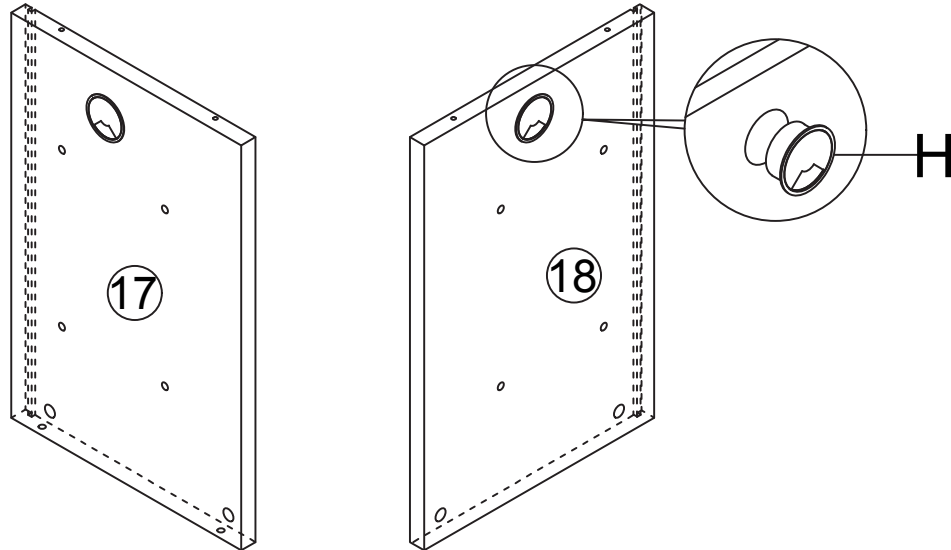


3. CONNECT 21 DESK BOTTOM TO 17 & 18 DESK SIDES & 19 BACK PANEL & 20 CENTER SUPPORT. INSTALL 19 LAST. SEE TWO STEPS BELOW.

<1> INSTALL "A" CAM SCREWS IN 21 AND "B" KLIX CAMS IN 17 18 AND 20
.CONNECT 17 18 AND 20 TO 21, TIGHTEN.


A(6x)

B(6x)

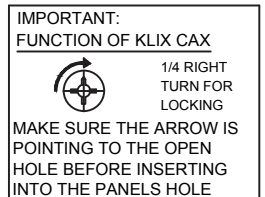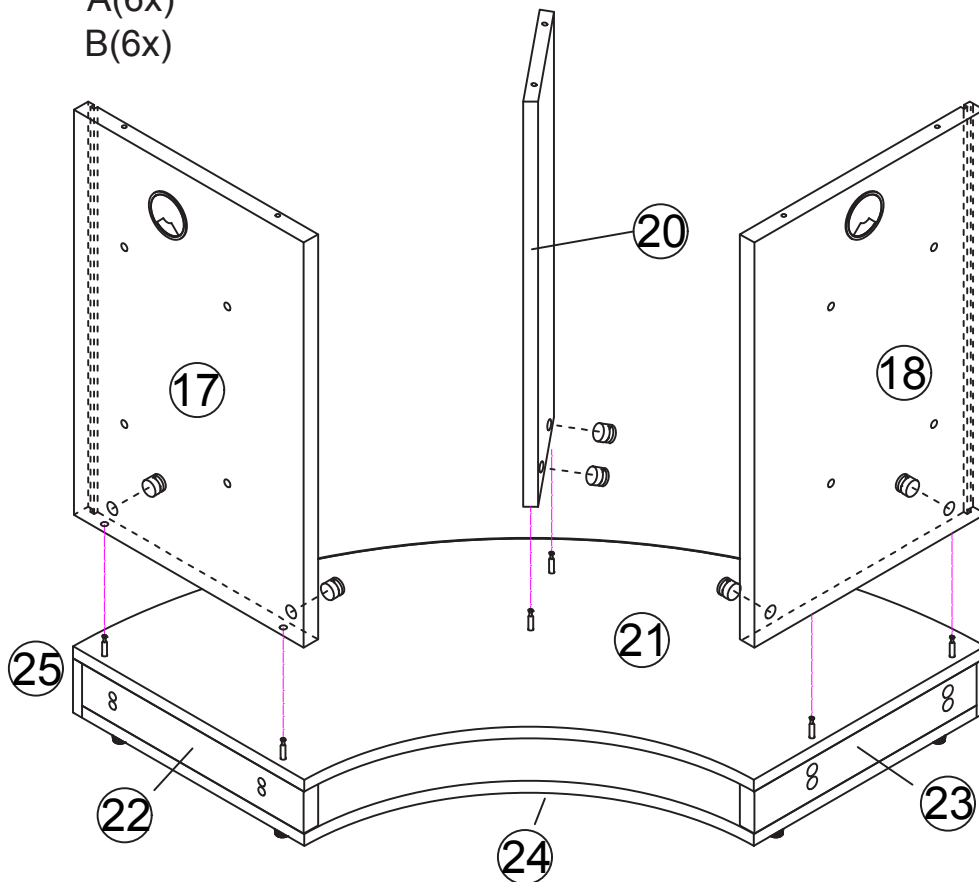




<2> BEND AND SLIDE CURVED BOARD (19)
INTO GROOVES ON (17) AND (18) .

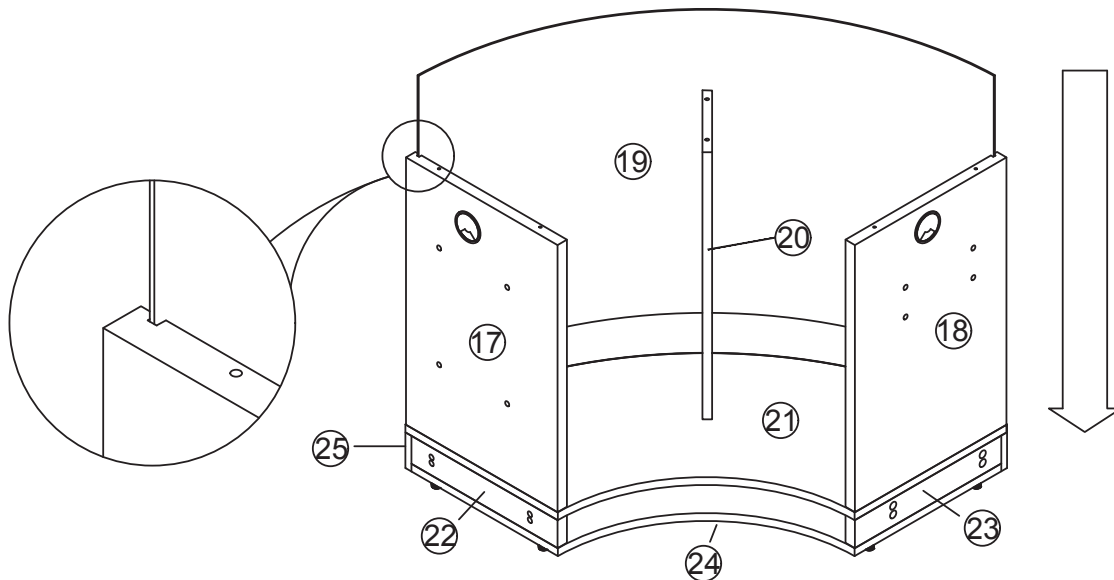

4. INSTALL "A" CAM SCREWS ON UNDERSIDE OF TOP (16). INSTALL "B" KLIX CAMS
ON PANELS (17), (18) AND (20) . CONNECT (16) TO (17), (18) AND (20) USING
INSTALLED CAM SCREWS AND KLIX CAMS. TIGHTEN.

A(6x)

B(6x)

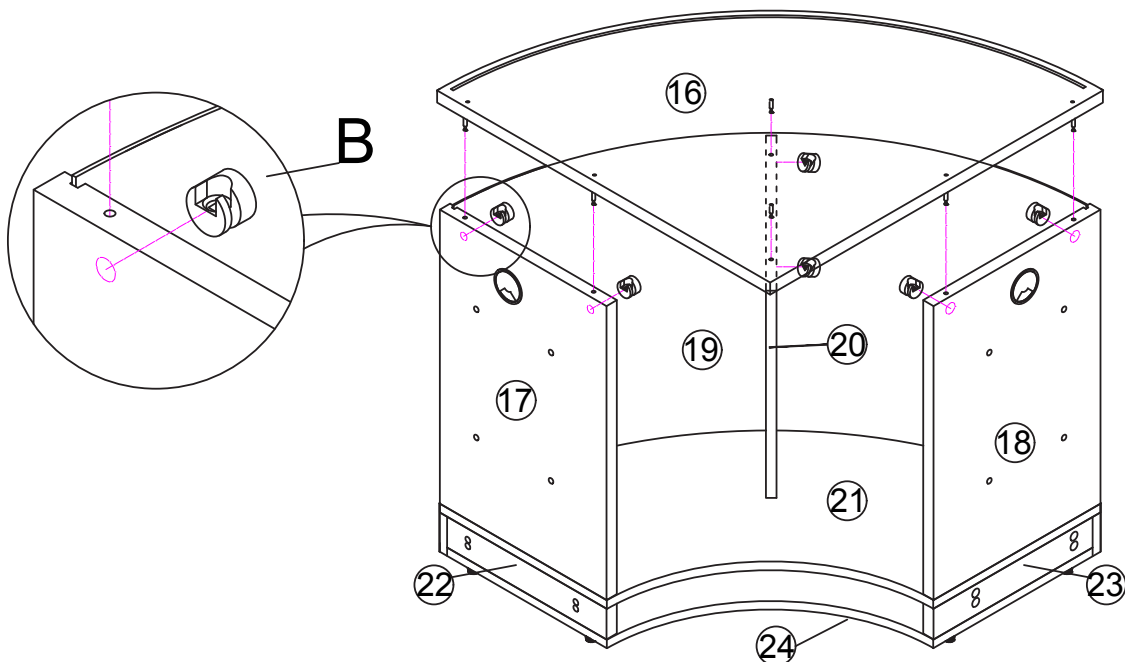




5. INSTALL "A" CAM SCREWS ON PANEL ①⑥, INSTALL "B" KLIX CAMS ON SIDE PANELS ①③ & ①④. THEN CONNECT PANELS ①③ & ①④ TO ①⑥ USING ALREADY INSTALLED "A" CAM SCREWS. TIGHTEN. THEN BEND AND SLIDE CURVED BOARD ①⑤ INTO GROOVES ON ①③ & ①④.

A(4X)


B(4X)

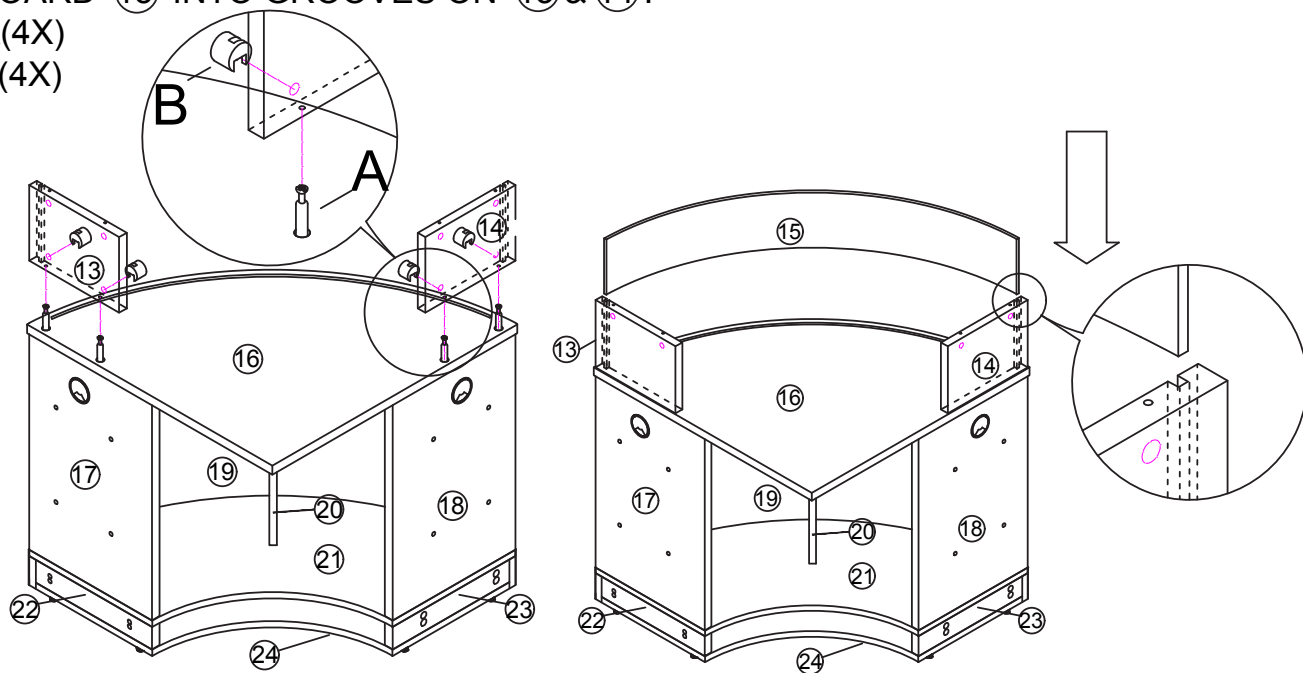

6. INSTALL "A" CAM SCREWS ON THE UNDERSIDE OF COUNTER TOP ①②. INSTALL "B" KLIX CAMS ON SUPPORTS ①③ AND ①④. CONNECT ①② TO ①③ AND ①④ USING INSTALLED CAM SCREWS AND KLIX CAMS. TIGHTEN.

A(4X)

B(4X)

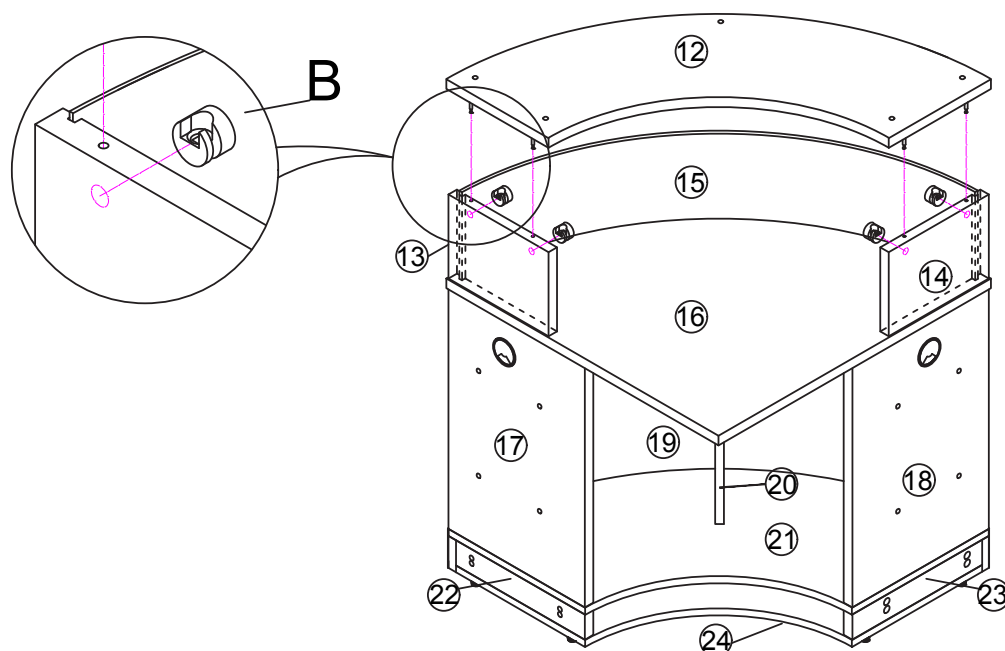





7. ATTACH THE CURVED GLASS COUNTER TOP (27) TO CENTER (12) USING "F1" GLASS SPACERS AND "F2" SCREWS WITH CARE.

F1(5x)


F2(5x)

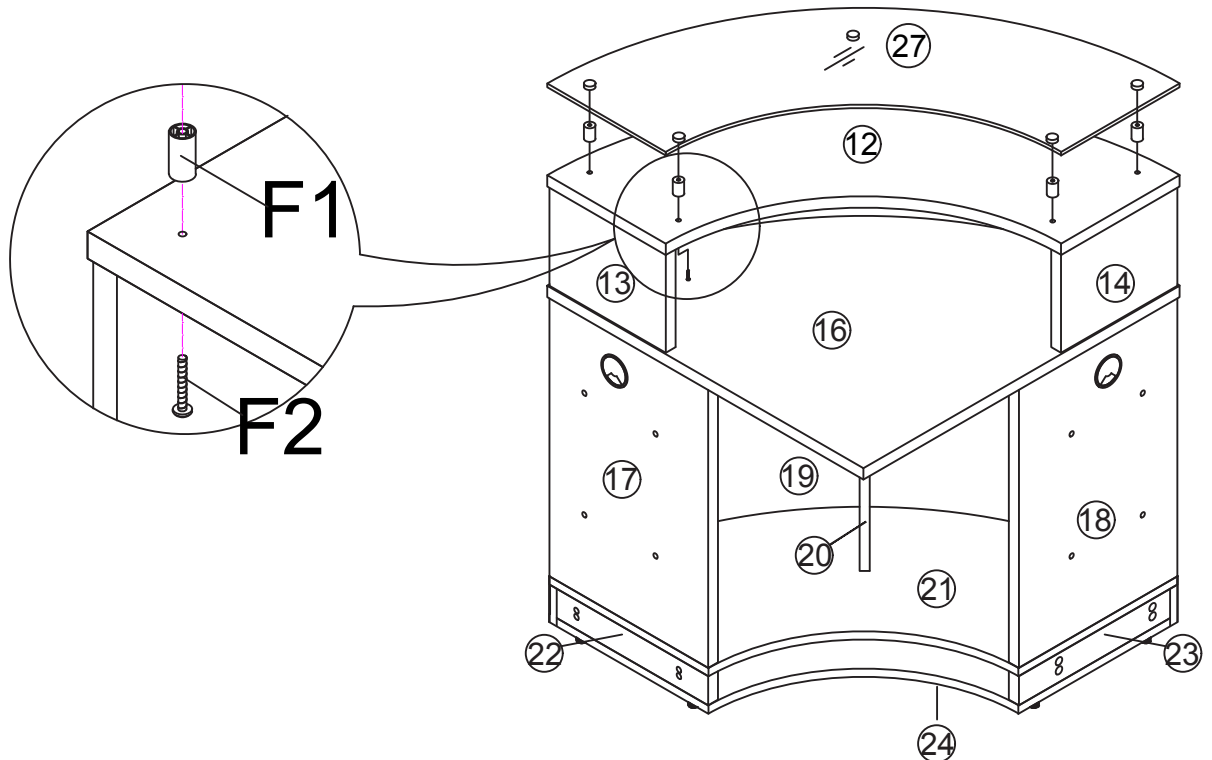

8. USE "C" CAM COVER STICKERS TO COVER ALL EXPOSED KLIX CAMS ON ALL COMPONENTS.
C(28X)

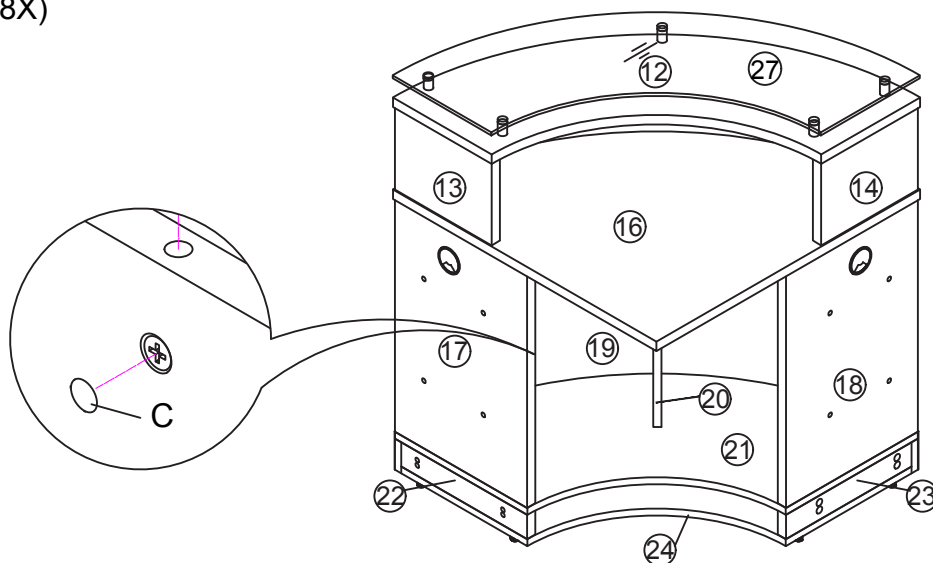

Note: If using on an end, Use "C" cam cover stickers to cover additional holes on 17 and/or 18 .

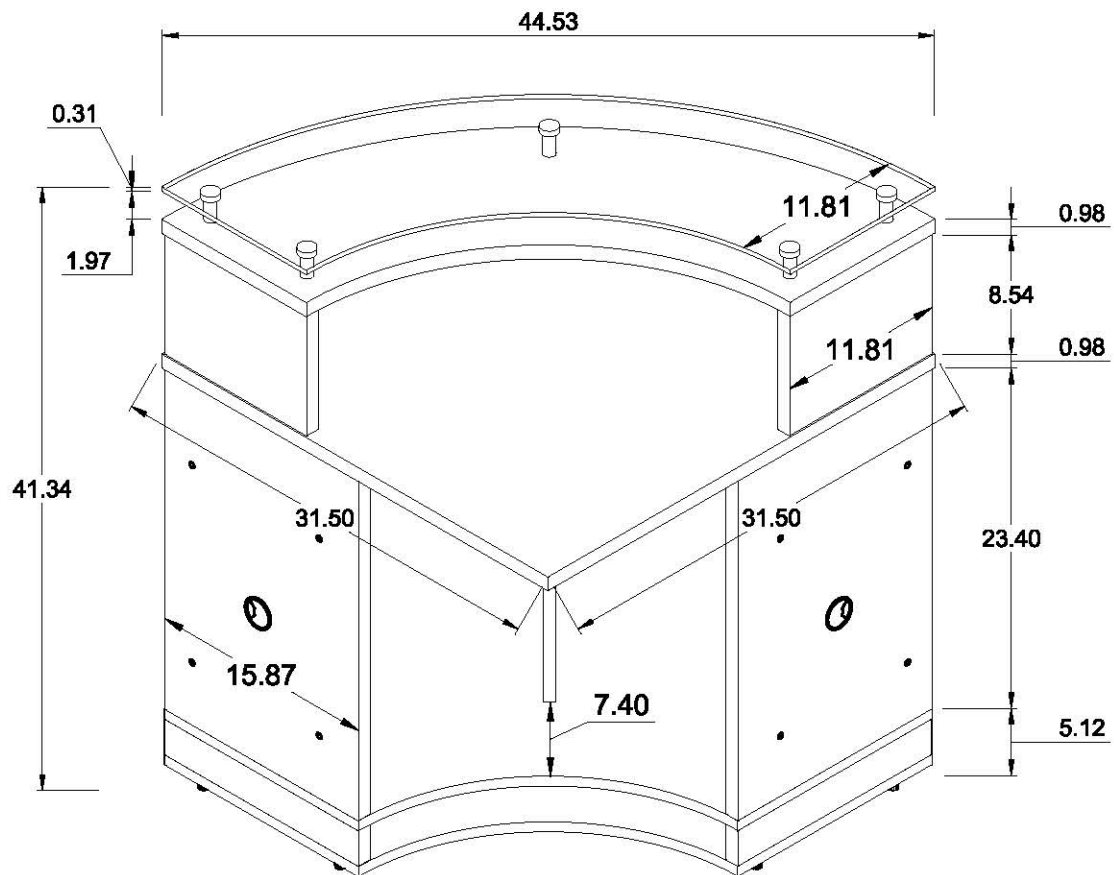

31*31*41"
W800*D800*H1050mm