
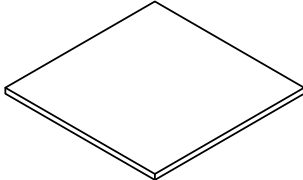
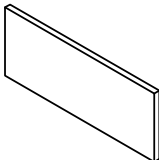
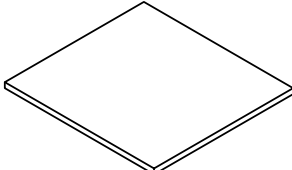
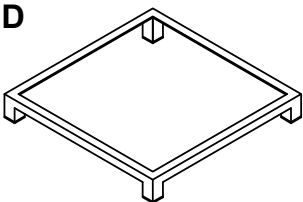
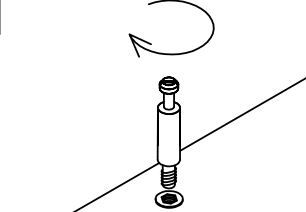
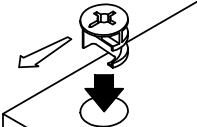


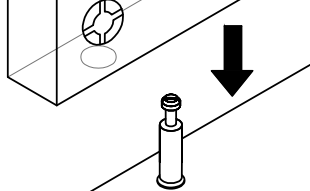


1  CAM LOCK 12 Pcs	2  KLIx CAM 12 Pcs	3  HOUSING CAP (LONG) 12 Pcs	4  SCREW M6 x 15MM 4 Pcs	5  WASHER 4 Pcs	6  M4 x 65 ALLEN-KEY 1 Pc	7  6 HOLE L-BRACKET 4 Pcs	8  SCREW #6 x 5/8" 24 Pcs
--	--	---	---	---	--	--	--

A  TOP PANEL	B  SIDE PANEL x 2	C  BOTTOM PANEL	D  METAL BASE (SOLD SEPERATELY)
---	--	---	---

KLIx CAM INSTRUCTIONS

1  LINE UP CAM LOCK, TURN CLOCKWISE.	2  INSERT THE CAM WITH THE ARROW POINTING TOWARDS THE HOLE IN THE EDGE.	3  INSERT THE CAM LOCK INTO KLIx CAM. TURN KLIx CAM TO LOCK.
---	---	--

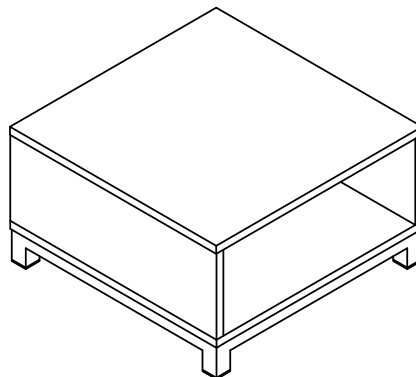


IMPORTANT !!

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.




1

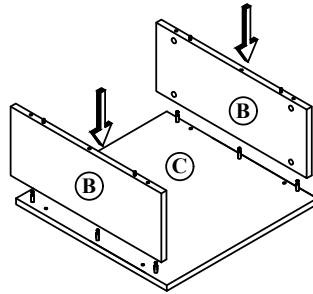


ATTACH SIDE PANELS(B) TO BOTTOM PANEL(C) BY USING CAM LOCK(1) AND KLIX CAM(2).

2

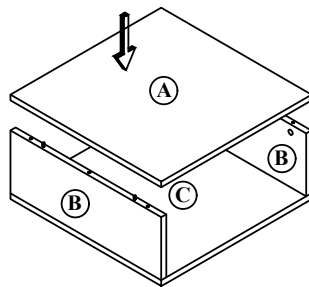


ATTACH TOP PANEL(A) TO SIDE PANELS(B) BY USING CAM LOCK(1) AND KLIX CAM(2).

3

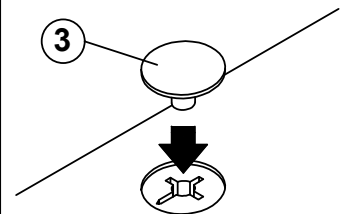

ATTACH HOUSING CAP (3) TO ALL KLIX CAM(2) BY PUSHING NECK THROUGH CENTER OF CAM.

4

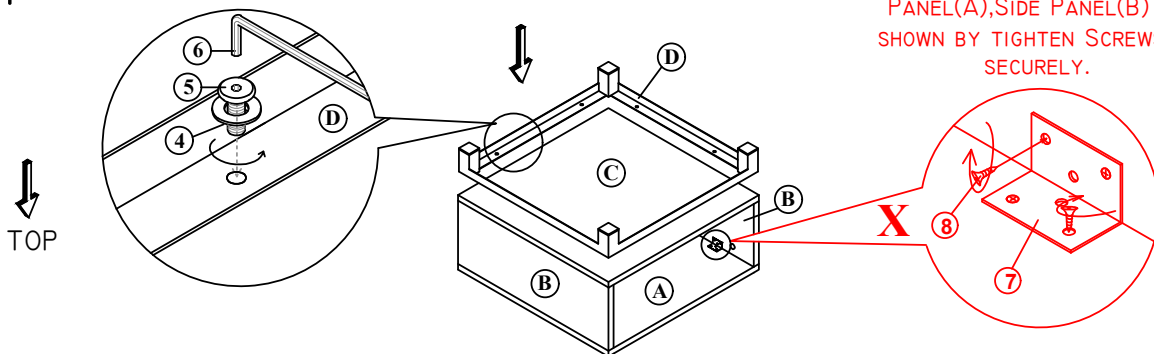

ATTACH L-BRACKET(7) TO TOP PANEL(A),SIDE PANEL(B) AS SHOWN BY TIGHTEN SCREWS(8) SECURELY.

TURN END TABLE FACE DOWN . ATTACH METAL BASE (D) TO FIXED SHELF(C) AS SHOWN. TIGHTEN SCREWS(4) SECURELY.