



INSTALLATION OF TIE-BAR TO STRENGTHEN 2 PANELS TOGETHER


SOLERO SYSTEMS

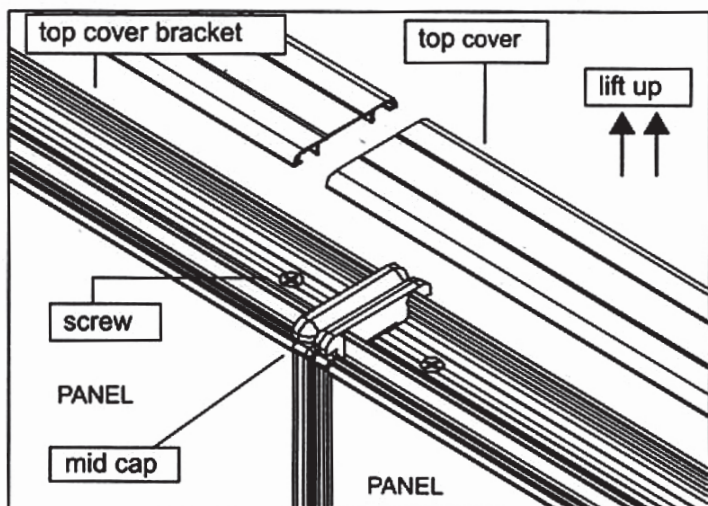


Step 1 : Lift up the top cover and unscrew the 2 screws from the top cover bracket next to the mid cap.

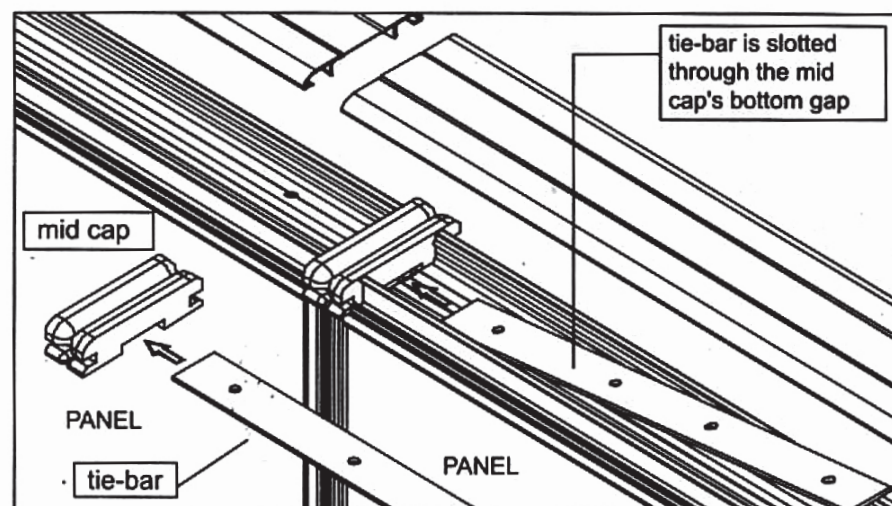

Step 2 : Slot in the tie-bar through the bottom gap of the mid cap.

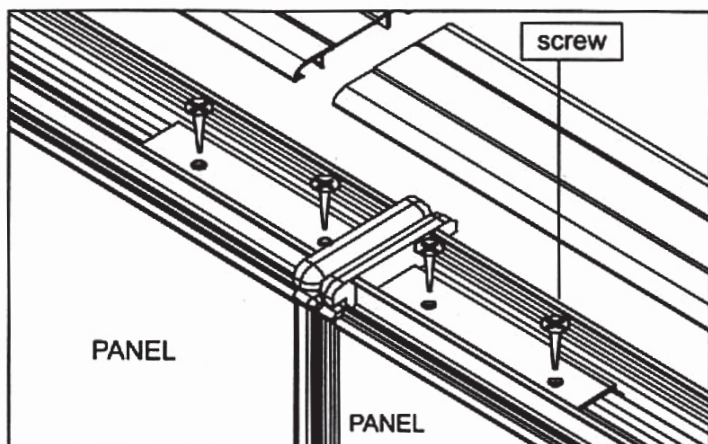

Step 3 : After the tie-bar is securely placed, please drill 4 holes through the top cover bracket to screw in or just use self drilling screw for securing the tie-bar.

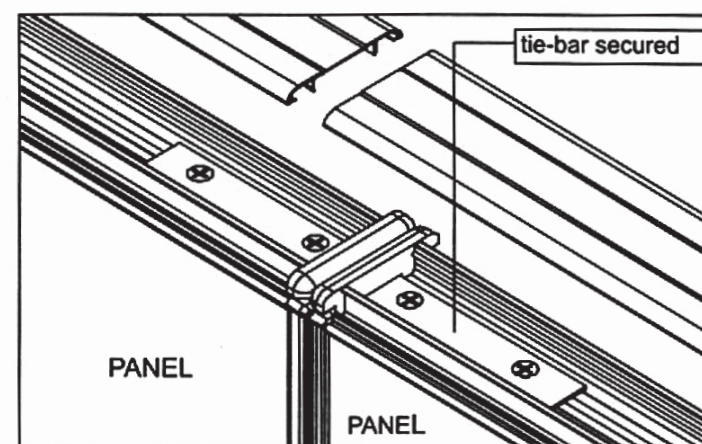

Step 4 : Once all the 4 screws are secured then fix back the aluminium top cover by snap fit.