



INSTALLATION OF WALL MOUNT TO WALL

SOLERO SYSTEMS

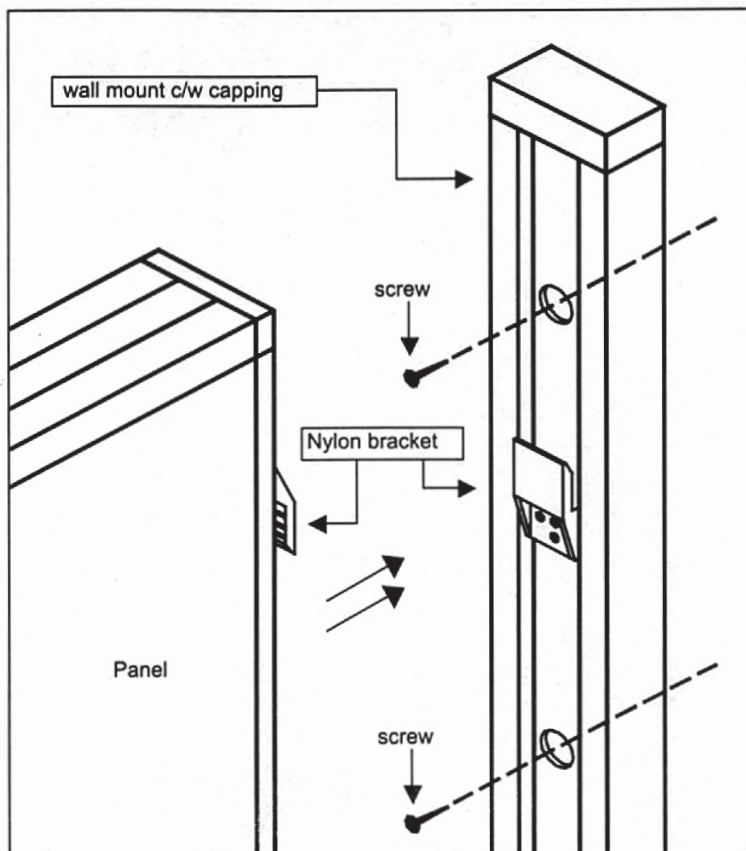

STEP 1

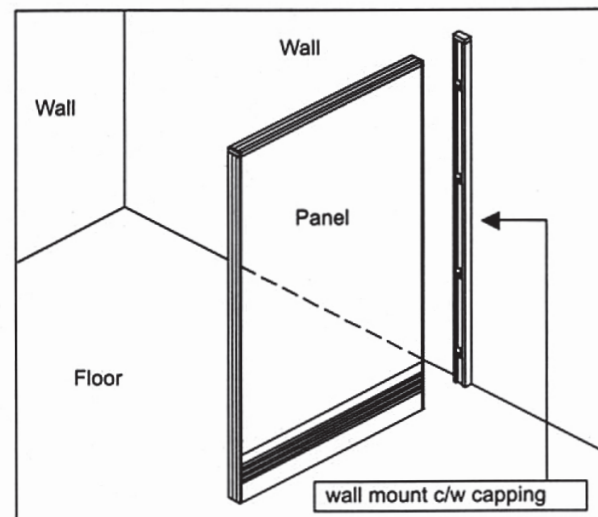


STEP 2

INSTRUCTIONS :


- Step 1 :** Install the wall mount with nylon bracket facing up, to the wall first with screw as shown above.
- Step 2 :** After installing the wall mount to the wall, then install the panel to the wall mount by lifting up the panel with the nylon bracket facing down to snap fit onto the wall mount (please refer to connecting pole to panel's installation manual for any further details)

INSTALLATION OF TIE-BAR TO STRENGTHEN 2 PANELS TOGETHER


SOLERO SYSTEMS

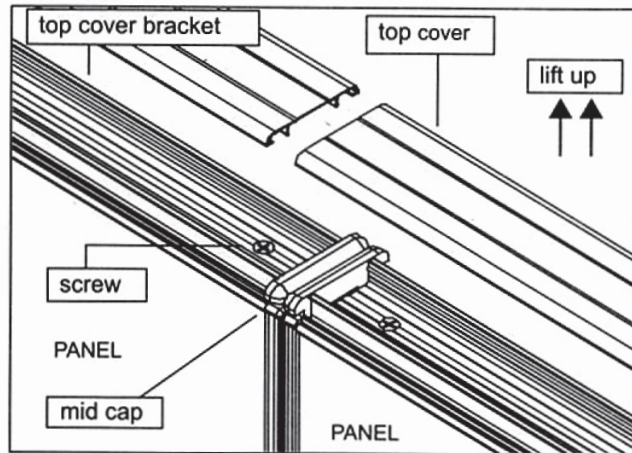


Step 1 : Lift up the top cover and unscrew the 2 screws from the top cover bracket next to the mid cap.

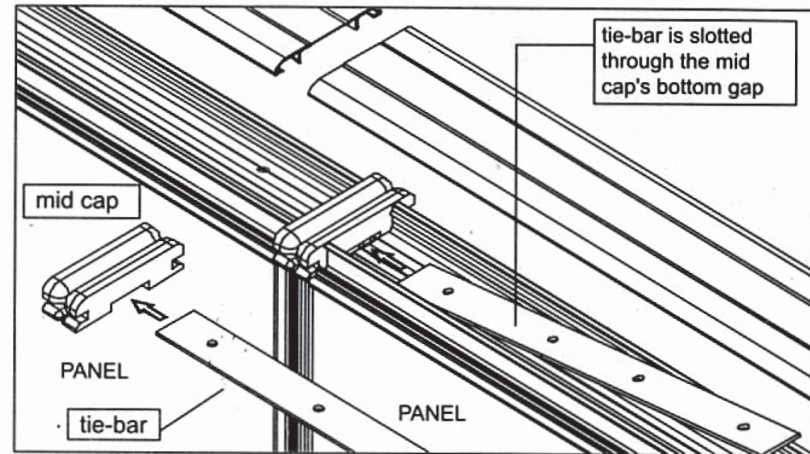

Step 2 : Slot in the tie-bar through the bottom gap of the mid cap.

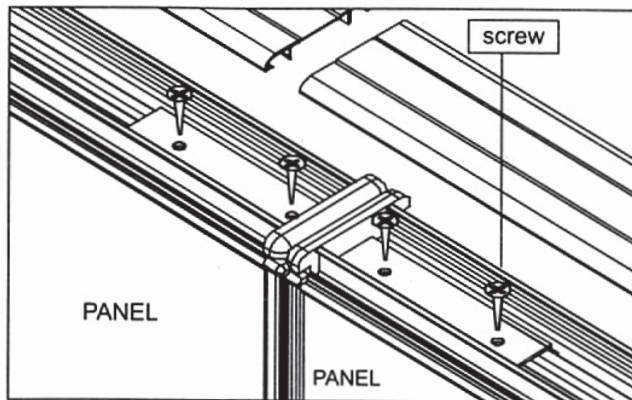

Step 3 : After the tie-bar is securely placed, please drill 4 holes through the top cover bracket to screw in or just use self drilling screw for securing the tie-bar.

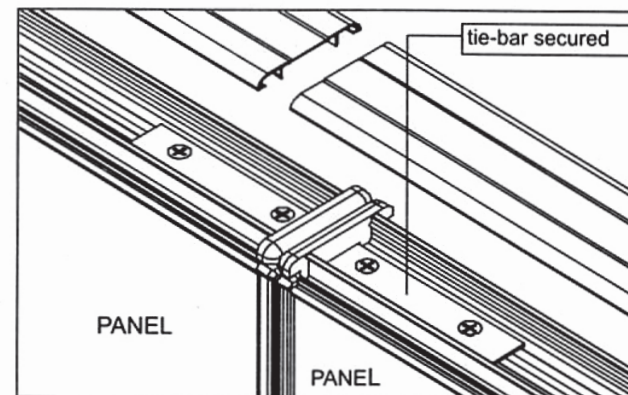

Step 4 : Once all the 4 screws are secured then fix back the aluminium top cover by snap fit.