


OfficeSource ASSEMBLY INSTRUCTIONS

IMPORTANT NOTICE: HARDWARE PACKAGE IS ATTACHED ON THE BOTTOM OF SEAT CUSHION.

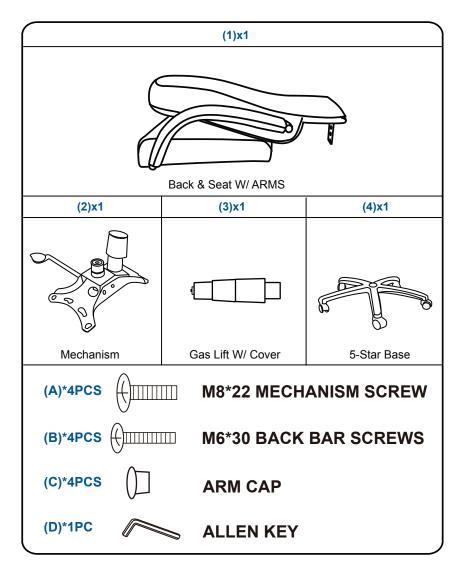

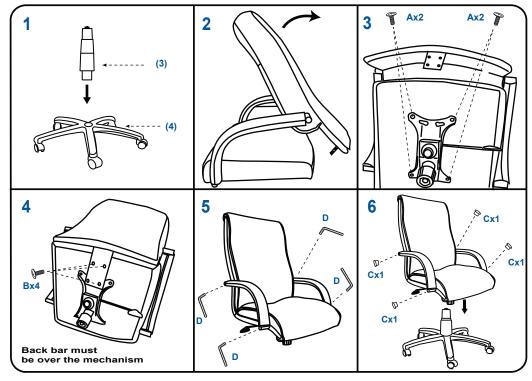

Note: Please tighten all arm screws using allen key before step 6

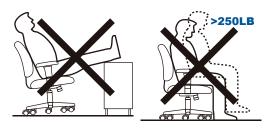

Insert and loosely tighten all screws. When assembly is completed, fully tighten all screws before using. This chair is only intended for sitting. Any other use will void the warranty.

MODEL: 1265 & 1245