

VAPORBOOT PLUS

p/n: VBPBT

package contents: 12-each VaporBoot Plus Pipe Boots

INSTALLATION INSTRUCTIONS

1
STEP

Check your pipe size and cut the hole size required in the prefabricated VaporBoot Plus Boot. The formed steps are for 1", 2", 3" and 4" PVC pipe or IPS size. This will allow the pipe to fit tightly in the hole and the VaporSeal™ Tap (sold separately) to stretch tightly around the pipe.



2
STEP

Turn the boot over and apply 2-sided Raven Butyl Seal Tape (sold separately) to the perimeter of the bottom side. Once the entire perimeter is taped; remove all the release liner.




3
STEP

Force the VaporBoot Plus Boot over the penetration and apply pressure to the taped area around the entire perimeter to secure in place.





4
STEP

Peel off the paper release liner and tape the entire perimeter with VaporSeal™ Tape.

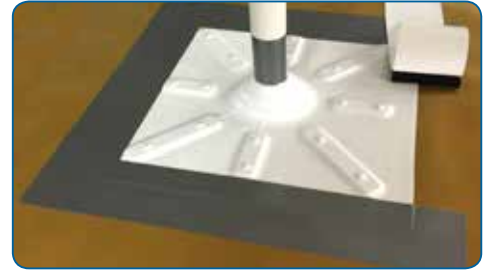

5
STEP

To finish boot installation take VaporSeal™ Tape and wrap tightly around to seal the boot to the penetration.

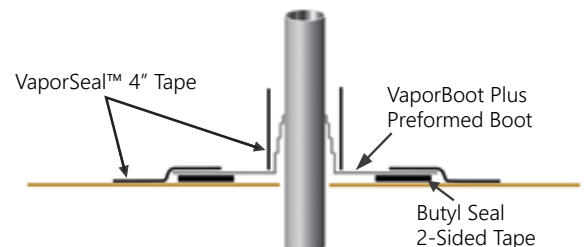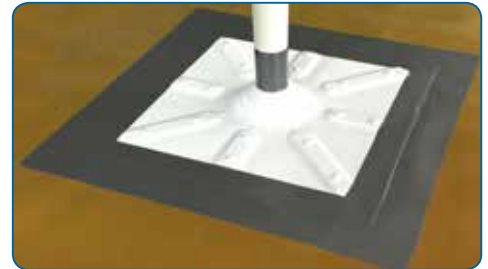

Note: To the best of our knowledge, unless otherwise stated, these are typical property values and are intended as guides only, not as specification limits. Chemical resistance, odor transmission, longevity as well as other performance criteria is not implied or given and actual testing must be performed for applicability in specific applications and/or conditions. RAVEN INDUSTRIES MAKES NO WARRANTIES AS TO THE FITNESS FOR A SPECIFIC USE OR MERCHANTABILITY OF PRODUCTS REFERRED TO, no guarantee of satisfactory results from reliance upon contained information or recommendations and disclaims all liability for resulting loss or damage. Limited Warranty available at www.RavenEFD.com

RAVEN

ENGINEERED FILMS

P.O. Box 5107 Sioux Falls, SD 57117-5107
Ph: +1 (605) 335-0174 • TF: +1 (800) 635-3456

efdsales@ravenind.com
www.ravenefd.com

020416 EFD 1480