

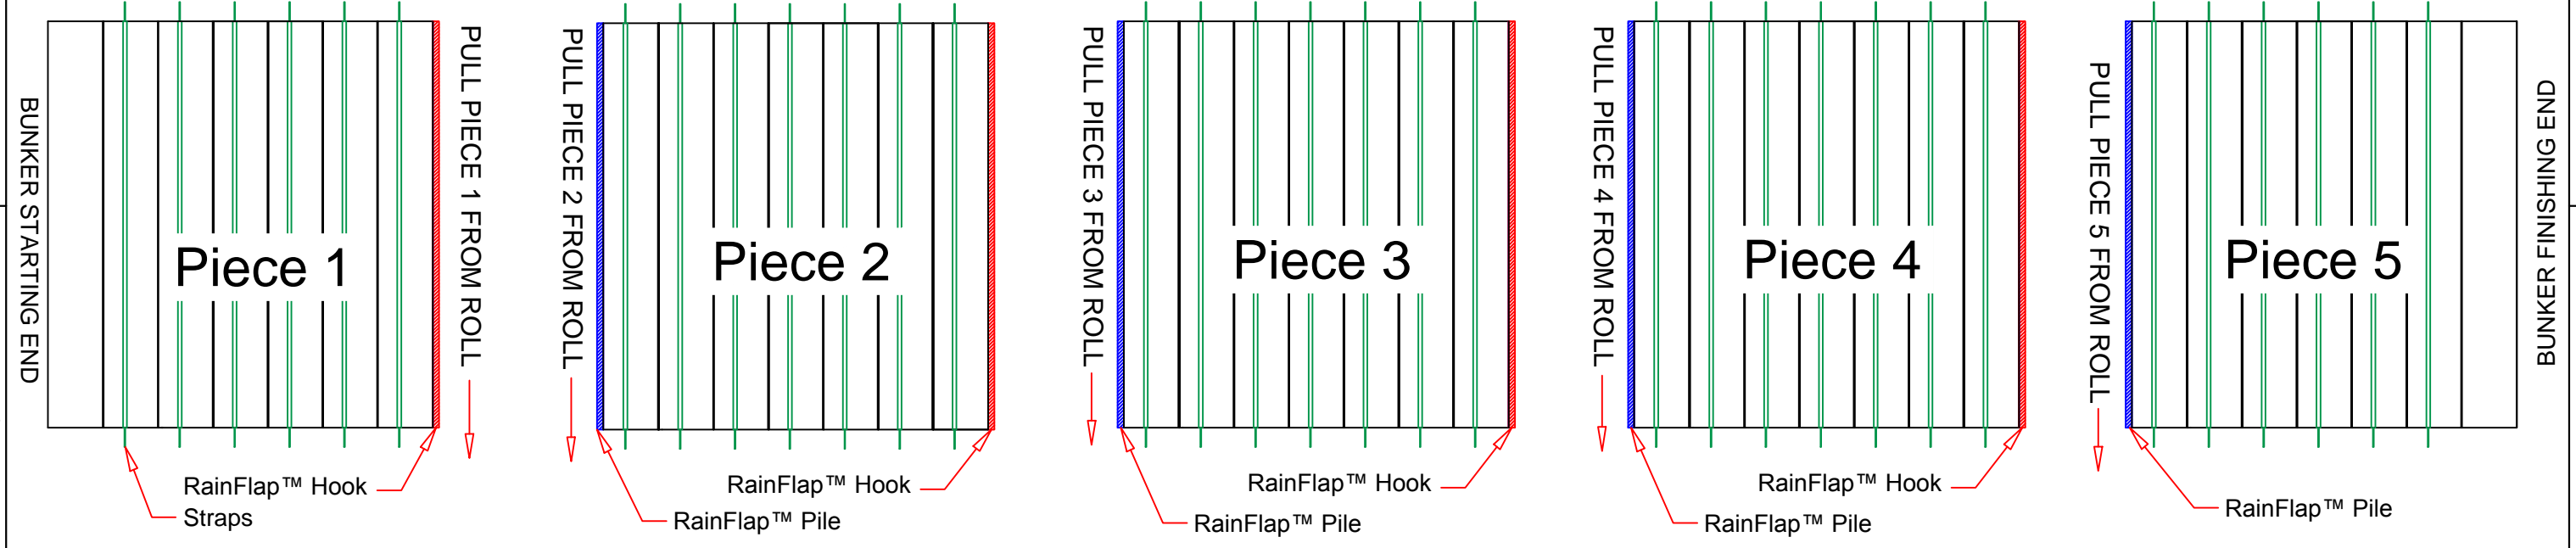



REVISIONS			
LTR	ECO	DATE	APPROVED
A		1/19/2016	RWW
B		3/30/2016	RWW

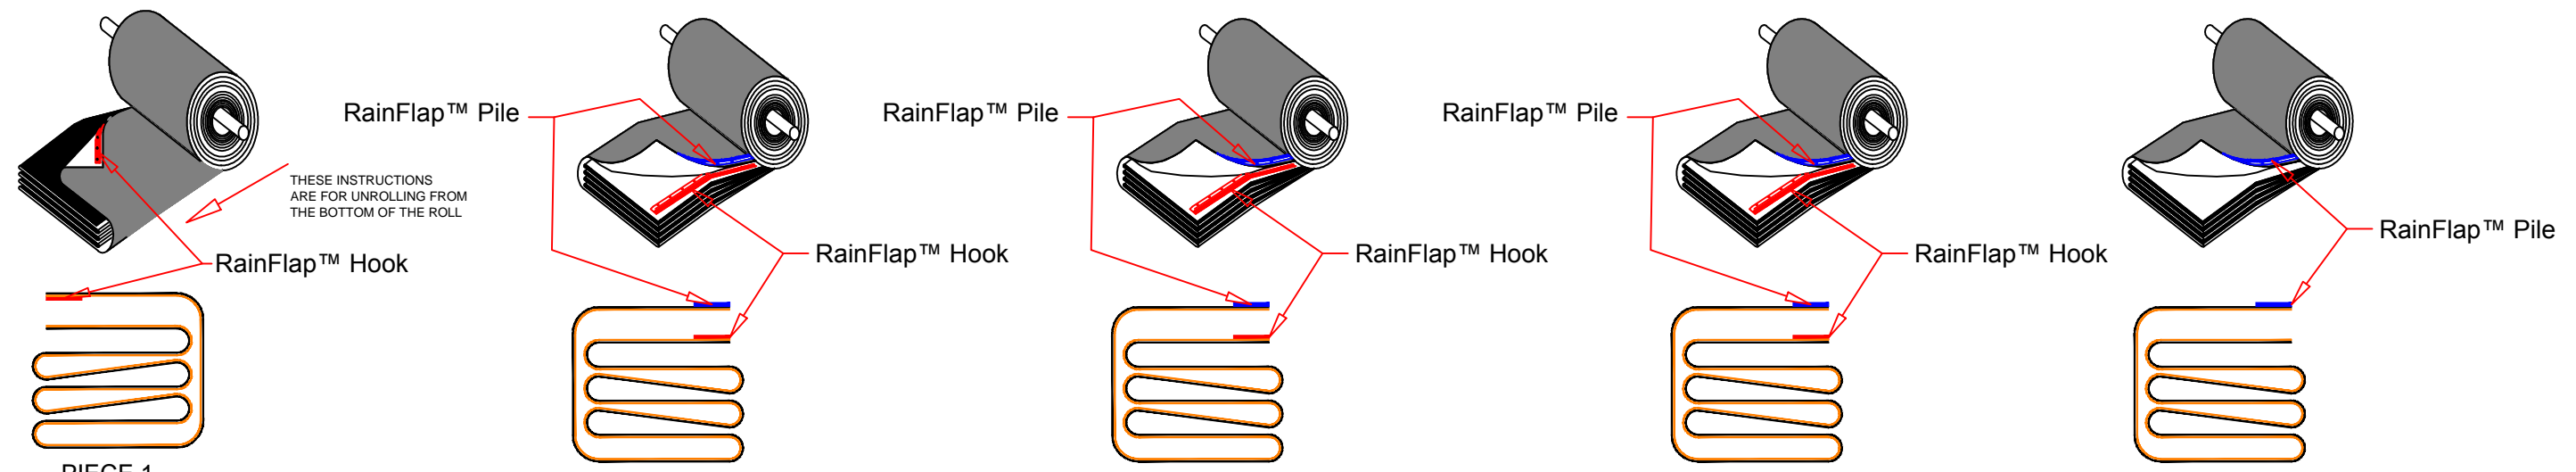

DEPLOYMENT INSTRUCTIONS;

1. PULL PIECE 1 & 2 ACROSS THE GRAIN PILE AT ABOUT 1/5 OF THE LENGTH FROM THE STARTING END
 2. FLIP TOP LAYER OF PIECE 1 AND PIECE 2 THEN FASTEN THE RAINFLAPS™ FROM EACH PIECE
 3. WHILE HOLDING PIECE 2 PULL PIECE 1 TO THE STARTING END OF THE BUNKER
 4. UNFOLD PIECE 2
 5. PULL PIECE 3 ACROSS THE GRAIN PILE, ATTACH ITS RAINFLAP™ PILE TO PIECE 2'S RAINFLAP™ HOOK
 6. UNFOLD PIECE 3
 7. PULL PIECE 4 ACROSS THE GRAIN PILE, ATTACH ITS RAINFLAP™ PILE TO PIECE 3'S RAINFLAP™ HOOK
 8. UNFOLD PIECE 4
 9. PULL PIECE 5 ACROSS THE GRAIN PILE, ATTACH ITS RAINFLAP™ PILE TO PIECE 4'S RAINFLAP™ HOOK
 10. UNFOLD PIECE 5 TO THE FINISHING END OF THE BUNKER
- FOR FURTHER INSTRUCTIONS VISIT ravenefd.com/installation

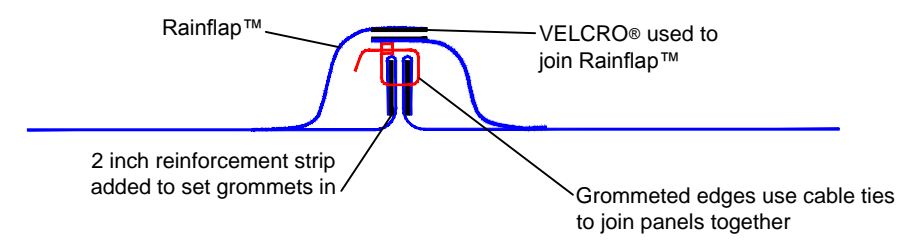

		COVER TYPE	
		OVAL 5 PIECE with RainFlap™ and Straps Flip Folded	
RAVEN ENGINEERED FILMS PO BOX 5107 SIOUX FALLS, SD 57117-5107 +1 (800) 635-3456		SIZE	SALES ORDER
NAME DATE DRAWN RWW 1/19/2016		B	1
DO NOT SCALE DRAWING		DRAWING NUMBER	
		O5RSFS	
PROPRIETARY AND CONFIDENTIAL INFORMATION OF RAVEN INDUSTRIES INC. THIS DRAWING AND THE INFORMATION HEREON ARE RAVEN INDUSTRIES INC. PROPERTY AND MAY BE USED BY OTHERS ONLY AS AUTHORIZED IN WRITING BY RAVEN INDUSTRIES INC. - ALL RIGHTS RESERVED UNDER THE COPYRIGHT LAWS.			