## **INSTALLATION INSTRUCTIONS**




## PT50-59736 INSTALLATION TOOL

FOR USE WITH PB50-36321 & PB50-36322 PIVOT BUSHINGS

## Popular on Hendrickson Intraax/Vantraax Suspensions

- 1. Lubricate ACME threaded bolt and thrust bearing with synthetic grease before each use
- 2. ACME bolt requires a 1 5/8" socket
- 3. Use of high torque drill is recommended over impact gun
- 4. Set screws are to be used as alignment pins for the installation and/or removal of the OEM rubber pivot bushings
- 5. Be sure liner is placed in the ID of the pivot bushing to insure the bushing remains square throughout the installation

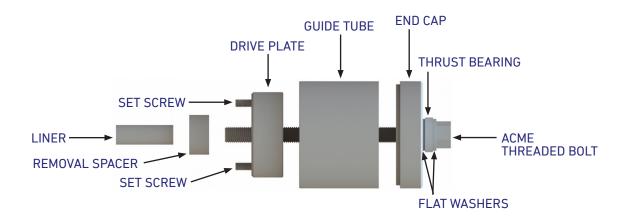

## **KIT CONTAINS:**

- (1) ACME Threaded Bolt
- (1) Thrust Bearing
- (2) Flat Washers
- (2) Set Screws
- (1) End Cap
- (1) Guide Tube
- (1) Drive Plate
- (1) Removal Spacer
- (1) Liner



DC00-10022

POLYURETHANE PARTS | SOLUTIONS FOR HEAVY TRUCKS

ATROBUSHING.COM ©2017 Atro Engineered Systems, Inc. 6 Bolte Lane St. Clair, Missouri 63077 | U.S.A. (800) 325.6114 | Fax (866) 920.2005

ATROBUSHING.COM | 1.800.325.6114