INSTALLATION INSTRUCTIONS




PB50-26648 PIVOT BUSHING

- · For use in Hendrickson Primaax & Firemaax ONLY.
- Do NOT use on Hendrickson Maxair or Mack Twisted Sister
- Used in PB50-26632 Pivot Bushing Kit

INSTRUCTIONS:

- 1. Install two halves of polyurethane bushing into beam as shown below.
- 2. Install inner sleeve/low friction sleeve assembly into polyurethane bushing as an entire unit. This can be done two ways:
 - · using a press in conjunction with a flat plate to press both sleeves in at once
 - using a long 1" or 1 1/8" bolt and nut with two large flat washers (or plates with a bolt hole through them) to draw both sleeves at once
- 3. Re-install beam according to OEM procedures and guidelines.

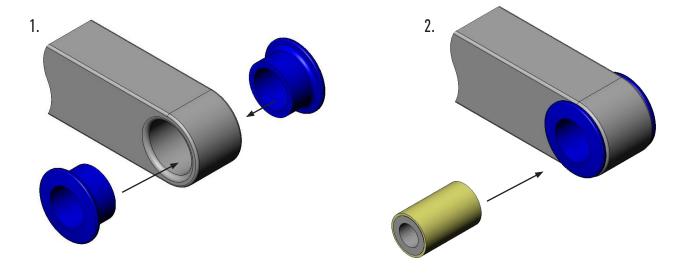



POLYURETHANE PARTS | SOLUTIONS FOR HEAVY TRUCKS

ATROBUSHING.COM ©2017 Atro Engineered Systems, Inc. 6 Bolte Lane St. Clair, Missouri 63077 | U.S.A. (800) 325.6114 | Fax (866) 920.2005

ATROBUSHING.COM | 1.800.325.6114