




## Rear Engine Mount Illustration Instructions for Kit Number KT59-62001

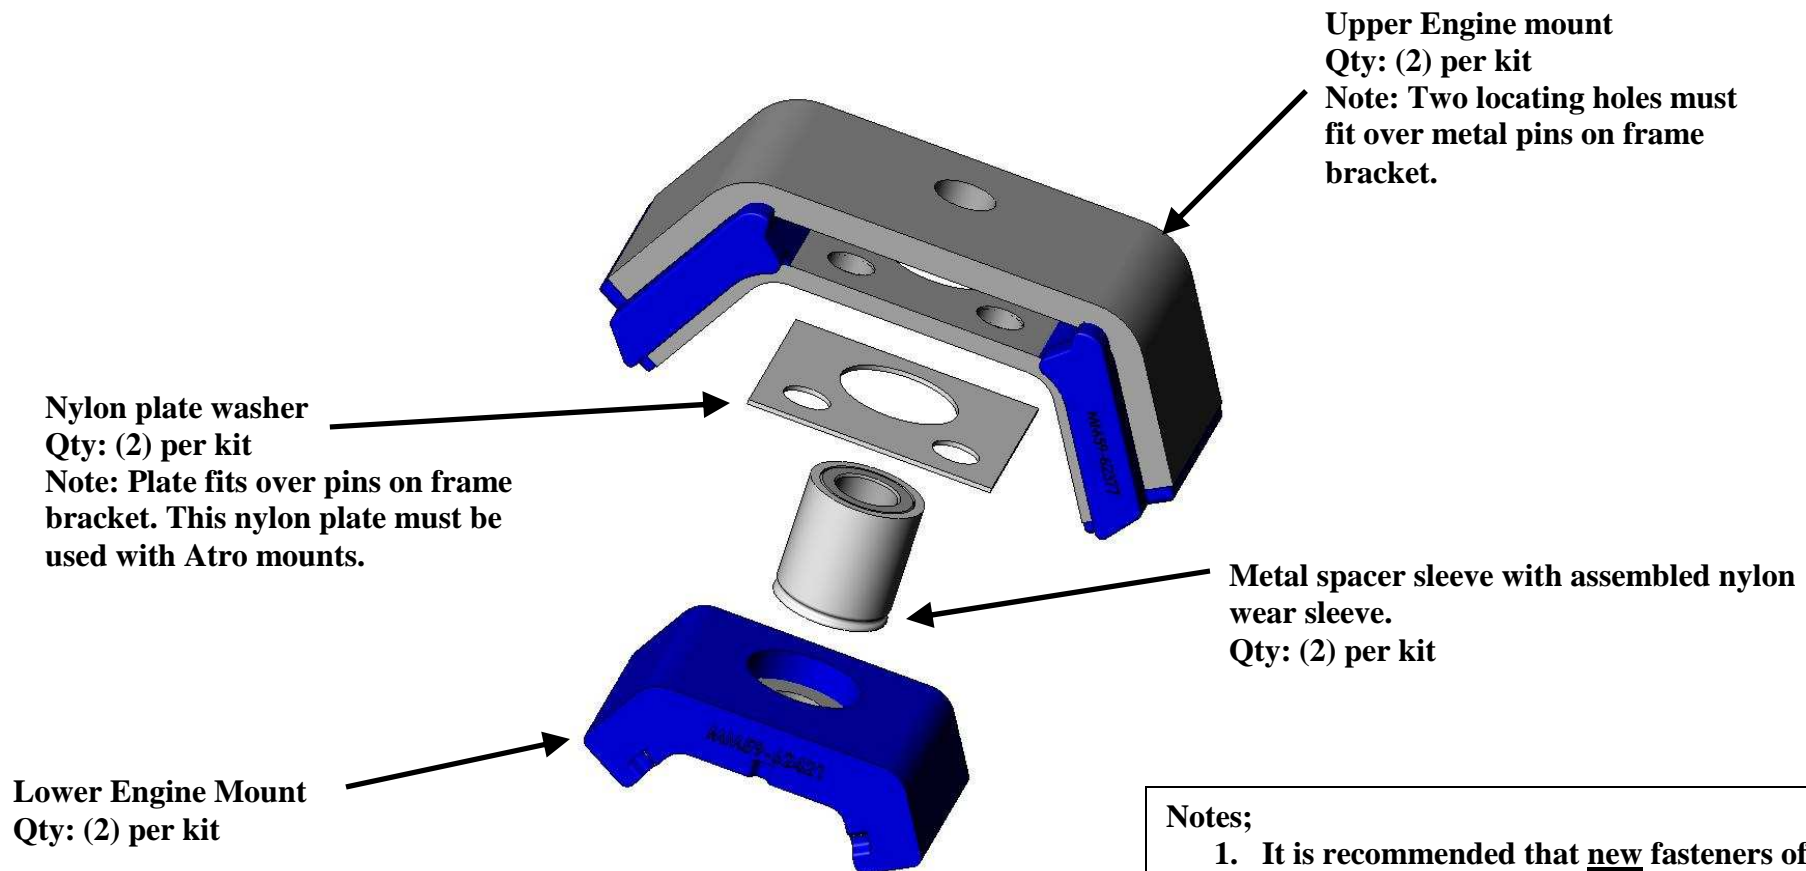

### Notes;

1. It is recommended that new fasteners of same tensile strength be used when replacing mounts.
2. Engraved Atro part numbers on upper and lower mounts must be visible from same side.
3. Do not mix rubber mounts of any combination with Atro polyurethane mounts.
4. Torque all fasteners to factory specifications.