




## PT50-59736

INSTALLATION TOOL FOR THE PB50-36321 PIVOT BUSHING

**Tool Includes:**

- (1) ACME Threaded Bolt
- (1) Thrust Bearing
- (2) Flat Washers
- (2) Set Screws
- (1) End Cap
- (1) Guide Tube
- (1) Drive Plate
- (1) Removal Spacer
- (1) Liner

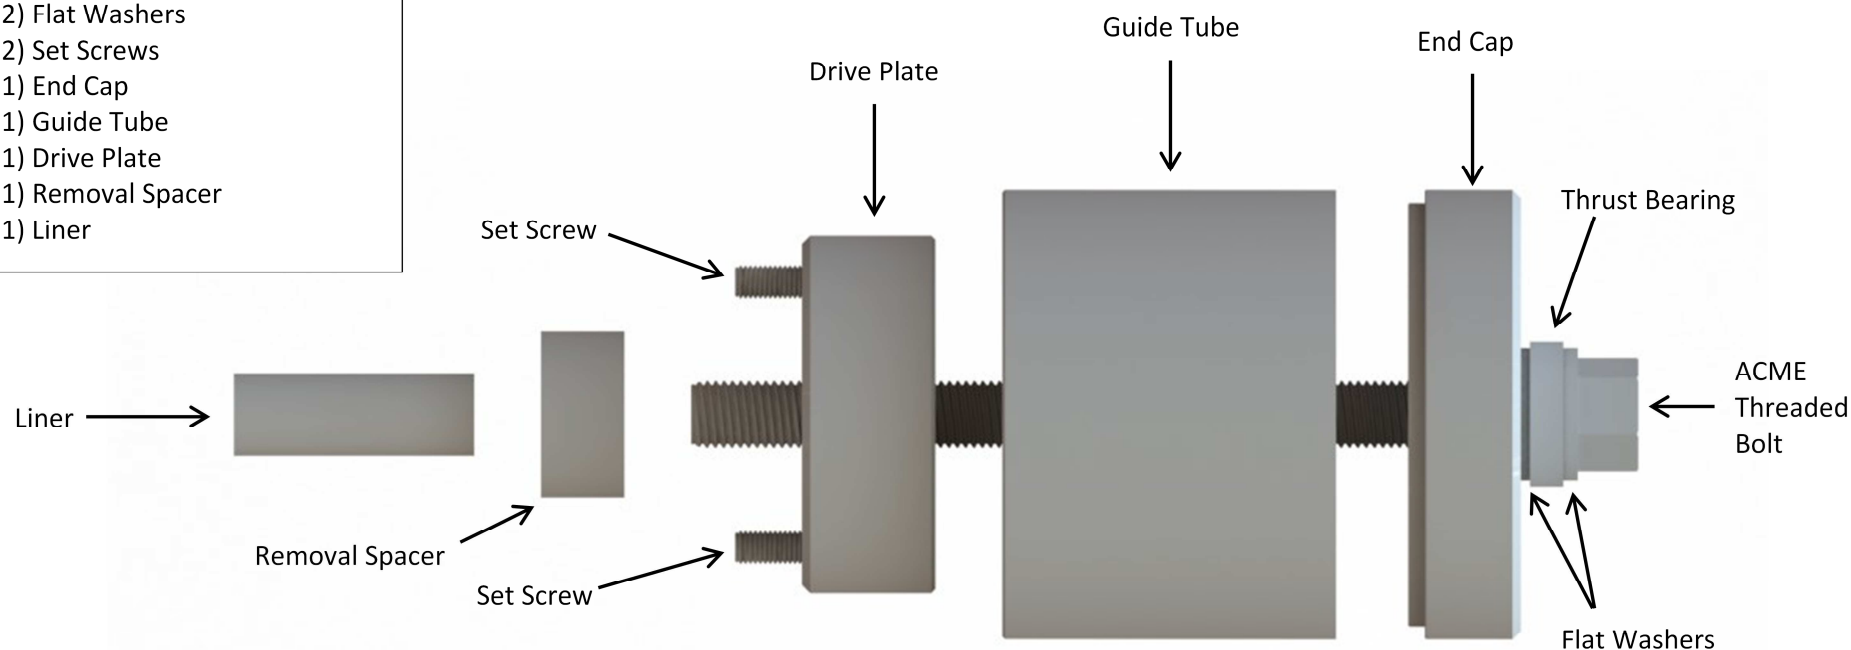

**Notes:**

- Lubricate ACME threaded bolt and thrust bearing before each use
- ACME bolt requires a 1 5/8" socket
- Set screws are to be used as alignment pins for the installation and/or removal of the OEM rubber pivot bushings
- Be sure liner is placed in the ID of the pivot bushing to insure the bushing remains square throughout the installation