


## DECOPAC - 29226 CANDLE RACK-BLACK FLOOR SPINNER HALF


### FLOOR SPINNER

1. SET BASE ON FLOOR. PROVIDED BUMPERS ARE OPTIONAL TO USE IF LEVELNESS IS A PROBLEM.
2. PLACE THE SWAGED TUBE INTO THE BASE TUBE. INSTALL AND TIGHTEN (2) THUMBSCREW INTO THE BASE TUBE TO SECURE.
3. INSERT THE COTTER PIN INTO THE THRU HOLE IN THE UPPER NON SWAGED TUBE. BEND ONE LEG OF THE COTTER PIN SO IT WILL NOT PULL OUT OF THE HOLE.
4. SLIDE THE WASHER DOWN THE TUBE SO IT RESTS ON THE COTTER PIN. SLIDE THE BEARING DOWN THE TUBE UNTIL IT RESTS ON THE WASHER.
5. SLIDE THE UPPER NON SWAGED TUBE ON THE LOWER SWAGED TUBE.

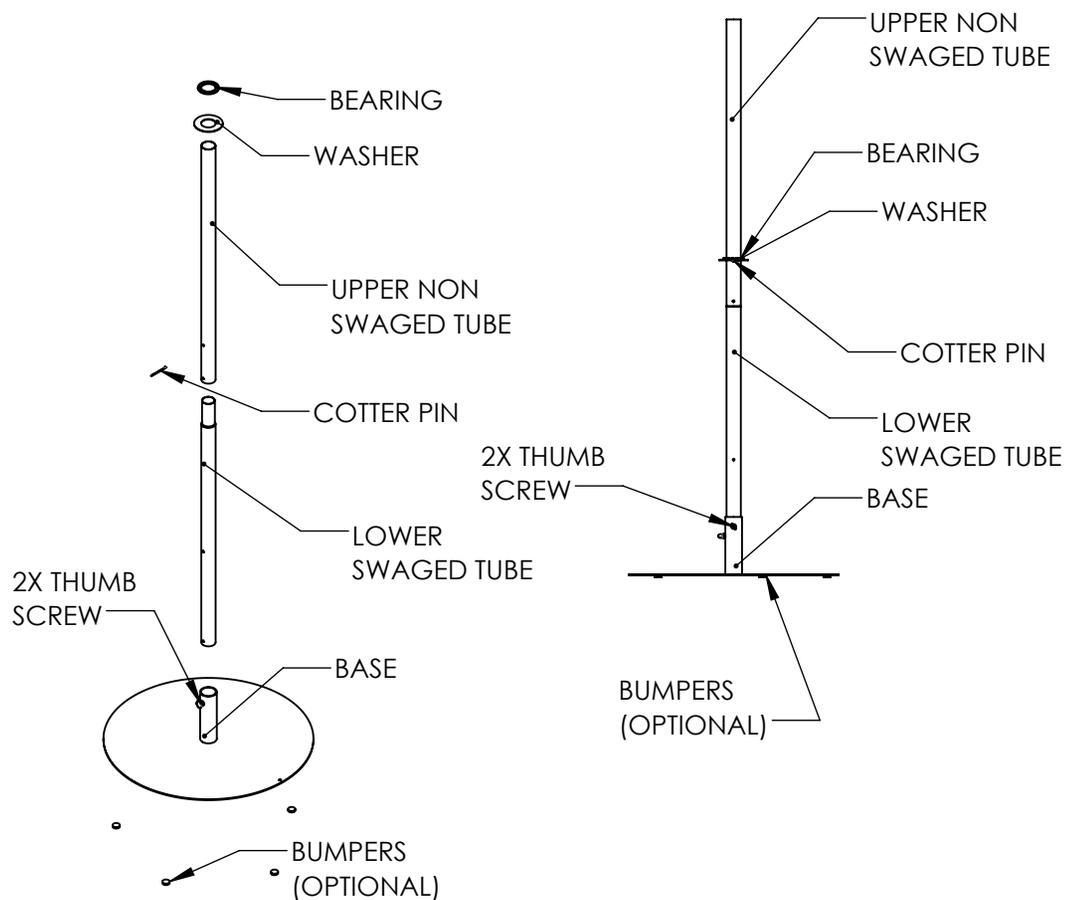


### OPTIONAL COUNTERTOP SPINNER

1. SET BASE ON COUNTER. PROVIDED BUMPERS ARE OPTIONAL TO USE IF LEVELNESS IS A PROBLEM.
2. PLACE THE UPPER NON SWAGED TUBE INTO THE BASE TUBE. INSTALL AND TIGHTEN (2) THUMBSCREW INTO THE BASE TUBE TO SECURE.
3. SLIDE THE WASHER DOWN THE TUBE SO IT RESTS ON THE BASE TUBE. SLIDE THE BEARING DOWN THE TUBE UNTIL IT RESTS ON THE WASHER.

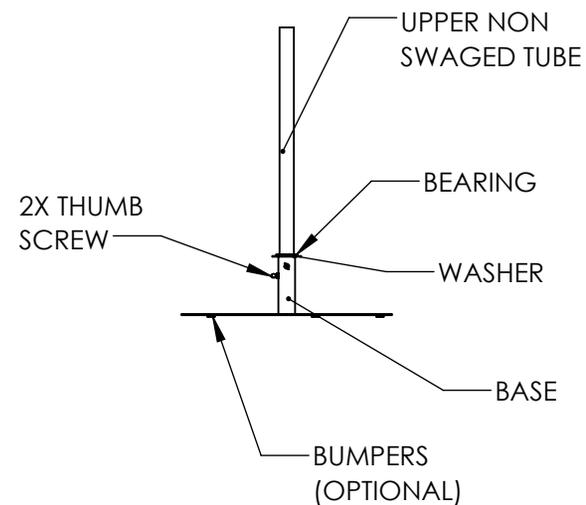

DECOPAC - 29226 CANDLE RACK-BLACK FLOOR SPINNER HALF

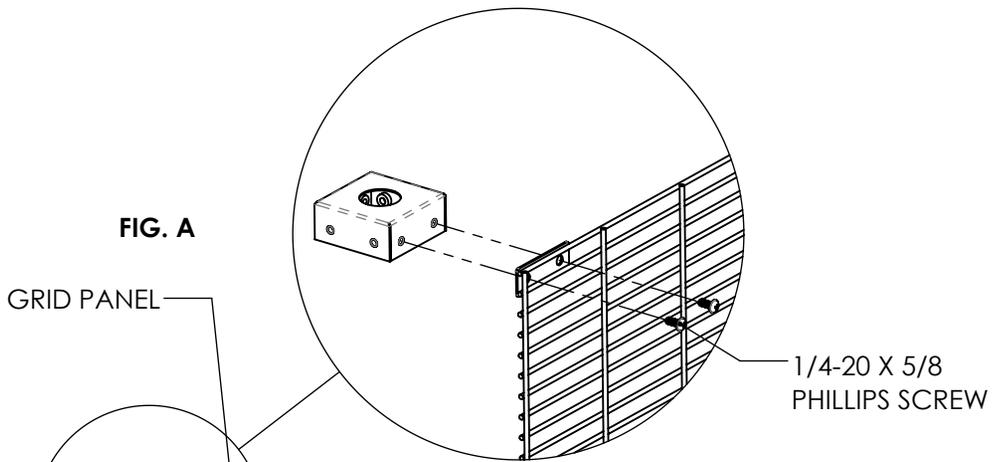


GRID PANEL

FIG. A

1/4-20 X 5/8  
PHILLIPS SCREW

1. ATTACH THE CENTER HUBS TO ONE GRID PANEL AS SHOWN IN FIG. A.
2. ATTACH THE REMAINING GRIDS ONE AT A TIME IN A PINWHEEL FASHION AS SHOWN IN FIG. B.
3. SLIDE GRID ASSEMBLY ONTO THE POLE ASSEMBLY UNTIL IT RESTS ON THE BEARING. SLIDE ON (4) PLASTIC SIGN HOLDERS TO THE TOP OF THE GRID WIRES AS SHOWN IN FIG. C.

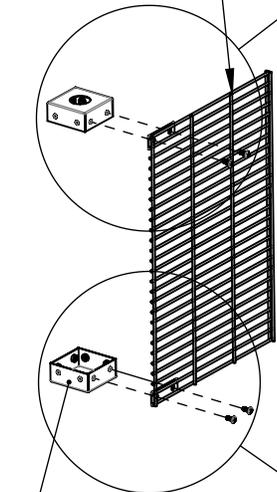

2X CENTER HUB

NOTE ORIENTATION  
OF BOTTOM HUB

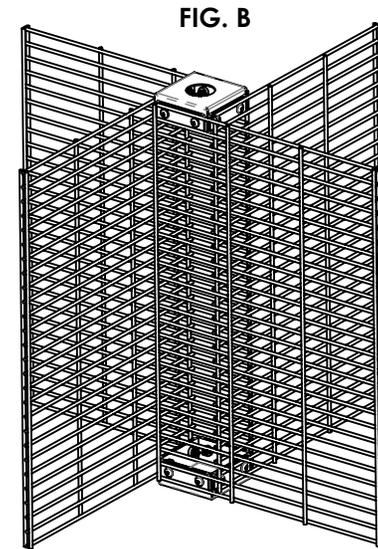
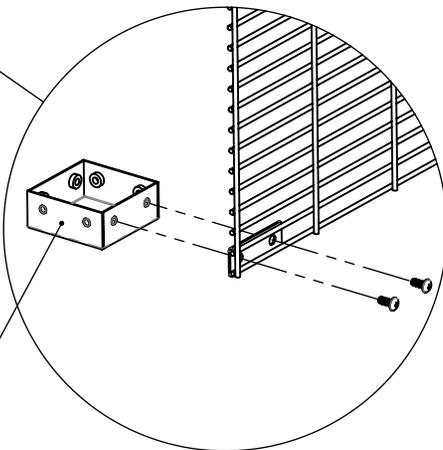


FIG. B

4X PLASTIC SIGN HOLDER

4X PLASTIC SIGN HOLDER

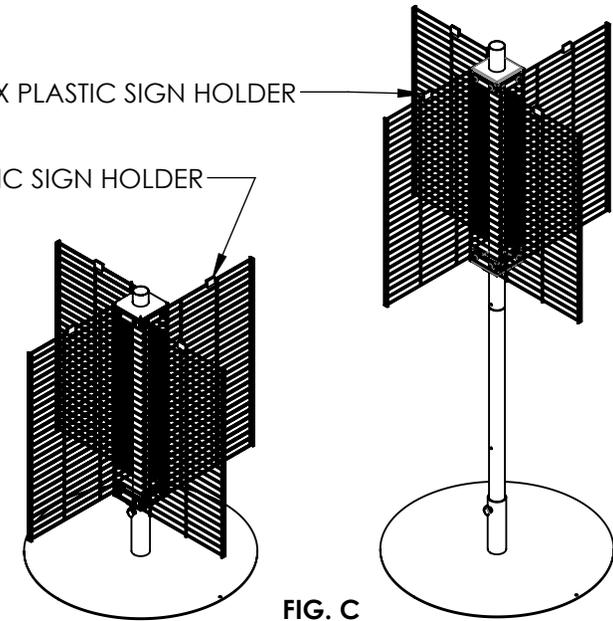


FIG. C

COUNTER SPINNER

FLOOR SPINNER