
DIESEL EMISSIONS SERVICE RETROFIT AND REPOWER SPECIALISTS

Portland | Redding | Oakland | Ontario



DES VM6510 KENWORTH CAB MOUNT

ALL INSTALLATION INSTRUCTIONS AND GUIDELINES MUST BE THOROUGHLY READ AND UNDERSTOOD BEFORE INSTALLING A DIESEL EMISSIONS SERVICE PRODUCT

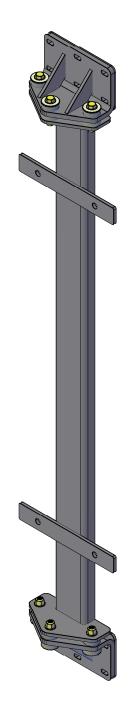

PRODUCT GUIDLINES

Diesel Emissions Service recommends its products be installed by a trained technician with proper tools and safety equipment. In addition all Diesel Emissions Service mounting brackets should be installed using good judgment and sound mechanical principles. Since all installations are unique, it is the sole responsibility of the installer to determine the best fit and function of the DPF mounting brackets.


PRODUCT SAFETY


Diesel Emissions Service products are designed for "ON-ROAD" applications only. Modifications to any Diesel Emissions Service product are not recommended and can compromise the bracket performance. Diesel Emissions Service claims no liability or responsibility for the improper application or installation of its products.


PRODUCT WARRANTY

Diesel Emissions Service warrants to the original purchaser of its products that such products will be free from defects in material and workmanship under normal use. Diesel Emissions Service's obligation under this warranty is solely and exclusively limited to repair and or replacement, at Diesel Emissions Service option, of the product (or components thereof) which Diesel Emissions Service's examination proves to its satisfaction to be defective. Diesel Emissions Service SHALL HAVE NO OBLIGATION FOR CONSEQUENTIAL DAMAGES TO PERSONAL OR REAL PROPERTY. OR FOR INJURY TO ANY PERSON.

This warranty does not apply to products which have been subject to improper use, accident, negligence, abuse or misuse.

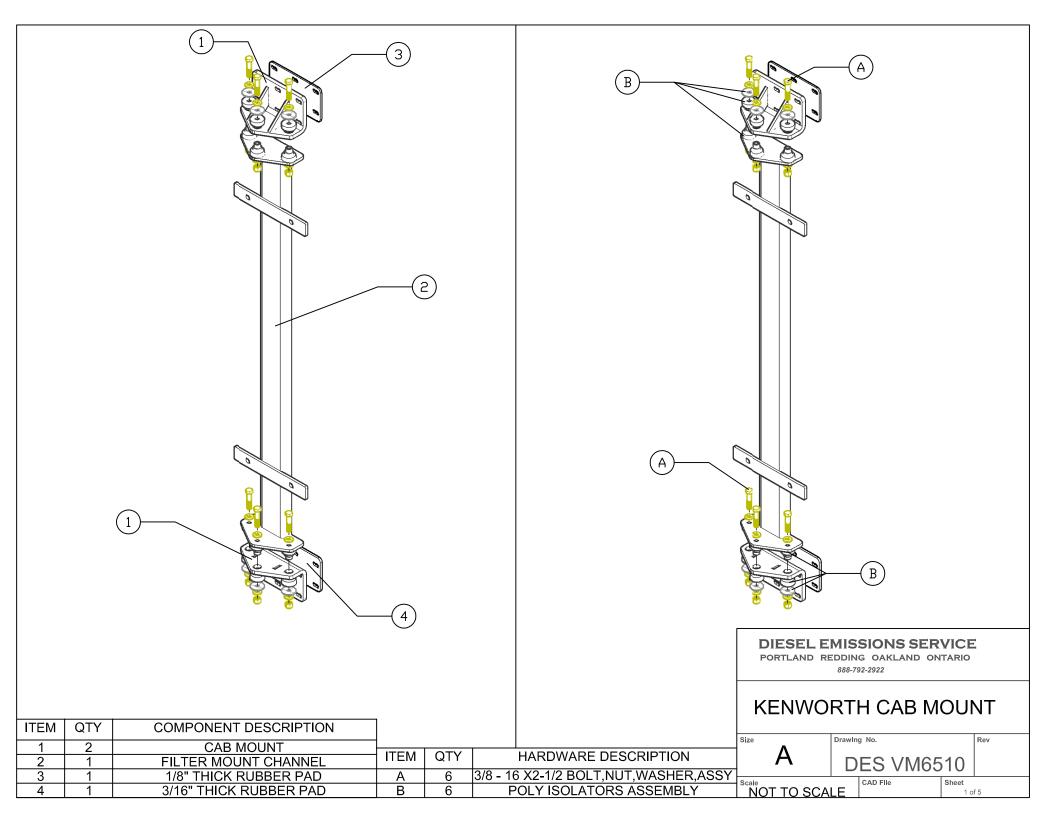

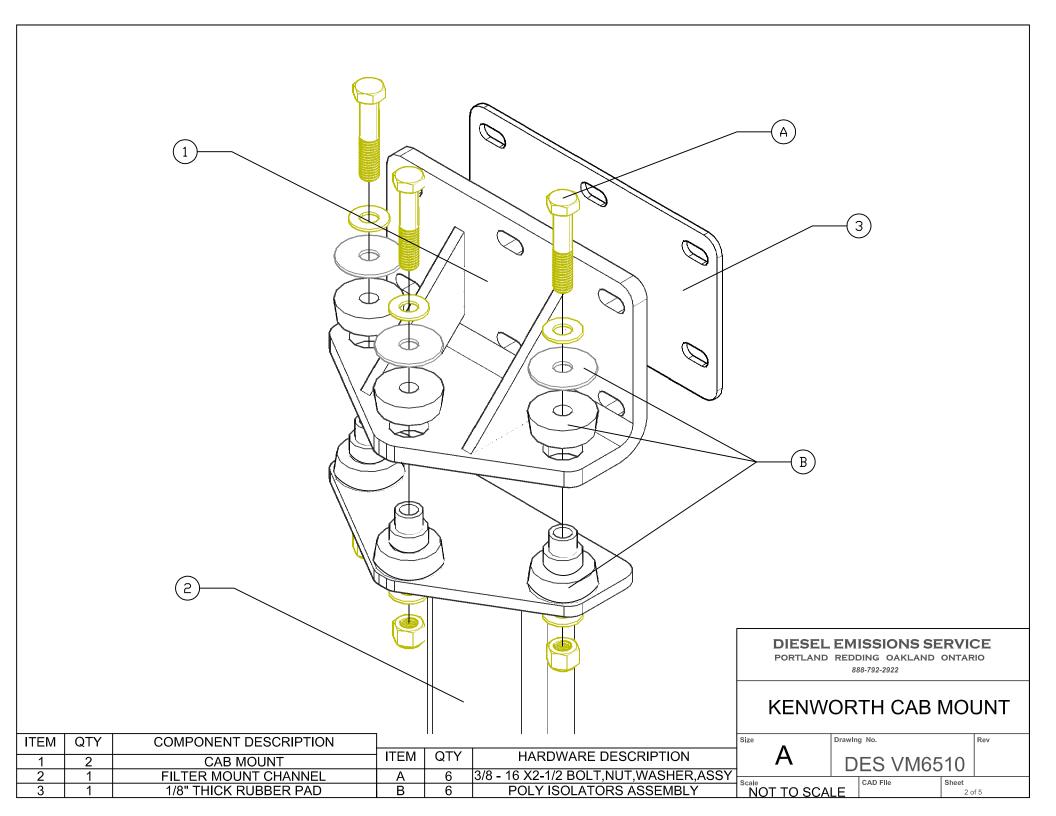

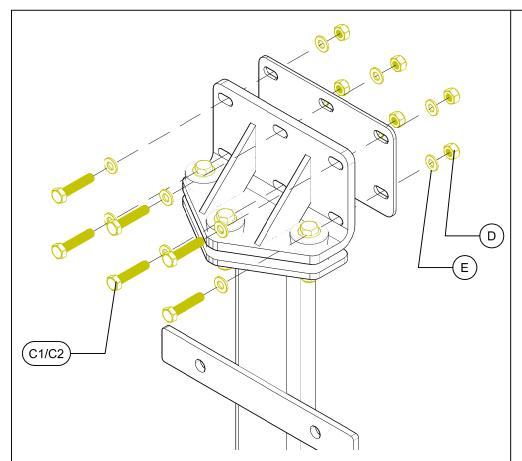




FASTEN NYLOCK NUT (D) IN ADDITION TO THE EXISTING NUTSERT WHEN POSSIBLE. IF UNABLE TO FASTEN NUT APPLY BLUE THREAD LOCKING COMPOUND TO BOLT THREADS PRIOR TO TIGHTENING.



TWO M8 HEX BOLT (C1/C2) LENGTH OPTIONS ARE PROVIDED IN HARDWARE KIT. USE BEST FIT OPTION AS NEEDED WHEN ENCOUNTERING INTERFERENCE.

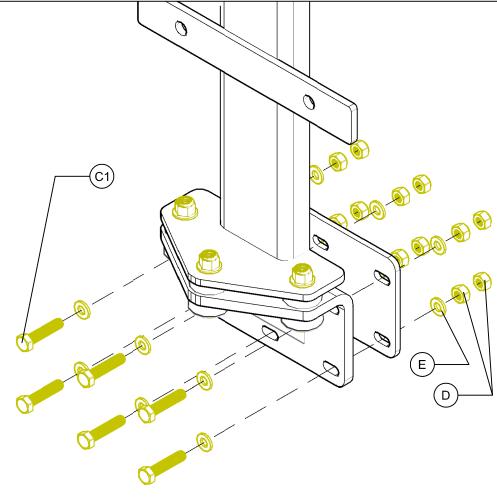




USE TWO NYLOCK NUTS (D) TO FASTEN LOWER BRACKET ASSEMBLY AS SHOWN. USE A BACKING PLATE ON TRUCK CAB WHEN POSSIBLE.

DIESEL EMISSIONS SERVICE


PORTLAND REDDING OAKLAND ONTARIO 888-792-2922

KENWORTH CAB MOUNT

ITEM	QTY	HARDWARE DESCRIPTION						
C1	12	M8-1.25 X 1-1/2 HEX BOLT	Size	Size		g No.	Rev	
C2	6	M8-1.25 X 2 HEX BOLT	_ <i>/</i>	4	DES VM6510			
D	18	M8 - 1.25 NYLOCK NUT	Scale			CAD File	Sheet	
Е	24	M8 FLAT WASHER	NOT	TO SCA	LE	SAD THE	3 0	f 5

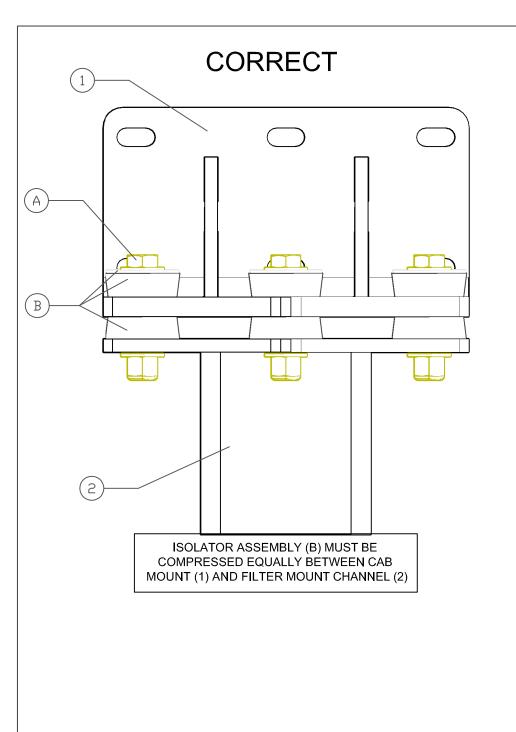

INCORRECT

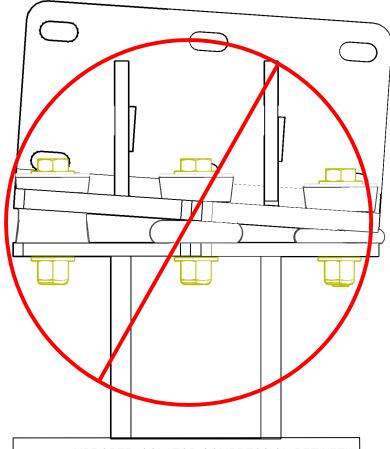

IMPROPER ISOLATOR COMPRESSION BETWEEN CAB MOUNT (1) AND FILTER MOUNT CHANNEL (2) CAN RESULT IN BRACKET FAILURE AND OR DAMAGE TO FILTER

DIESEL EMISSIONS SERVICE

PORTLAND REDDING OAKLAND ONTARIO 888-792-2922


Size


Drawing No. **DES VM6510**

Scale NOT TO SCALE

4 of 5

ITEM	QTY	COMPONENT DESCRIPTION	ITEM	QTY	HARDWARE DESCRIPTION
1	2	CAB MOUNT	Α	6	3/8 - 16 X2-1/2 BOLT, NUT, WASHER, ASSY
2	1	FILTER MOUNT CHANNEL	В	6	POLY ISOLATORS ASSEMBLY

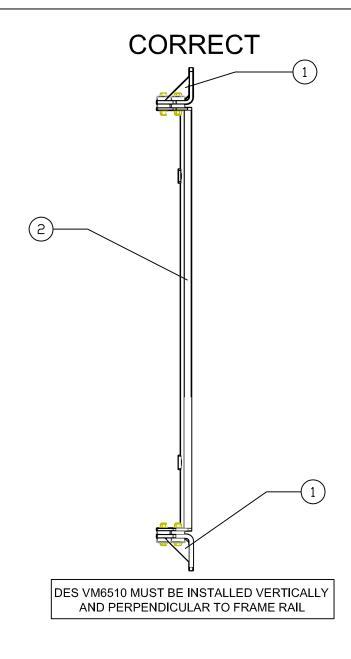

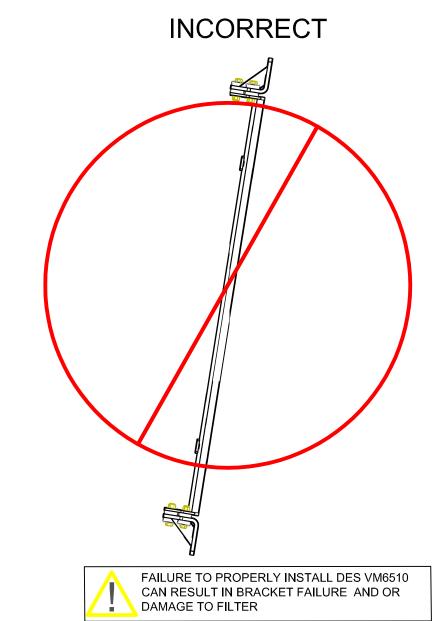

DIESEL EMISSIONS SERVICE

PORTLAND REDDING OAKLAND ONTARIO 888-792-2922

Drawing No. **DES VM6510**

5 of 5

Scale NOT TO SCALE

CAB MOUNT FILTER MOUNT CHANNEL

COMPONENT DESCRIPTION

ITEM

QTY