

## EL-2 ASSEMBLY INSTRUCTIONS

### TOOLS REQUIRED FOR ASSEMBLY

1/2" Socket wrench & 1/2" Crescent Wrench.

### BEFORE ASSEMBLING THE WORKBENCH


Read through the assembly instructions to familiarize yourself with the order in which the parts are assembled.

We suggest that you clear & vacuum the area where the rack is to be assembled.

### HARDWARE

All assembly hardware is provided. WALL MOUNT HARDWARE NOT PROVIDED.


## STEP 1

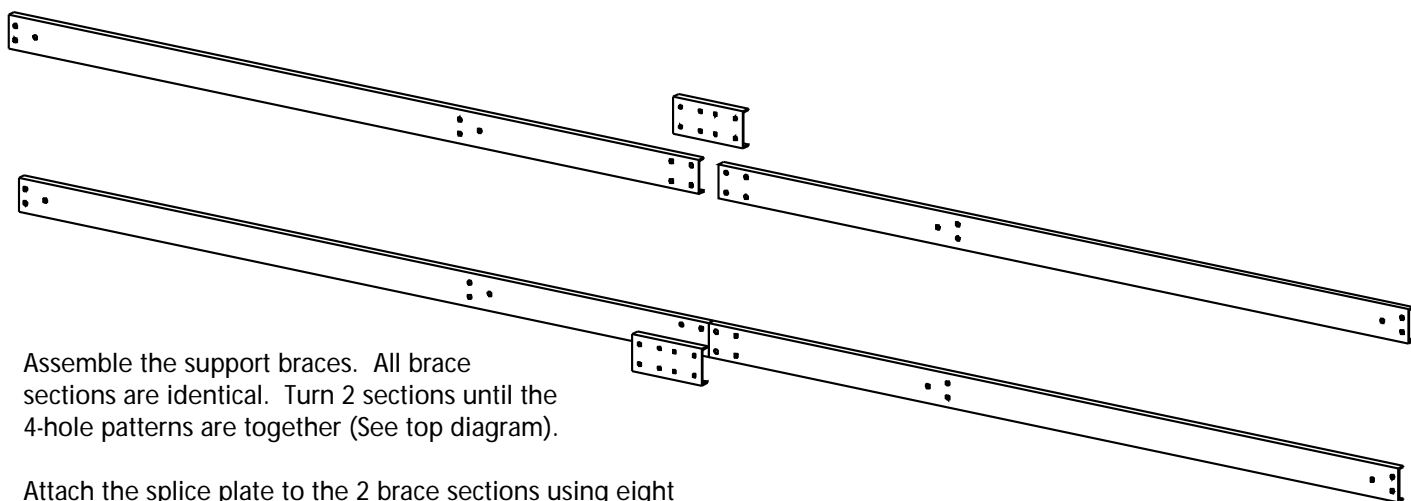

Assemble the support braces. All brace sections are identical. Turn 2 sections until the 4-hole patterns are together (See top diagram).

Attach the splice plate to the 2 brace sections using eight 5/16 x 3/4" bolts. Bolts will run through the splice plate into the braces. Secure with a lock nut.

## STEP 2

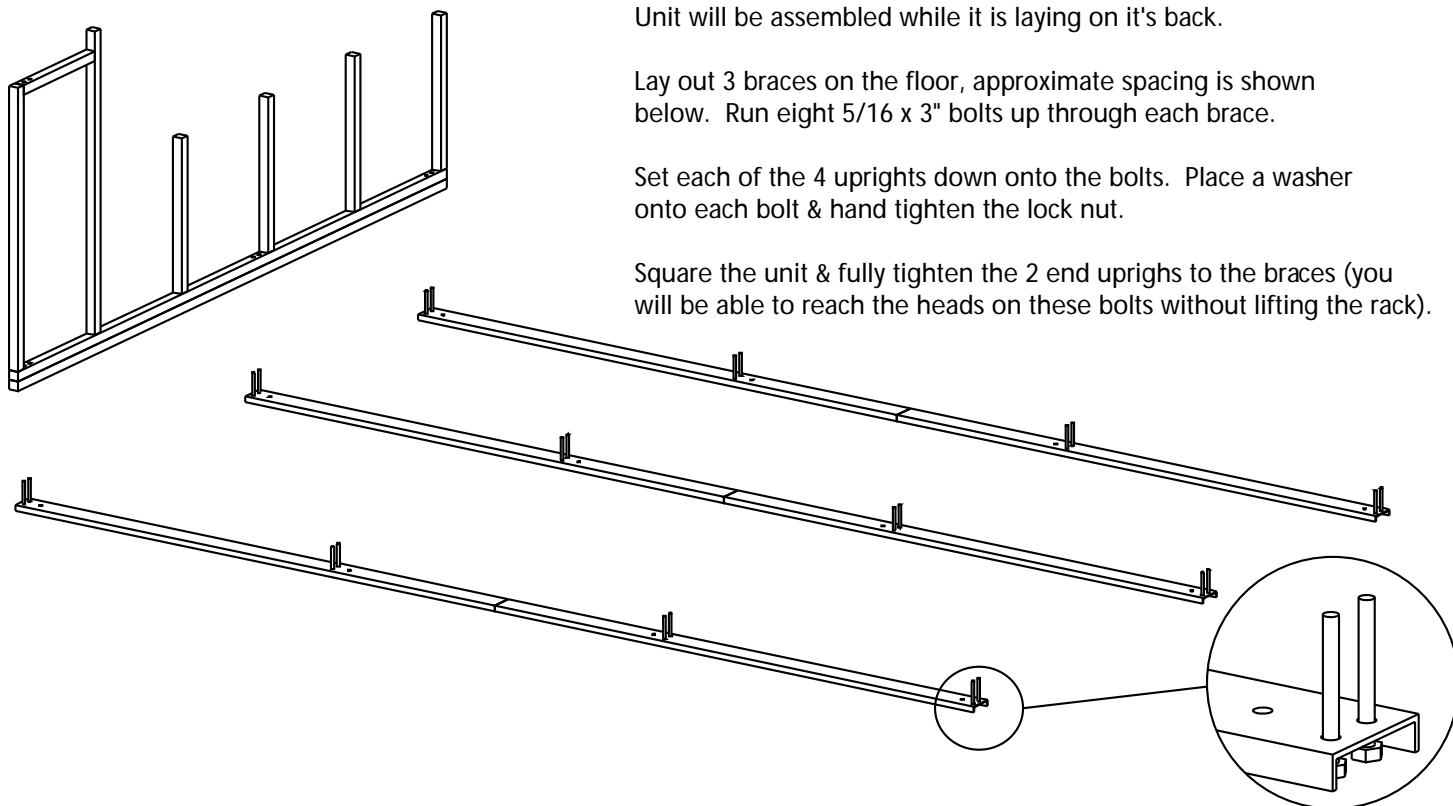


Unit will be assembled while it is laying on it's back.

Lay out 3 braces on the floor, approximate spacing is shown below. Run eight 5/16 x 3/4" bolts up through each brace.


Set each of the 4 uprights down onto the bolts. Place a washer onto each bolt & hand tighten the lock nut.

Square the unit & fully tighten the 2 end uprights to the braces (you will be able to reach the heads on these bolts without lifting the rack).

### STEP 3

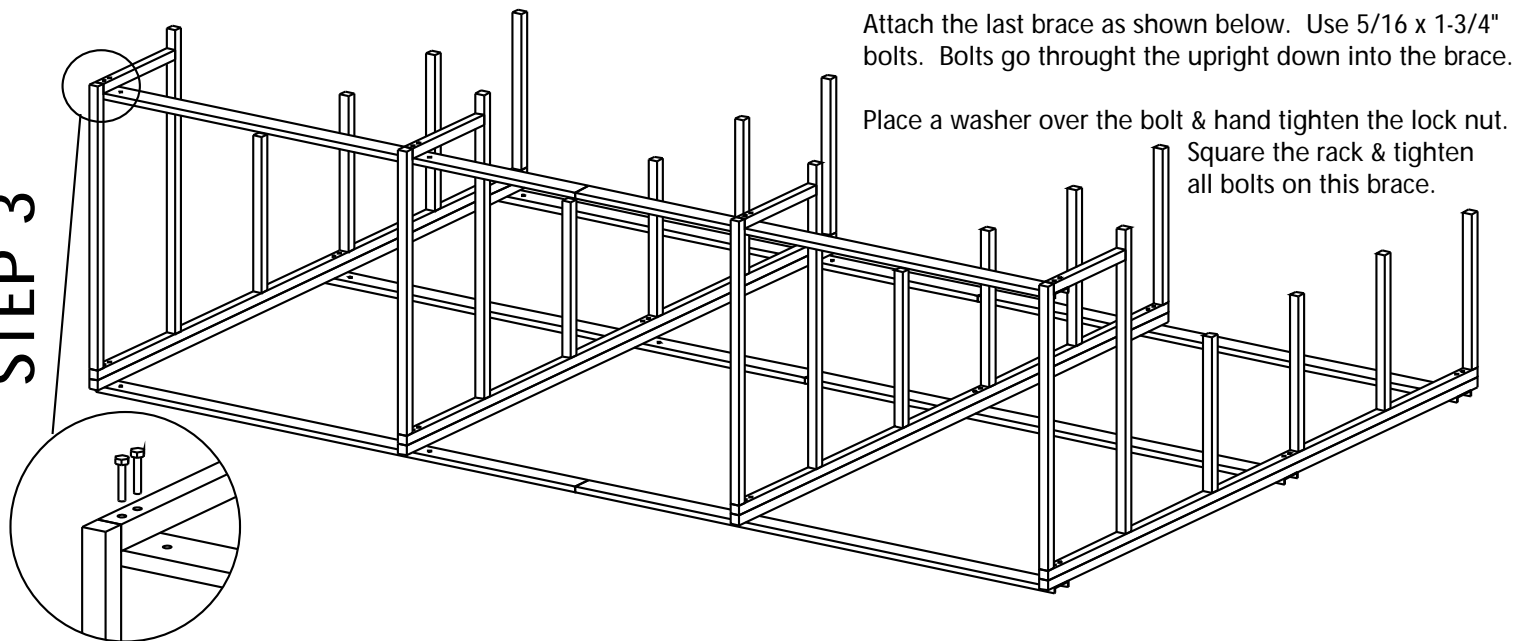

### STEP 4

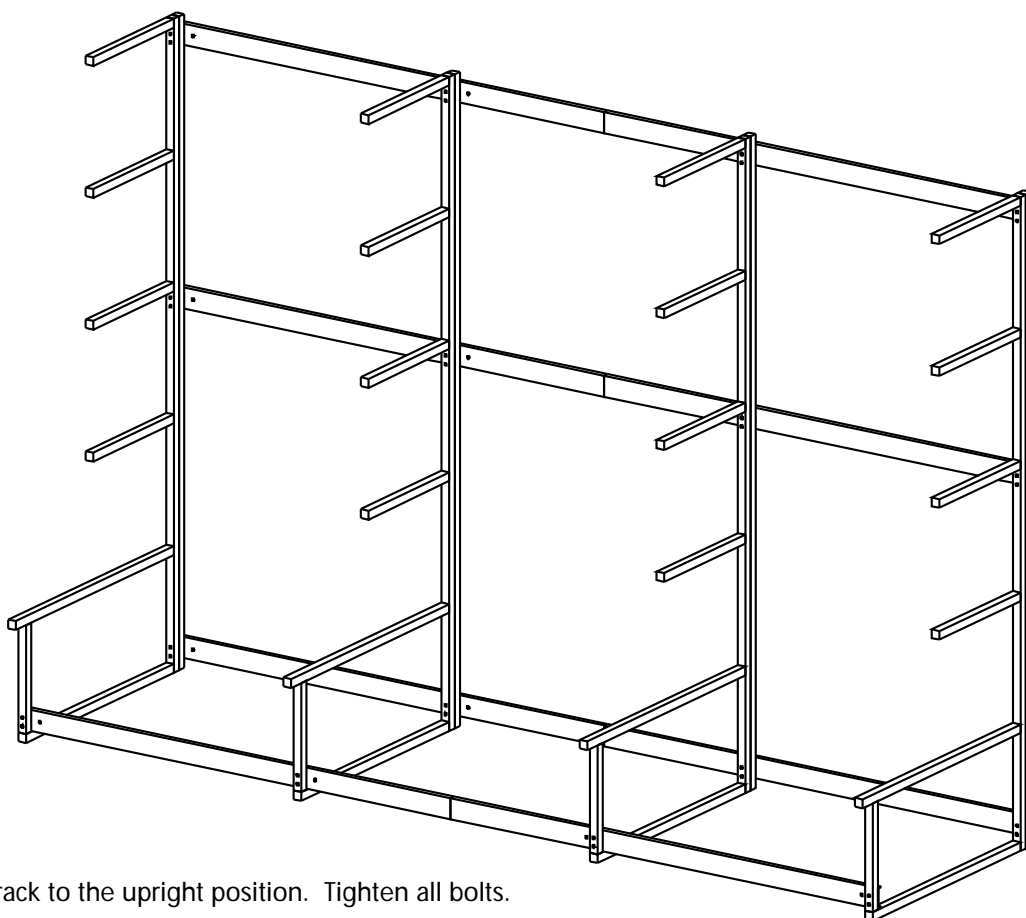

Lift the rack to the upright position. Tighten all bolts.

Move against wall & mount BEFORE loading the rack.  
Wall mounting hardware not provided.

**WARNING!**

**THIS RACK MUST  
BE WALL  
ANCHORED**